

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [RERBO](#) /
- › [RERBO MS35 WiFi Camera Sunglasses: User Manual](#)

## RERBO MS35

# RERBO MS35 WiFi Camera Sunglasses: User Manual

Model: MS35

## PRODUCT OVERVIEW

---

The RERBO MS35 WiFi Camera Sunglasses are designed for capturing high-quality video and photos from a first-person perspective. Featuring 4K video recording at 30fps and 1920\*1080 pixel resolution, along with 4696\*2644 pixel JPG photos, these sunglasses offer a wide field of view for recording various activities. They include UV 400 polarized lenses for eye protection and can connect to your smartphone via WiFi for easy operation, playback, download, and sharing of media.

These lightweight and comfortable camera glasses are ideal for mountaineering, camping, driving, hiking, skateboarding, hunting, and recording in educational or meeting environments, allowing you to capture every moment.



Figure 1: RERBO MS35 WiFi Camera Sunglasses

## PACKAGE CONTENTS

Ensure all items are present in the package:

- Camera Glasses
- Eyeglass Case
- 32GB SD Card
- USB Cable

# Packaging Accessories



Figure 2: Package contents including the camera glasses, case, 32GB SD card, and USB cable.

## SETUP

### 1. Inserting the Micro SD Card

Before first use, insert the provided 32GB Micro SD card into the TF Card Slot located on the arm of the sunglasses. Ensure the card is inserted correctly until it clicks into place. Improper insertion can lead to the card falling inside the frame.

## Key operation

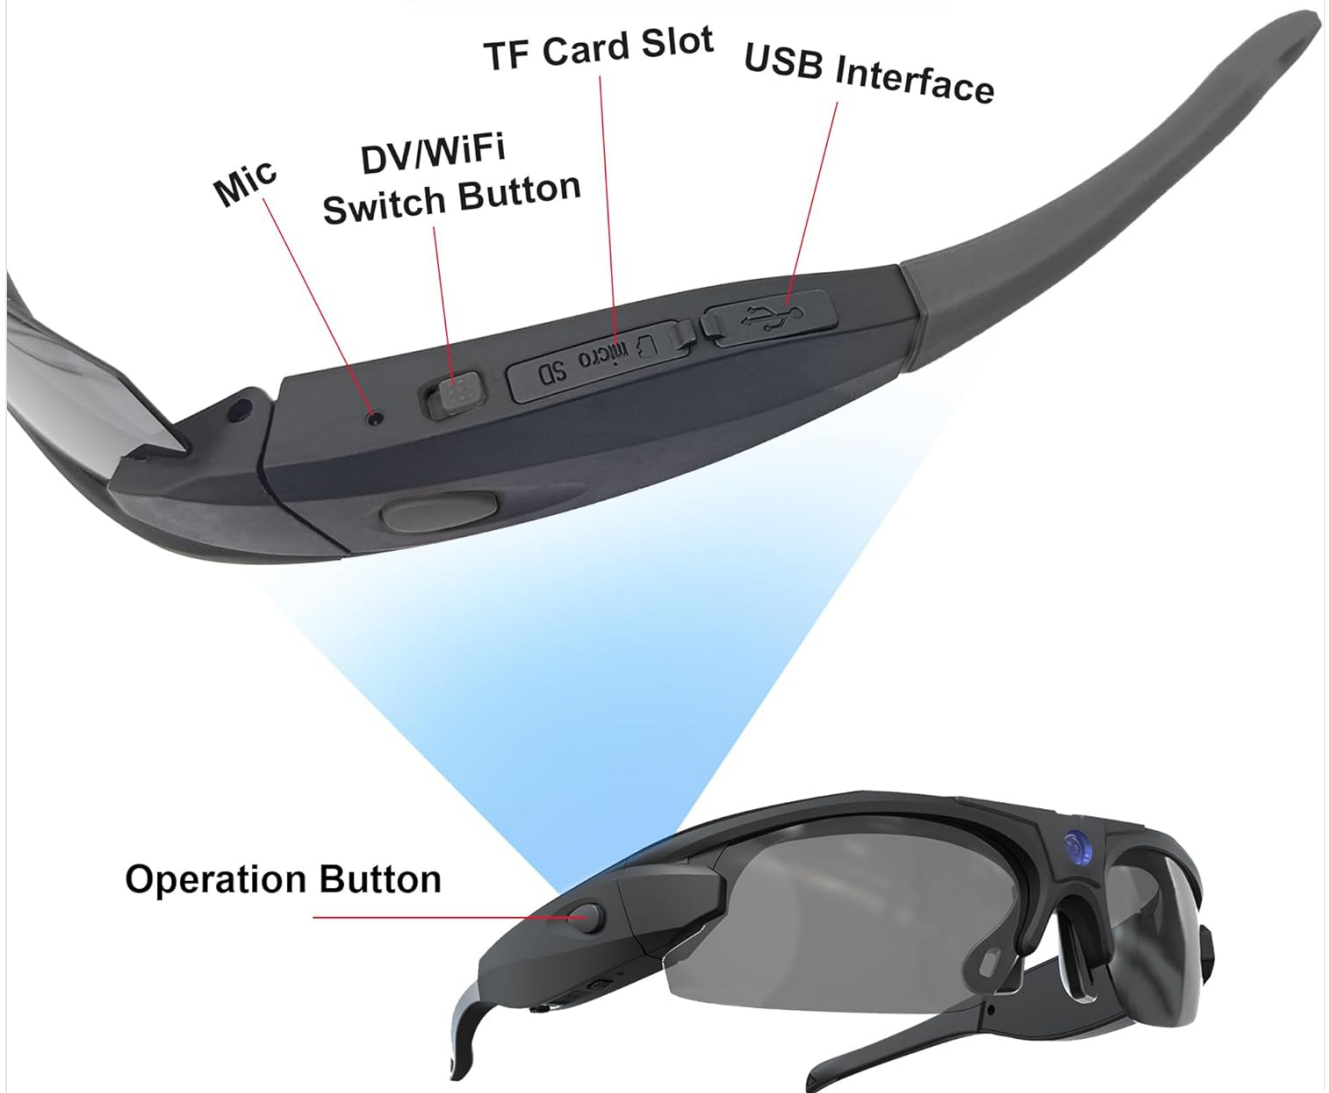


Figure 3: Diagram showing the TF Card Slot and USB Interface on the RERBO MS35 sunglasses.


# INCLUDE 32G MEMORY CARD



USB Interface



TF Card Slot

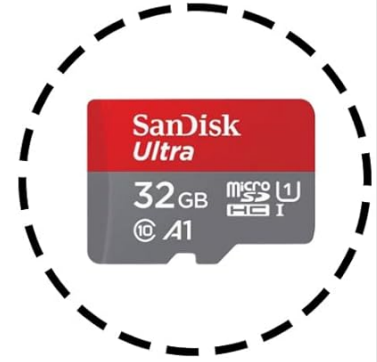

32G Memory Card



Figure 4: Close-up of the TF Card Slot and the included 32GB Micro SD card.

Video 1: Demonstrating how to insert the Micro SD card into the RERBO MS35 sunglasses.

## 2. Charging the Device

Connect the sunglasses to a power source using the provided USB cable. The charging indicator light will show the charging status. Ensure the device is fully charged before initial use for optimal battery performance.



Figure 5: The RERBO MS35 sunglasses connected to a USB cable for charging.

## OPERATING INSTRUCTIONS

### 1. Power On/Off

- **Power On:** Long press the power button for approximately 3 seconds. The blue indicator light will turn on, indicating the device is in standby mode.
- **Power Off:** Long press the power button again for 3 seconds. The indicator lights will turn off.

### 2. Recording Mode (DV Mode)

After powering on, toggle the DV/WiFi Switch Button to the DV (recording) mode. The blue light will flash, indicating it's ready to record.

- **Start Video Recording:** Short press the Operation Button once. The blue light will flash slowly during recording.
- **Stop Video Recording:** Short press the Operation Button once again. The blue light will become solid, indicating recording has stopped and the file is saved.
- **Take a Photo:** Double-tap the Operation Button quickly. The blue light will flash once, indicating a photo has been taken and saved.

Video 2: Demonstrating how to switch to recording mode, start/stop video recording, and take photos.

### 3. WiFi Mode & App Connection

To use the mobile app, toggle the DV/WiFi Switch Button to the WiFi mode. The green indicator light will flash, indicating the device is in WiFi mode.

1. **Download the App:** Search for and install the "Vidure" or "OKAY/OKJ" app from your smartphone's app store (compatible with Android and iPhone).
2. **Connect to WiFi:** On your phone, go to WiFi settings and connect to the network named "MS35-" followed by a series of characters. Enter the default password (usually 12345678 or similar, refer to the small printed

manual for exact default).

3. **Open the App:** Launch the installed app. It should automatically detect and connect to your camera sunglasses.
4. **Remote Control & Media Management:** Within the app, you can remotely control recording, take photos, view live footage, play back recorded media, download files to your phone, and share them directly to social media.



Figure 6: RERBO MS35 WiFi Camera Sunglasses connected to a mobile app for remote control and media management.

Video 3: Guide on connecting the RERBO MS35 to a smartphone via WiFi and using the companion app.

## MAINTENANCE

- **Cleaning Lenses:** Use the provided microfiber cleaning cloth to gently wipe the lenses. Avoid using abrasive materials or harsh chemicals that could scratch or damage the polarized coating.
- **Storage:** When not in use, store the sunglasses in their protective eyeglass case to prevent scratches and damage.
- **Battery Care:** To prolong battery life, avoid fully discharging the device frequently. Charge it regularly, even if

not in constant use.

- **Environmental Conditions:** Avoid exposing the sunglasses to extreme temperatures, direct sunlight for prolonged periods, or excessive moisture.

## Record every **wonderful** moment in your life!



Figure 7: The RERBO MS35 sunglasses feature UV400 polarized lenses for eye protection.

## TROUBLESHOOTING

- **SD Card Not Recognized/Falling Out:** Ensure the Micro SD card is inserted correctly and fully into the TF Card Slot until it clicks. If the card rattles inside, it may have been inserted improperly and fallen into the frame. Carefully try to retrieve it or contact customer support.
- **WiFi Connection Issues:** Double-check that the sunglasses are in WiFi mode (green light flashing). Ensure your phone's WiFi is enabled and connected to the correct MS35 network. Restart both the sunglasses and your phone if issues persist.
- **Short Battery Life:** Ensure the device is fully charged before use. Battery life can vary based on usage (e.g., continuous recording, WiFi streaming). If battery life is significantly shorter than expected, contact customer support.
- **Video/Photo Quality Issues:** Ensure lenses are clean. Record in well-lit environments for optimal results.

## SPECIFICATIONS

Feature	Detail
Brand	RERBO
Model Number	MS35
Weight	1.13 ounces
Dimensions	7.05 x 3.5 x 2.75 inches

Battery Type	1 Lithium Polymer battery (included)
Color	35b
Features	Lightweight, WiFi connect
ASIN	B0C741K84K
Date First Available	June 6, 2023

## WARRANTY AND CUSTOMER SUPPORT

---

For warranty information, technical support, or any inquiries regarding your RERBO MS35 WiFi Camera Sunglasses, please refer to the contact information provided in the original product packaging or visit the official RERBO store on Amazon.

**RERBO Store:** <https://www.amazon.com/stores/RERBO/page/1117B4A8-FA69-4F5C-92D4-B4CE70736581>