

VEVOR VEVOR 12-IN-1 Air Fryer Toaster Oven

VEVOR 12-IN-1 Air Fryer Toaster Oven User Manual

Model: VEVOR 12-IN-1 Air Fryer Toaster Oven

Brand: VEVOR

1. INTRODUCTION

Thank you for choosing the VEVOR 12-IN-1 Air Fryer Toaster Oven. This versatile appliance combines the functions of a toaster oven, bread maker, and air fryer, offering 12 distinct cooking modes to simplify your culinary tasks. Designed for efficiency and convenience, this oven features powerful heating, precise temperature control, and a generous capacity suitable for both daily cooking and family gatherings. Please read this manual thoroughly before operation to ensure safe and optimal performance.

2. PRODUCT OVERVIEW

The VEVOR 12-IN-1 Air Fryer Toaster Oven is engineered for diverse cooking needs, featuring a robust 1700W heating system and a user-friendly LED touch screen interface.

2.1 Key Features

- **12-in-1 Functionality:** Combines air frying, toasting, baking, grilling, dehydrating, pizza, veggies, defrosting, fries, wings, and keep warm modes.
- **Efficient Heating:** Equipped with 1700W power, 5 heating elements, and a high-speed fan for 360° hot air circulation, ensuring fast and even cooking.
- **Convenient Temperature Control:** LED touch screen allows temperature adjustment from 95-450°F in 25°F increments. Features a 12-hour timer with adjustable intervals.
- **Large 25L Capacity:** Capable of baking up to 12 slices of bread, 21 chicken wings, two 12-inch pizzas, or a 5-pound chicken, ideal for 4-5 people.
- **Durable Construction:** Features a galvanized plate liner for easy cleaning and maintenance.

2.2 Product Components



Figure 2.2.1: Front view of the VEVOR 12-IN-1 Air Fryer Toaster Oven, showcasing the control panel and glass door.



Toast



Air Fry



Bake



Convection



Grill



Dehydrate



Pizza



Veggies



Defrost



Fries



Wings



Keep Warm

12 FUNCTION MODES

Cook various cuisines easily

Figure 2.2.2: Visual representation of the 12 distinct cooking functions available on the appliance, including Toast, Air Fry, Bake, Convection, Grill, Dehydrate, Pizza, Veggies, Defrost, Fries, Wings, and Keep Warm.

1700W POWER

360° Hot air circulation

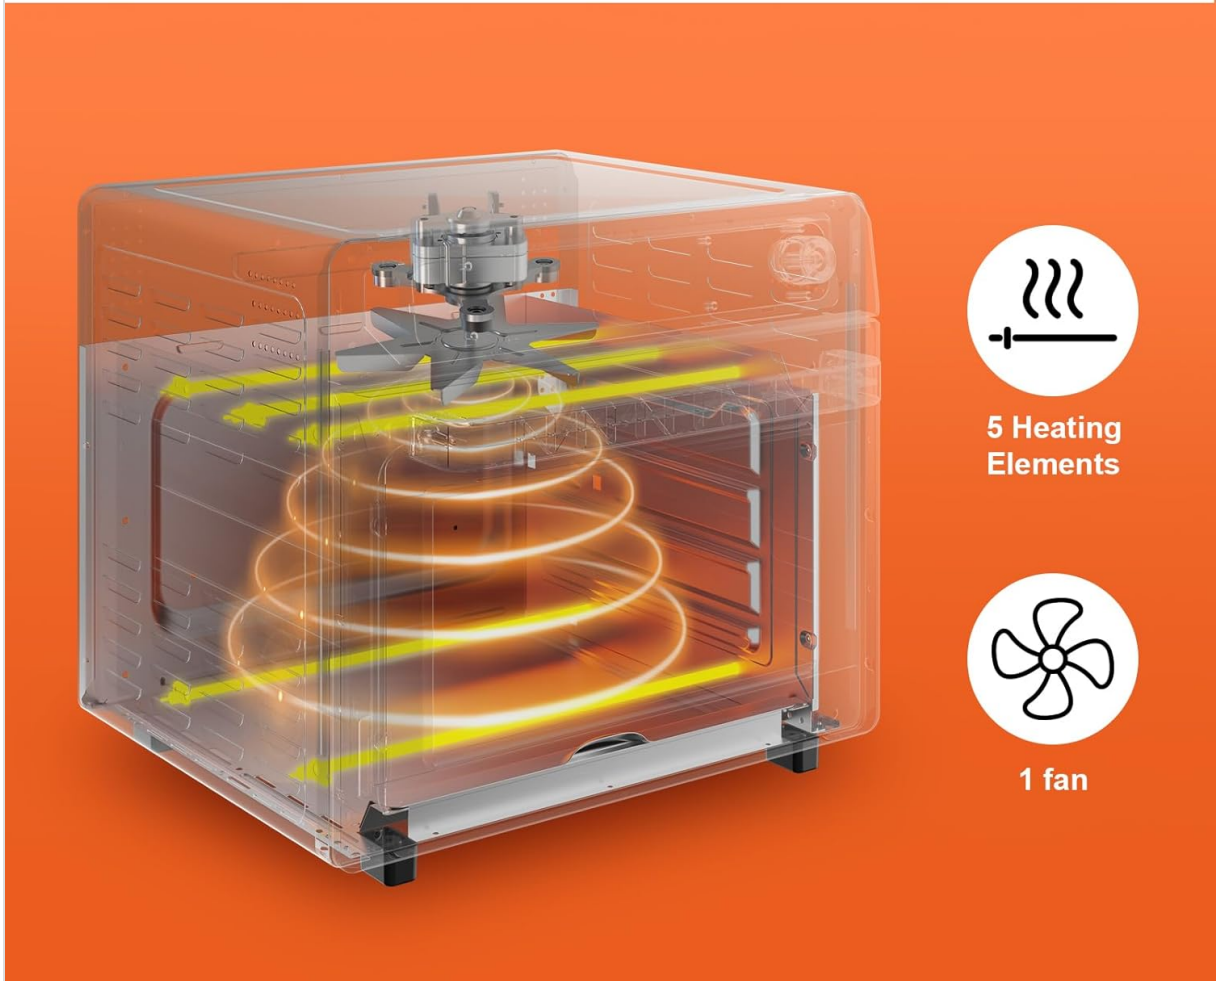


Figure 2.2.3: Illustration of the internal heating system, highlighting the 1700W power, 5 heating elements, and the fan for 360° hot air circulation.

3. SETUP

3.1 Unpacking

1. Carefully remove the appliance and all accessories from the packaging.
2. Inspect the oven and accessories for any signs of damage. Do not use if damaged.
3. Remove all packaging materials, stickers, and labels from the oven.

3.2 Placement

- Place the oven on a stable, flat, heat-resistant surface.
- Ensure there is adequate clearance (at least 4 inches) on all sides and above the oven for proper ventilation.
- Do not place the oven near flammable materials or heat sources.

3.3 Initial Cleaning

- Before first use, wipe the interior and exterior of the oven with a damp cloth and mild detergent.

- Wash all accessories (baking rack, tray, basket) with warm, soapy water. Rinse thoroughly and dry completely.
- It is recommended to run the oven empty for about 15 minutes at 400°F (200°C) to burn off any manufacturing residues. A slight odor or smoke may be present during this initial run; ensure good ventilation.

4. OPERATING INSTRUCTIONS

The VEVOR Air Fryer Toaster Oven features an intuitive LED touch screen for easy operation.

4.1 Control Panel Overview



Figure 4.1.1: Close-up of the LED touch screen, showing temperature and timer controls, and function selection buttons.

- **Function Buttons:** Select from 12 preset cooking modes (e.g., Air Fry, Toast, Bake, Grill).
- **Temperature Control:** Adjust temperature from 95°F to 450°F in 25°F increments.
- **Timer Control:** Set cooking time up to 12 hours. For times under 30 minutes, adjust in 1-minute increments. For times over 30 minutes, adjust in 5-minute increments.
- **Start/Cancel Button:** Initiates or stops the cooking process.

4.2 Basic Operation Steps

1. **Prepare Food:** Place food on the appropriate accessory (baking rack, tray, or frying basket) and insert into the oven.
2. **Power On:** Plug the oven into a standard AC120V power outlet. The display will illuminate.
3. **Select Function:** Press the desired function button on the control panel (e.g., "Air Fry"). The default temperature and time for that function will appear.
4. **Adjust Settings:** Use the temperature and timer controls to adjust the settings as needed for your recipe.
5. **Start Cooking:** Press the "Start" button to begin cooking. The oven will preheat if necessary, then start the cooking cycle.
6. **Monitor Progress:** The internal light can be turned on to check food progress without opening the door.
7. **End of Cooking:** The oven will beep when the cooking cycle is complete. Carefully remove food using heat-resistant gloves.

4.3 Capacity Guidelines

 <p>12 Slices of Bread</p>	 <p>5 LB Chicken</p>
 <p>12 inch Pizza</p>	 <p>21 Chicken Wings</p>

25L LARGE CAPACITY
Meet 4-5 people for daily use

Figure 4.3.1: Examples of food quantities that can be accommodated by the 25L capacity, including 12 slices of bread, a 5 lb chicken, a 12-inch pizza, and 21 chicken wings.

The 25L capacity is designed to handle various meal sizes:

- Up to 12 slices of toast

- One 5-pound whole chicken
- Two 12-inch pizzas
- Up to 21 chicken wings

5. MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and optimal performance of your VEVOR Air Fryer Toaster Oven.

5.1 General Cleaning

1. Always unplug the oven and allow it to cool completely before cleaning.
2. Wipe the exterior with a damp cloth. Do not use abrasive cleaners or scouring pads.
3. For the interior, use a damp cloth and mild, non-abrasive detergent. The galvanized plate liner is designed for easy cleaning.



Figure 5.1.1: Demonstrates the ease of cleaning the non-stick galvanized plate liner inside the oven.

5.2 Accessory Cleaning

- All removable accessories (baking rack, baking tray, crumb tray, frying basket) can be washed in warm, soapy water.

- For stubborn food residue, soak the accessories before cleaning.
- Ensure all accessories are completely dry before storing or reinserting into the oven.

5.3 Crumb Tray

- The galvanized sheet crumb tray should be emptied and cleaned regularly to prevent grease buildup and potential fire hazards.
- Slide out the crumb tray from the bottom front of the oven for easy access.

6. TROUBLESHOOTING

This section addresses common issues you might encounter with your VEVOR Air Fryer Toaster Oven.

Problem	Possible Cause	Solution
Oven does not turn on.	Not plugged in; power outlet issue; circuit breaker tripped.	Ensure the power cord is securely plugged into a working outlet. Check your household circuit breaker.
Food not cooking evenly.	Overcrowding; incorrect temperature/time; improper rack position.	Do not overcrowd the oven. Adjust temperature and time as per recipe. Use the recommended rack position for the selected function.
Excessive smoke during cooking.	Food residue on heating elements; high-fat food; crumb tray full.	Clean heating elements and interior thoroughly. Use a drip tray for high-fat foods. Empty and clean the crumb tray.
Fan runs continuously after cooking.	Cooling fan operation; unit not fully powered off.	The fan may continue to run for a short period to cool down the oven. If it runs indefinitely, ensure the unit is properly turned off or unplugged if necessary.
Display shows error code.	Internal malfunction.	Unplug the oven for 5 minutes, then plug it back in. If the error persists, contact VEVOR customer support.

7. SPECIFICATIONS



Item Model Number: TE204-K

Power: 1700W

Capacity: 25L

Material: Stainless Steel

Net Weight: 19.8lbs / 9 kg

Voltage: AC120V

Product Size: 15.9 x 16.1 x 14.6 inches / 405 x 410 x 370 mm

Figure 7.1.1: Detailed product dimensions and key specifications.

Specification	Value
Item Model Number	VEVOR 12-IN-1 Air Fryer Toaster Oven
Product Dimensions (D x W x H)	13.8"D x 14"W x 13.8"H (350mm x 355mm x 350mm approx.)
Overall Product Dimensions	15.9 x 16.1 x 14.6 inches (405 x 410 x 370 mm)
Net Weight	22.05 Pounds (10 kg)
Capacity	25 Liters
Power	1700W
Voltage	AC120V
Material	Stainless Steel
Control Type	Touch Control
Special Feature	Automatic Shut-Off

8. WHAT'S IN THE BOX

Your VEVOR 12-IN-1 Air Fryer Toaster Oven package includes the following items:

- 1 x Electroplated Baking Rack
- 1 x Aluminum Baking Tray
- 1 x Galvanized Sheet Crumb Tray
- 1 x Electroplated Frying Basket
- 1 x Pair of Heat-resistant Gloves
- 1 x User Manual (this document)

9. WARRANTY AND SUPPORT

For warranty information, product registration, or technical support, please refer to the official VEVOR website or contact VEVOR customer service directly. Keep your purchase receipt as proof of purchase for any warranty claims.

Official VEVOR Store: [Visit VEVOR Store on Amazon](#)

10. ADDITIONAL MEDIA

No official seller videos with specific filenames and creator types were provided in the product data for embedding. Please refer to the product page for any available video content.