

Grundig TB 7285 CDX

Grundig TB 7285 CDX Delisia Novus Jug Blender User Manual

Model: TB 7285 CDX

1. IMPORTANT SAFETY INSTRUCTIONS

Please read these instructions carefully before using your Grundig TB 7285 CDX Delisia Novus Jug Blender. Keep this manual for future reference.

- Always unplug the appliance from the power supply before assembly, disassembly, or cleaning.
- Do not immerse the motor unit in water or any other liquid. Clean with a damp cloth only.
- Keep hands and utensils out of the blender jug while blending to prevent injury. Use a scraper only when the blender is not running.
- Ensure the lid is securely in place before operating the blender.
- Do not blend hot liquids in large quantities as they may overflow and cause scalding. Fill the jug to a maximum of 1 liter for hot liquids.
- Never operate the blender without ingredients in the jug.
- Do not use the appliance for purposes other than its intended use.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Avoid contact with moving parts.
- Do not use attachments not recommended or sold by the manufacturer.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always operate the blender on a dry, stable, and level surface.
- Do not use the appliance if the power cord, plug, or other parts are damaged. Contact authorized service personnel.

2. PRODUCT OVERVIEW

The Grundig TB 7285 CDX Delisia Novus Jug Blender is designed for efficient blending of various ingredients. It features

a powerful motor, a durable glass jug, and stainless steel blades.

Components:

- Motor Unit (Base)
- Glass Jug (1.5 Liter Capacity)
- Stainless Steel Blade Assembly
- Lid with Filler Cap



Image 1: The Grundig TB 7285 CDX Delisia Novus Jug Blender fully assembled, showing the motor base, glass jug, and lid.





Image 2: The main components of the blender: the motor unit, the glass jug with its lid, and the detachable stainless steel blade assembly.



Image 3: A top-down view showing the stainless steel blade design inside the glass jug, suitable for various blending tasks including ice crushing.

3. SETUP AND ASSEMBLY

Before first use, wash all parts that will come into contact with food (jug, lid, blade assembly) in warm soapy water, then rinse thoroughly and dry.

1. **Attach the Blade Assembly:** Turn the glass jug upside down. Place the stainless steel blade assembly onto the bottom opening of the jug and twist clockwise until it is securely locked in place. Ensure the sealing ring is correctly positioned to prevent leaks.





Image 4: Detailed view of the detachable stainless steel blade assembly, ready for attachment to the jug.

2. **Place Jug on Motor Unit:** Turn the assembled jug right side up. Carefully place the jug onto the motor unit. Align the jug with the motor unit's base and rotate it slightly until it locks into position. The blender will not operate if the jug is not correctly seated.
3. **Secure the Lid:** Place the lid onto the glass jug and press down firmly to ensure it is securely closed. The filler cap can be removed to add ingredients during blending.
4. **Connect to Power:** Plug the power cord into a suitable electrical outlet.

4. OPERATING INSTRUCTIONS

Your Grundig TB 7285 CDX blender features 6 speed settings and a pulse function for versatile blending.

General Blending:

1. **Prepare Ingredients:** Cut solid ingredients into small pieces (approximately 2-3 cm). Add liquids first, then solid ingredients. Do not exceed the maximum fill line indicated on the jug.
2. **Select Speed:** Turn the control dial to the desired speed setting from 1 to 6. Start with a lower speed for larger or harder ingredients and gradually increase as needed.

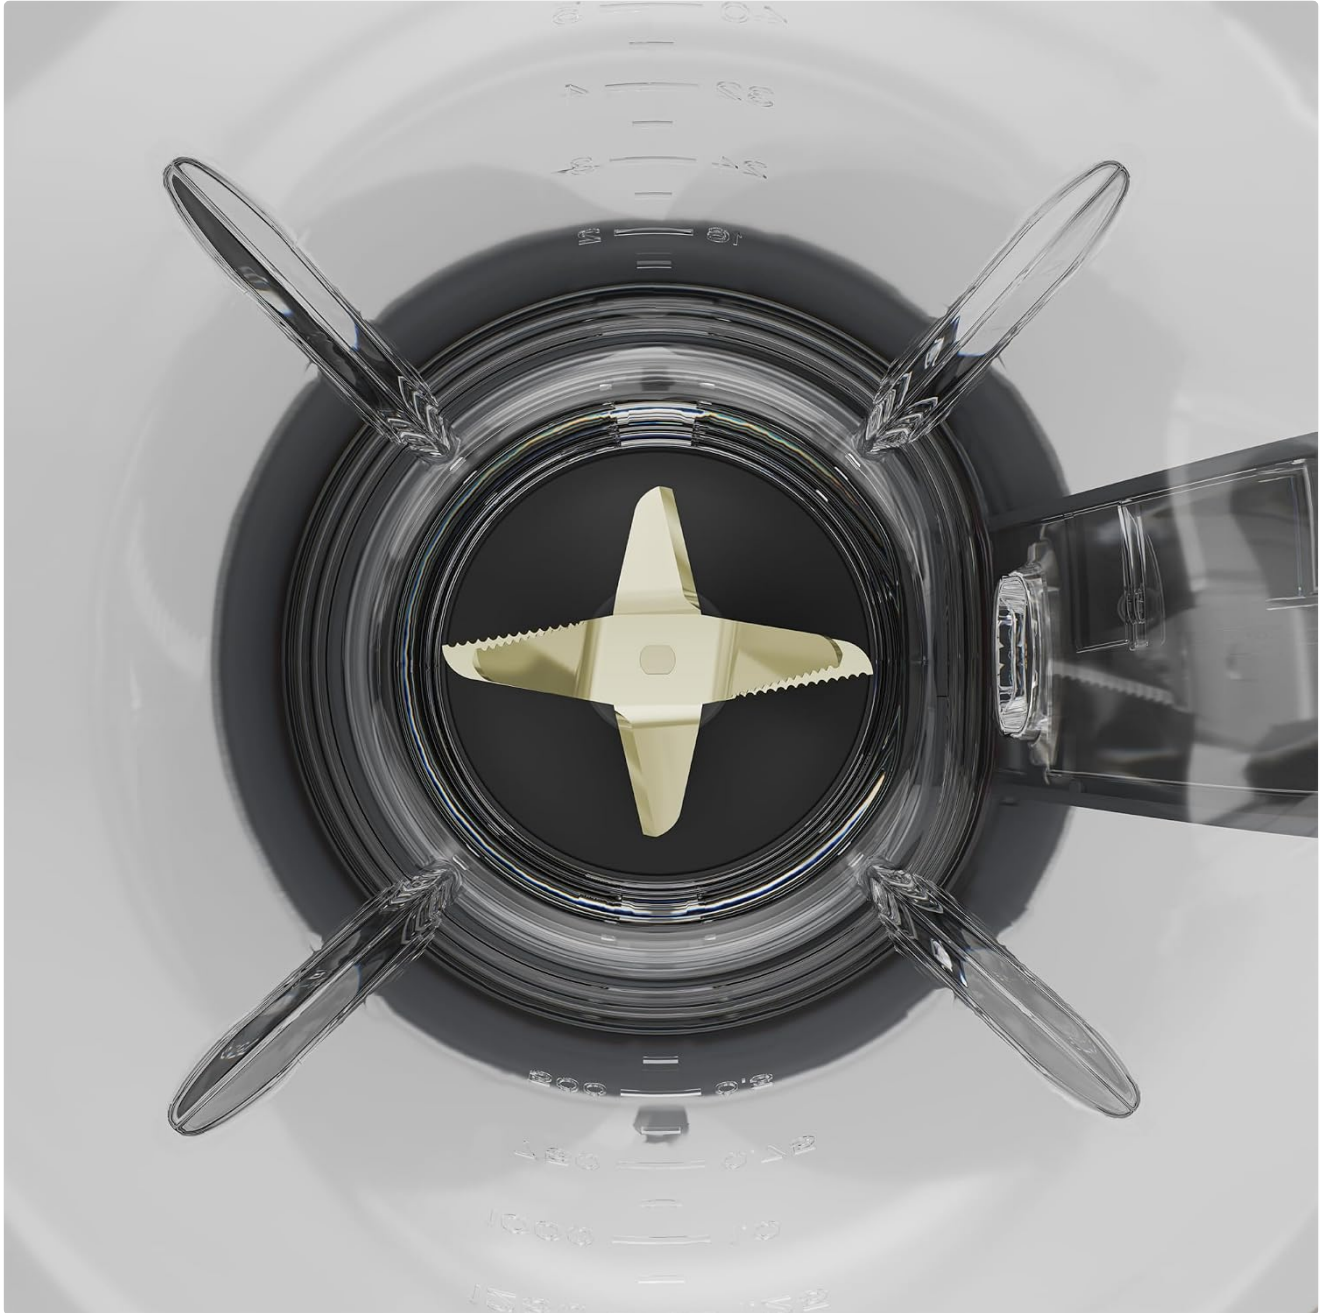


Image 5: The blender assembled, highlighting the control dial on the motor unit for selecting speed settings from 0 to 6, and the Pulse (P) function.

3. **Pulse Function (P):** For short bursts of power or to achieve a coarse chop, turn the dial to the "P" (Pulse) setting and hold it. Release the dial to stop. This is ideal for ice crushing or quick mixing.
4. **Blending Time:** Blend for short periods (e.g., 30-60 seconds) to avoid overheating the motor. If blending for longer, allow the appliance to rest for a few minutes between cycles.
5. **Stop Blending:** Turn the control dial back to the "0" (Off) position to stop the blender. Unplug the appliance before removing the jug or lid.

Tips for Best Results:

- For thicker mixtures, use the pulse function or add more liquid.
- When crushing ice, use the pulse function in short bursts until desired consistency is achieved. Do not overload the jug with ice.
- Always ensure the lid is properly secured before starting the blender.

5. CLEANING AND MAINTENANCE

Regular cleaning ensures the longevity and hygienic operation of your blender.

1. **Immediate Cleaning:** After each use, unplug the blender. Remove the jug from the motor unit.
2. **Cleaning the Jug and Blades:**
 - For quick cleaning, fill the jug with warm water and a drop of dish soap. Place the lid on, and run the blender on a low speed for a few seconds. Rinse thoroughly.
 - For thorough cleaning, disassemble the blade assembly from the jug. Wash the jug, lid, and blade assembly in warm soapy water. Use a brush to clean around the blades carefully, as they are sharp. Rinse all parts under running water and dry thoroughly.
 - The glass jug and lid are generally dishwasher safe, but hand washing is recommended for the blade assembly to preserve its sharpness.
3. **Cleaning the Motor Unit:** Wipe the motor unit with a damp cloth. Do not immerse the motor unit in water or any other liquid. Do not use abrasive cleaners or scouring pads.
4. **Storage:** Ensure all parts are completely dry before storing. Store the blender in a clean, dry place.

6. TROUBLESHOOTING

If you encounter issues with your blender, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Blender does not start.	Not plugged in. Jug not correctly assembled or locked onto the motor unit. Power outage.	Ensure the power cord is securely plugged into a working outlet. Check that the jug is properly seated and locked onto the motor unit. Verify power supply to the outlet.
Ingredients are not blending smoothly.	Too little liquid. Too many ingredients. Ingredients are too large.	Add more liquid. Reduce the amount of ingredients in the jug. Cut ingredients into smaller pieces. Use the pulse function for stubborn ingredients.
Blender stops during operation.	Overheating (thermal cut-out activated). Overload.	Unplug the blender and let it cool down for at least 15-20 minutes. Reduce the load before restarting. Reduce the amount of ingredients.
Leakage from the bottom of the jug.	Blade assembly not securely tightened. Sealing ring is missing or improperly placed.	Ensure the blade assembly is twisted clockwise until fully secured. Check that the sealing ring is correctly positioned around the blade assembly.

7. TECHNICAL SPECIFICATIONS

- **Model:** TB 7285 CDX
- **Power:** 800 W
- **Speed Settings:** 6 (plus Pulse function)
- **Jug Capacity:** 1.5 Liters (Glass)
- **Blade Material:** Stainless Steel (with ice crushing function)
- **Power Source:** Corded Electric
- **Product Weight:** Approximately 1000 Grams
- **Color:** Dark Metallic
- **Included Components:** Motor Body, Glass Jug, Stainless Steel Blade Assembly, Lid

8. WARRANTY AND CUSTOMER SUPPORT

Grundig products are manufactured to the highest quality standards. In the unlikely event of any defect arising due to faulty materials or workmanship, your product is covered by a manufacturer's warranty.

For detailed warranty information, service, or technical support, please refer to the warranty card included with your product or visit the official Grundig website. You may also contact Grundig customer service directly for assistance.

Please have your model number (TB 7285 CDX) and purchase date ready when contacting customer support.

© 2026 Grundig. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question