

[Manuals.plus](#) /

› [AIKE](#) /

› AIKE Automatic Shower Soap Dispenser User Manual

AIKE AK1903

AIKE Automatic Shower Soap Dispenser

USER MANUAL

Introduction

Thank you for choosing the AIKE Automatic Shower Soap Dispenser. This innovative, wall-mounted dispenser is designed to streamline your shower routine by providing a convenient and touch-free way to dispense shampoo, shower gel, conditioner, or lotion. With its multi-chamber design and adjustable dispensing levels, it helps keep your bathroom organized and hygienic. Please read this manual carefully before installation and use to ensure optimal performance and longevity of your product.



Image: The AIKE Automatic Shower Soap Dispenser in black, featuring three clear chambers for different liquids (shampoo, shower gel, conditioner) and a hand activating the touch-free sensor for dispensing.

Safety Information

- Ensure the dispenser is installed on a stable and appropriate surface as described in the installation section.
- Do not immerse the entire unit in water, despite its IPX7 waterproof rating. The rating applies to splashes and humid environments, not full submersion.
- Use only liquids compatible with the dispenser, such as shampoo, conditioner, shower gel, or lotion. Avoid liquids containing particles, as these may clog the mechanism.
- Keep out of reach of children to prevent accidental ingestion of liquids or tampering with the device.
- Do not mix different types of liquids within the same chamber.
- Dispose of used batteries responsibly according to local regulations.

Package Contents

Please check the package contents to ensure all items are present:

- AIKE Automatic Shower Soap Dispenser (1 unit)
- Mounting Hardware (screws, wall anchors, or adhesive strips, depending on chosen installation method)
- User Manual (this document)

Note: 4 AA batteries are required for operation and are not included in the package.

Setup and Installation

1. Battery Installation

1. Locate the battery compartment, typically on the back or top of the dispenser.
2. Open the battery compartment cover.
3. Insert 4 AA batteries (not included), ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.

2. Choosing an Installation Method

The AIKE dispenser offers two installation options: adhesive mounting or screw mounting. Choose the method best suited for your wall surface and personal preference.

SUGGESTED INSTALLATION METHOD

Please ensure that the wall surface is dry, clean, smooth, and firm (non-peeling)

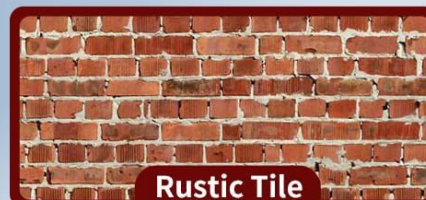
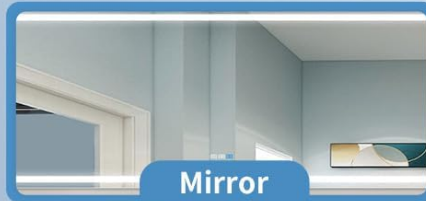
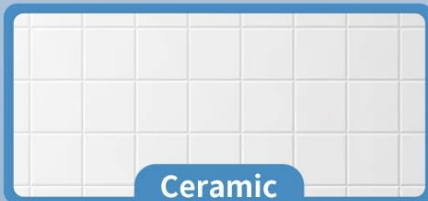


Image: A guide illustrating suitable wall surfaces for each installation method. Adhesive installation is recommended for dry, clean, smooth, and firm surfaces like marble, steel, ceramic, mirror, and glass. Screw installation is suitable for painted walls, wallpaper, rough surfaces, rustic tile, and wooden surfaces.

3. Adhesive Installation (No Drilling)

This method is ideal for smooth, non-peeling surfaces. Ensure the wall surface is dry, clean, and firm before proceeding.

1. Clean the desired installation area thoroughly and let it dry completely.
2. Peel off the protective film from the adhesive backing on the mounting plate.
3. Carefully align the mounting plate on the wall.
4. Press firmly on all sections of the tape, especially the top area, to remove air bubbles and ensure a strong bond. Hold for at least 30 seconds.
5. Allow the adhesive to cure for at least 24 hours before hanging the dispenser and filling it with liquids. This ensures maximum adhesion.

During installation, all tape sections must be pressed firmly, and air bubbles must be removed, especially in the top area of the adhesive, which is marked by the red box in the diagram below.

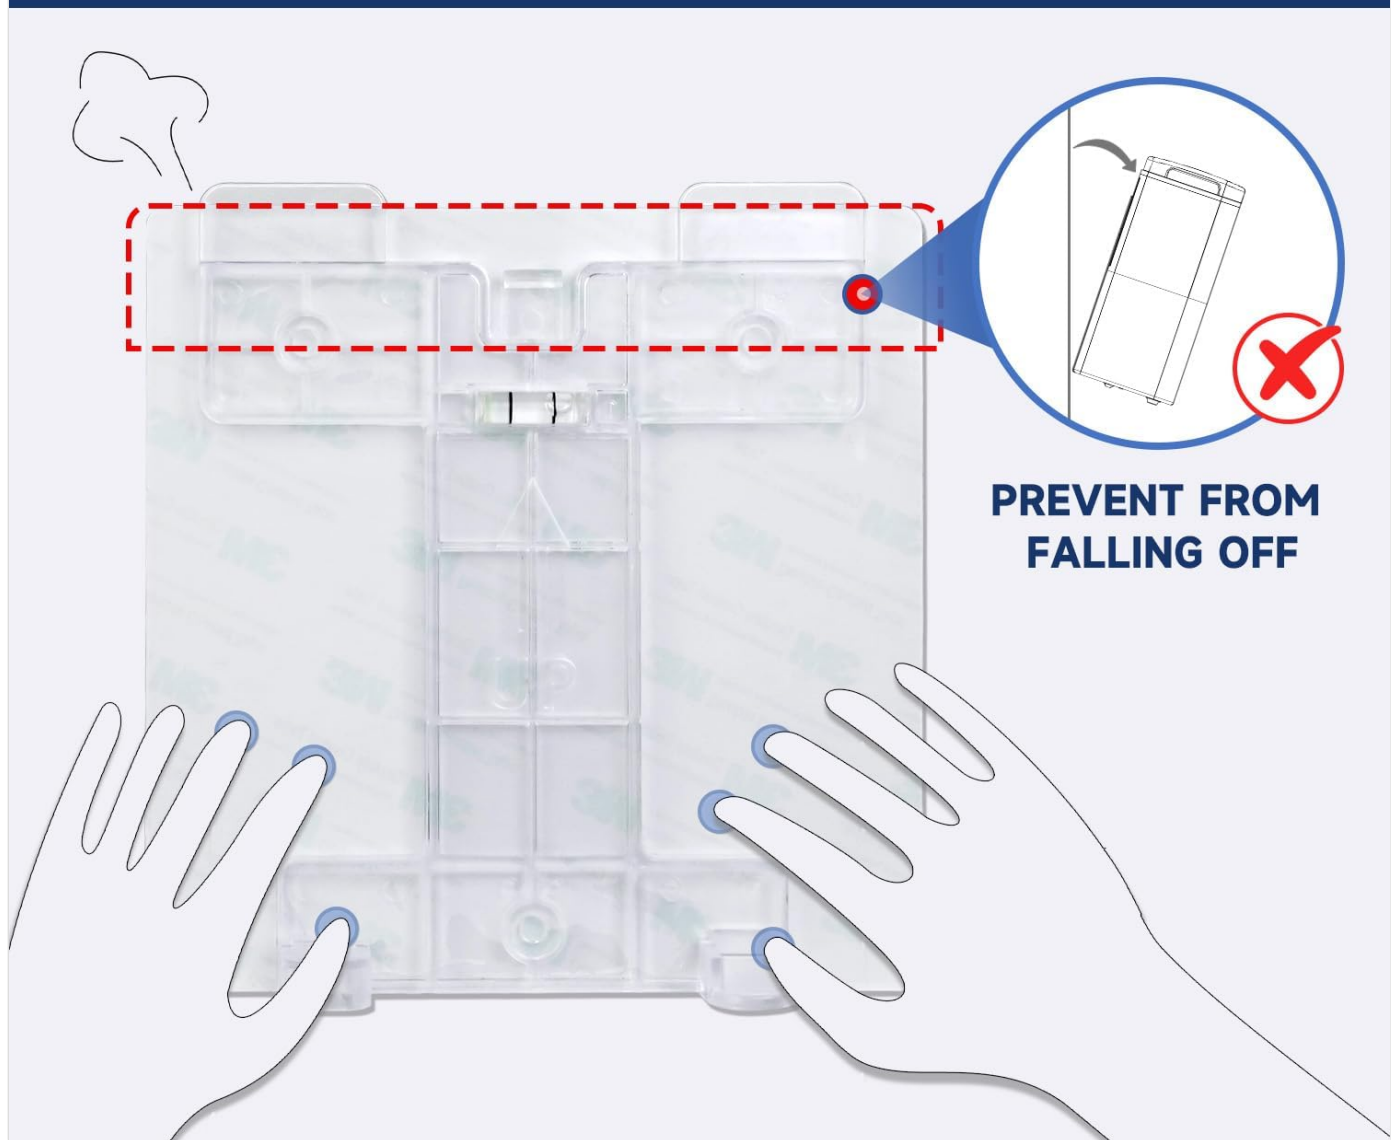


Image: Illustration showing hands pressing down on the adhesive mounting plate to ensure all tape sections are firmly pressed and air bubbles are removed, particularly in the top area.

4. Screw Installation (Drilling Required)

This method provides a more permanent and secure installation, suitable for various wall types.

1. Mark the desired drilling points on the wall using the mounting plate as a template.
2. Drill holes at the marked points. Insert wall anchors if necessary.
3. Align the mounting plate with the drilled holes and secure it with screws.
4. Attach the dispenser to the secured mounting plate.

5. Placement Considerations

Ensure there is adequate space below the dispenser for dispensing. A minimum of 10 inches (25.4 cm) gap is recommended if installed above a countertop or other object to allow for proper sensor function and dispensing clearance.



Require 10 inches gap, if installed above a countertop or other object.

Image: An illustration demonstrating the recommended 10-inch clearance required below the dispenser if it is installed above a countertop or other fixture in the shower area.

6. Filling the Chambers

The dispenser features three separate chambers, each with a capacity of 320ml (10.8 fl.oz).

1. Open the top cover of the dispenser.
2. Pour your desired liquid (shampoo, conditioner, shower gel, or lotion) into each chamber.
3. Close the top cover securely.

Important: Do not use liquids containing particles, such as scrubs or exfoliants, as these can clog the dispensing mechanism.

Operating Instructions

1. Touch-Free Dispensing

The AIKE dispenser utilizes a sensitive sensor for touch-free operation, promoting hygiene and convenience.

- Place your hand approximately 2-3 inches (5-7 cm) below the desired dispensing nozzle.
- The sensor will detect your hand and automatically dispense the liquid.
- Remove your hand once the desired amount is dispensed.



Image: A detailed view of the AIKE dispenser emphasizing its key features: a sensitive sensor for touch-free activation, independent control for each chamber, and precise dispensing for controlled liquid output.

2. Adjusting Dispensing Volume

The dispenser offers 5 adjustable levels for dispensing volume, allowing you to customize the amount of liquid dispensed per activation.

Refer to the product's specific instructions or buttons (if any) for adjusting the volume. Typically, there is a button or a sequence of hand gestures to cycle through the dispensing levels.

Maintenance

1. Cleaning the Dispenser

The AIKE dispenser is IPX7 waterproof, making it easy to clean and maintain.

- Wipe the exterior of the dispenser with a soft, damp cloth.
- For stubborn stains, use a mild soap solution.
- Do not use abrasive cleaners or solvents, as these may damage the surface.
- You can confidently rinse the exterior with water to keep it clean and new.



Image: The AIKE dispenser partially submerged in water, illustrating its IPX7 waterproof capability, allowing for confident rinsing to maintain cleanliness.

2. Refilling Liquids

When a chamber is low on liquid, simply open the top cover and refill as described in the "Filling the Chambers" section under Setup.

3. Battery Replacement

When the dispensing becomes weak or stops, it's likely time to replace the batteries. Follow the "Battery Installation" steps in the Setup section to replace all 4 AA batteries.


Troubleshooting

Problem	Possible Cause	Solution
Dispenser not working or weak dispense.	Low or dead batteries. Incorrect battery polarity.	Replace all 4 AA batteries with new ones, ensuring correct polarity.
Liquid not dispensing or dispensing slowly.	Chamber is empty. Liquid is too thick or contains particles. Dispensing nozzle is clogged.	Refill the chamber. Use thinner liquids or dilute thick liquids (if appropriate for the product). Clean the dispensing nozzle.
Sensor not responding.	Obstruction near the sensor. Sensor is wet or dirty.	Ensure nothing is blocking the sensor. Wipe the sensor area clean and dry.
Dispenser activates unexpectedly.	Water droplets or steam interfering with the sensor.	Ensure the sensor area is dry. If persistent, consider relocating the dispenser slightly away from direct spray or heavy steam.
Dispenser falls off the wall (adhesive installation).	Improper surface preparation (not clean/dry/firm). Insufficient curing time. Air bubbles in adhesive.	Re-install using new adhesive strips, ensuring the surface is perfectly clean and dry, pressing firmly to remove all air bubbles, and allowing at least 24 hours for curing before use. Consider screw installation for added security.

Specifications

Feature	Detail
Brand	AIKE
Model Number	AK1903
Color	Black
Material	Plastic
Product Dimensions (L x W x H)	23.3 x 9 x 19.6 cm (9.17 x 3.54 x 7.72 inches)
Item Weight	1 Kilogram (2.2 lbs)
Liquid Volume (per chamber)	320 ml (10.8 fl.oz)
Number of Chambers	3
Power Supply	4 x AA Batteries (not included)

Feature	Detail
Waterproof Rating	IPX7
Dispensing Levels	5 adjustable levels

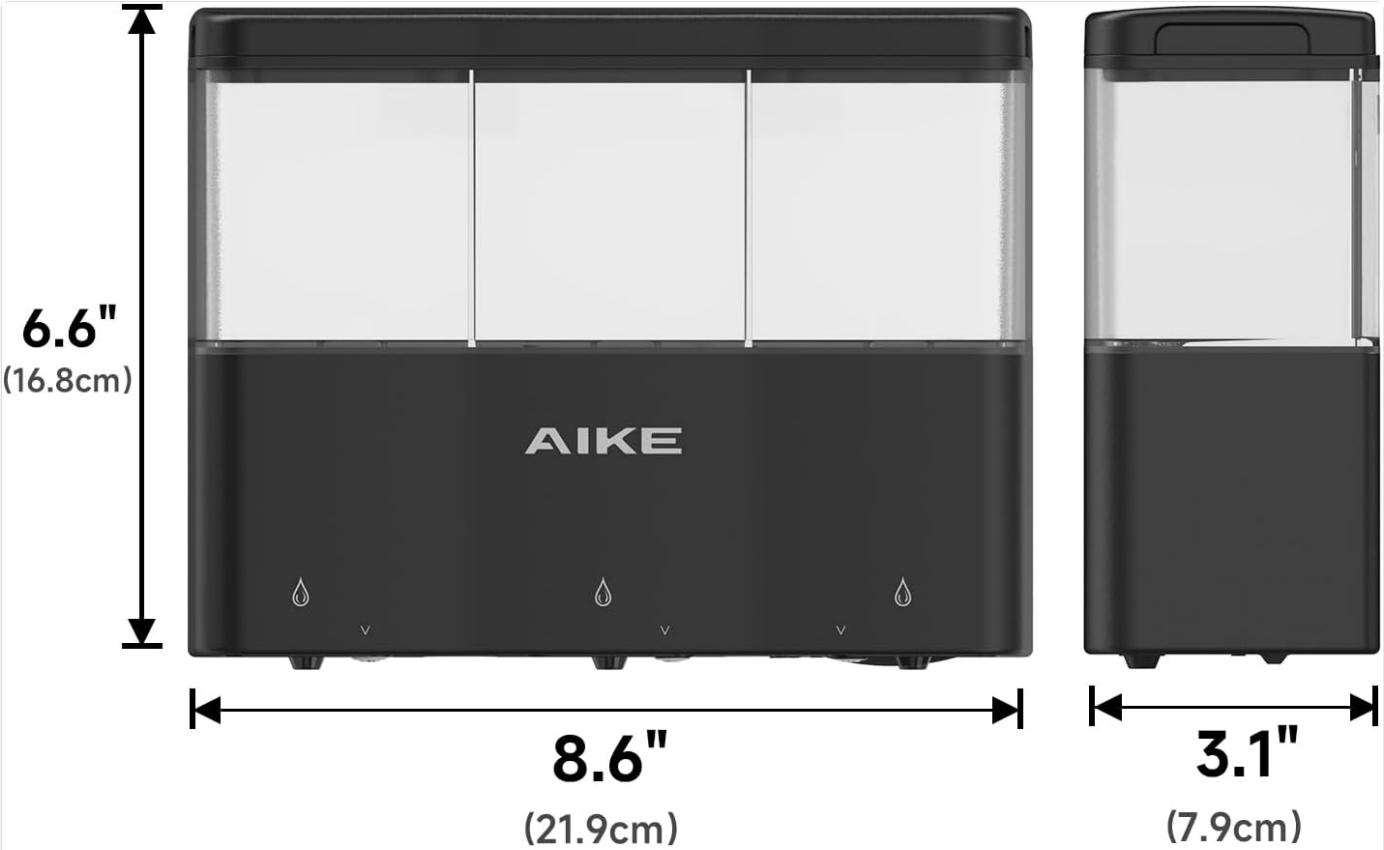

Dimensions: 6.6 inches x 8.6 inches x 3.0inches

Capacity: 320ml/10.8fl.oz each chamber

Battery: Require 4 AA dry batteries(not included)

Image: A technical diagram displaying the precise dimensions of the AIKE dispenser (6.6" height, 8.6" width, 3.1" depth) and its capacity of 320ml per chamber, along with the battery requirement.

Warranty and Support

Warranty Information

AIKE offers a one-year warranty from the date of purchase. This warranty covers defects in materials and workmanship under normal use. In case of non-human damage, AIKE will provide a replacement for the soap dispenser. Please retain your proof of purchase for warranty claims.

Customer Support

For any questions, concerns, or warranty claims, please contact AIKE customer support. Refer to the contact information provided with your product packaging or visit the official AIKE website for assistance.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0C7772W7L>

More documents and user manuals: <https://manuals.plus/>