

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Byecold](#) /

› [Byecold 400W Electric Infrared Ceiling Heater User Manual](#)

Byecold H4-0606B

Byecold 400W Electric Infrared Ceiling Heater User Manual

Model: H4-0606B

1. INTRODUCTION

Thank you for choosing the Byecold 400W Electric Infrared Ceiling Heater. This manual provides essential information for the safe and efficient operation of your new heater. Please read it thoroughly before installation and use, and retain it for future reference.

This infrared heater utilizes advanced technology to provide comfortable, sun-like warmth directly to objects and people in the room, rather than heating the air. This method offers efficient and quiet heating, making it suitable for various indoor environments.

2. SAFETY INSTRUCTIONS

To ensure safe operation and prevent damage, please adhere to the following safety guidelines:

- Always ensure the heater is installed by a qualified professional if hardwiring is chosen.
- Do not cover the heater while it is in operation.
- Keep flammable materials at a safe distance from the heater.
- Do not operate the heater with a damaged cord or plug.
- Avoid direct contact with the heater surface during operation, as it can become hot.
- This heater is equipped with an **automatic overheat protection** feature, which will shut off the unit if it detects excessive temperatures.
- Ensure the power supply voltage matches the specifications of the heater.
- Do not use the heater in bathrooms or other areas where it may come into contact with water, unless specifically rated for such environments.





Schnelle Erwärmung



This image illustrates the heater's safety mechanism, which includes automatic shutdown to prevent overheating, and lists relevant safety certifications (LVD, EMC, ErP).

3. SPECIFICATIONS

Feature	Specification
Brand	Byecold
Model Number	H4-0606B
Color	White
Power	400W
Voltage	230 Volts (AC)
Product Dimensions (DxWxH)	3.5 x 59.5 x 59.5 cm
Item Weight	4.98 Kilograms
Mounting Type	Ceiling Mount
Heating Method	Radiant (Infrared)
Power Source	Electric Cable
Indoor/Outdoor Use	Indoor
Special Features	Programmable Thermostat, Remote Control, Automatic Shut-off

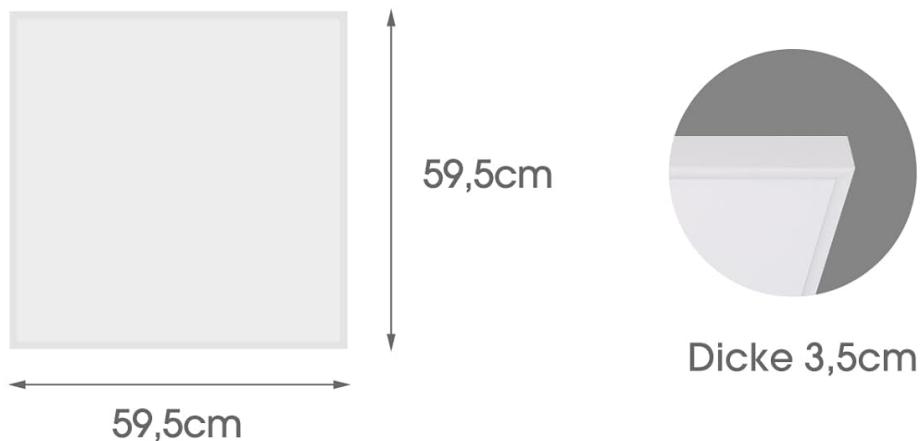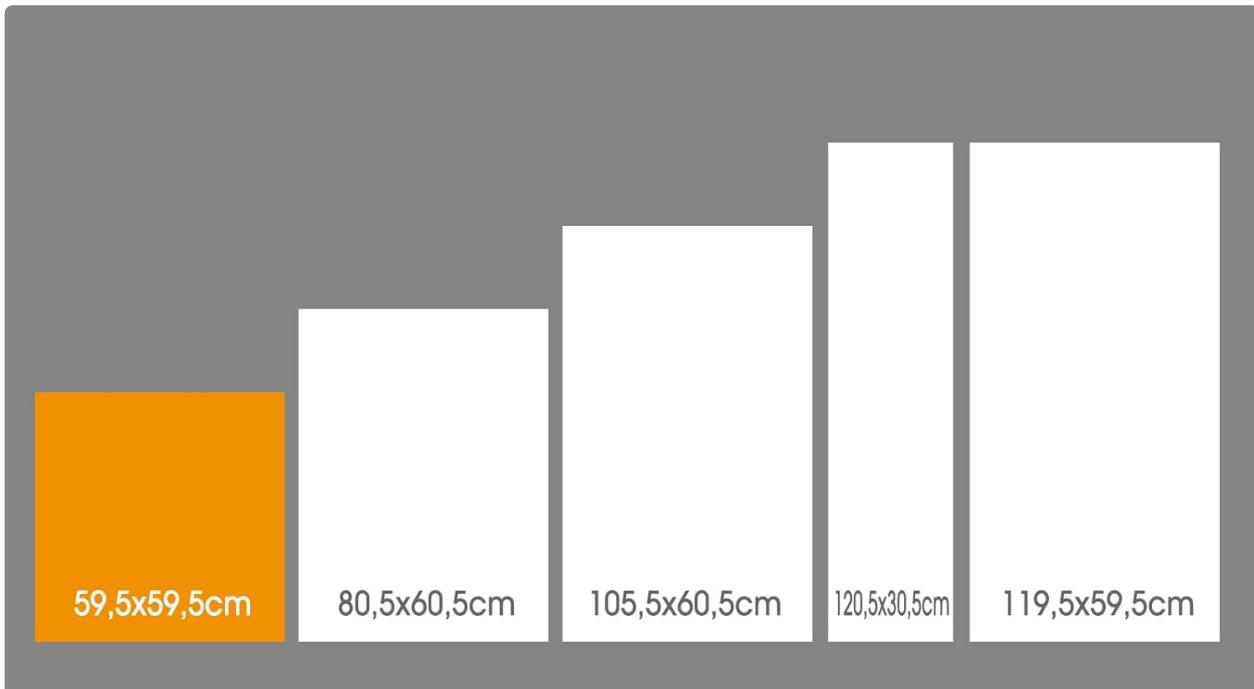

This image provides precise measurements of the heater panel, including its length, width, and slim profile.

4. INSTALLATION AND SETUP

The Byecold infrared heater is designed for ceiling mounting. It offers flexible installation options:

- **Plugged-in:** Connect the heater directly to a suitable electrical outlet.
- **Hardwired:** For a permanent installation, the plug can be removed, and the heater can be hardwired into your electrical system. This option should be performed by a qualified electrician.

Ensure the mounting location is structurally sound and can support the weight of the heater. Maintain adequate clearance around the heater for optimal performance and safety.




FESTVERDRAHT



EINGESTECKT

This image clarifies the flexible installation methods available for the heater, either direct wiring or plug-and-play.

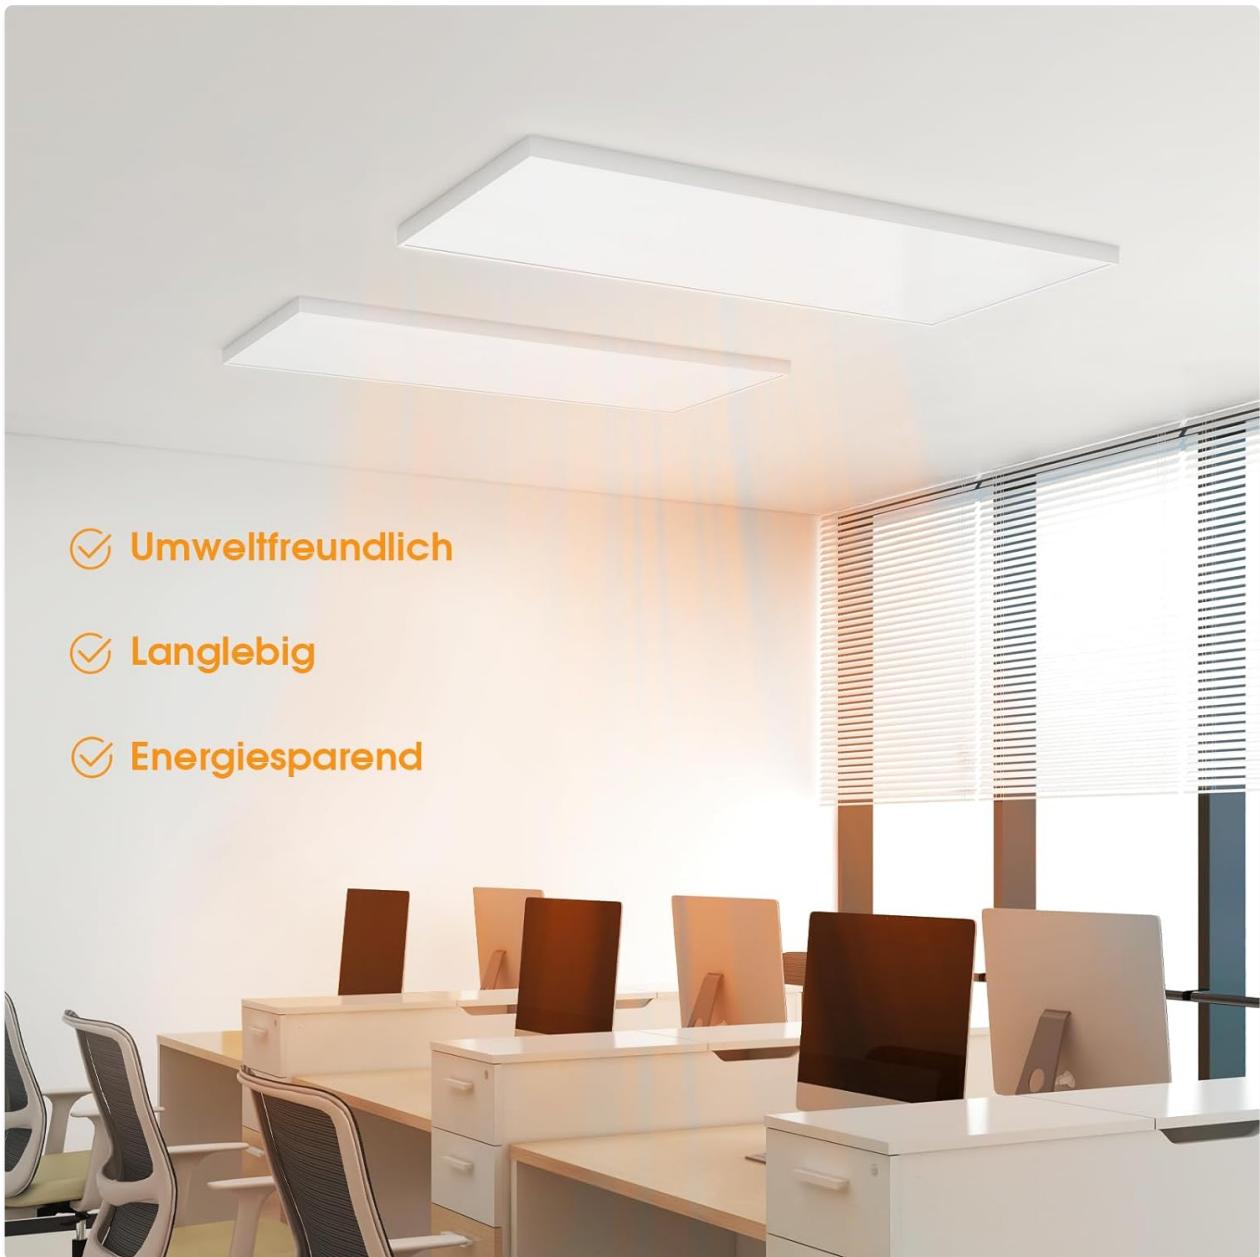

This image shows the heaters in an office, emphasizing their environmental benefits, long lifespan, and energy-saving features.

5. OPERATING INSTRUCTIONS

Your Byecold infrared heater comes with a remote control for convenient operation. The heater can be programmed to turn on and off automatically based on temperature and time settings.

5.1 Remote Control Overview

Die Heizung kann je nach Temperatur und Zeit, die Sie auf dieser Fernbedienung einstellen, automatisch ein- und ausgeschaltet werden.



The remote control allows for precise adjustment of temperature and setting of the timer function for the heater.

5.2 Pairing the Remote Control

To pair the heater with the remote control, follow these steps:

1. Plug in the heater and turn on the remote control.
2. Press the "C / F" and "MODE" buttons simultaneously until you hear a beep. This indicates successful pairing.
3. These steps must be completed within 1 minute of plugging in the heater.

Leise Heizung, Kein Lärm



This image provides clear, numbered steps to successfully connect the heater to its remote control for operation.

5.3 General Operation

- Use the **ON/OFF** button to power the heater on or off.
- Adjust the desired temperature using the **SET** button and arrow keys.
- Set a timer for automatic shutdown or startup using the **TIME** button.
- Switch between Celsius and Fahrenheit using the **°C/°F** button.



This image illustrates how infrared heat radiates downwards from the ceiling-mounted heater, providing warmth to the room.



Schnelle Erwärmung

Sie müssen der Kälte nicht zu lange widerstehen,
damit Sie das warme Leben genießen können.




The heaters are shown warming a living room, illustrating their rapid heating capability.

Leise Heizung, Kein Lärm



This image highlights the heater's quiet performance, ensuring an undisturbed environment, ideal for bedrooms.

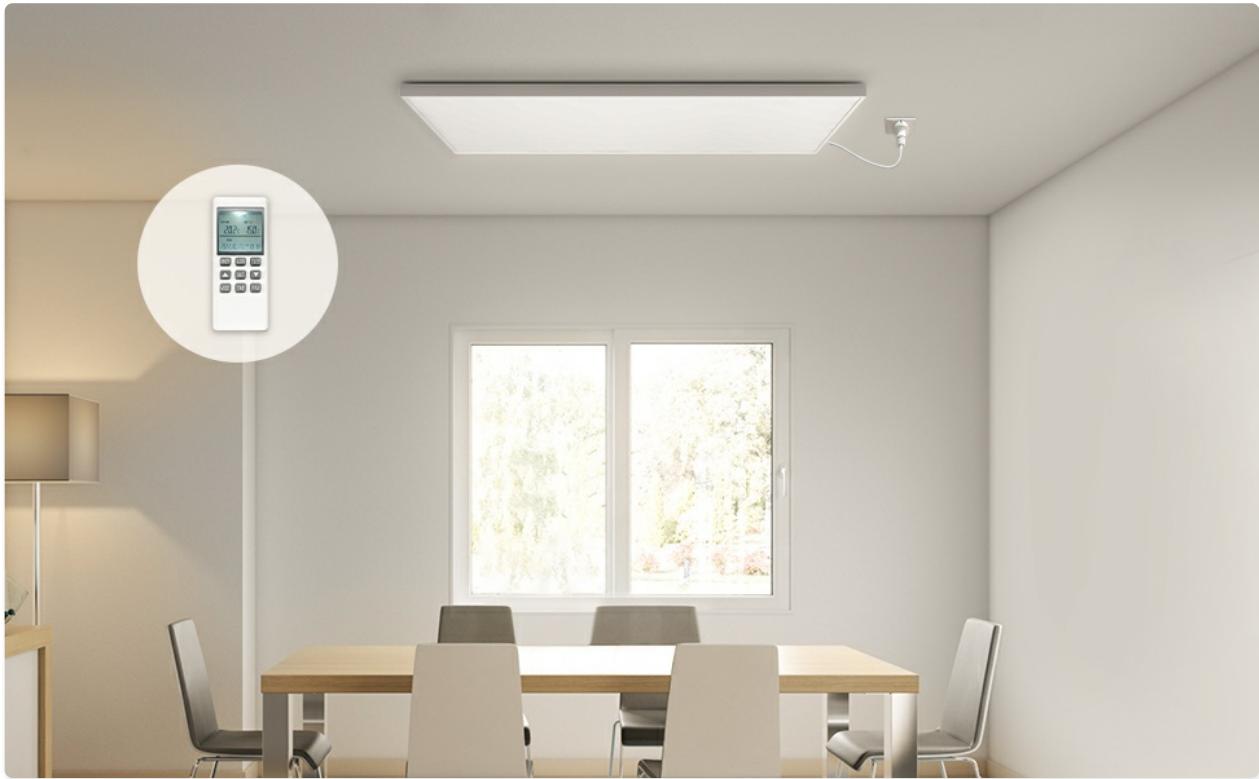

This graphic summarizes the core benefits of the heater, including comfortable warmth, efficient radiation, and quick heat-up time.

6. MAINTENANCE

Regular maintenance ensures the longevity and efficient operation of your heater.

- Before cleaning, always unplug the heater and allow it to cool completely.
- Wipe the exterior surface with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Ensure no water enters the internal components of the heater.
- Periodically check the power cord for any signs of damage.

7. TROUBLESHOOTING

If you encounter issues with your heater, refer to the following common troubleshooting steps:

- **Heater does not turn on:** Check if the heater is properly plugged into a working outlet. Ensure the remote control has fresh batteries and is paired correctly.
- **No heat output:** Verify that the desired temperature setting is higher than the current room temperature. Check for any obstructions around the heater.
- **Heater turns off unexpectedly:** The overheat protection may have been activated. Unplug the heater, allow it to cool down, and check for any blockages or improper installation before restarting.
- **Remote control not responding:** Replace the batteries in the remote control. Re-pair the remote control with the heater as described in Section 5.2.

If problems persist after attempting these steps, please contact Byecold customer support.

8. WARRANTY AND SUPPORT

Byecold is committed to product quality and customer satisfaction. All products undergo strict quality control before leaving the factory.

If you are not satisfied with your product or require assistance, Byecold has established a dedicated warehouse for returns and exchanges. Our support team is available to provide a rapid response to all product-related questions within 24 hours.

For further assistance, please visit the official Byecold store or contact customer service through the platform where you purchased the product.