

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [YUHANUS](#) /

› [YUHANUS Door Access Control System RFID Keypad 600lb Electric Magnetic Door Lock Kit with Exit Button Doorbell Chime Remote Control - Instruction Manual](#)

YUHANUS K03-P9-280-RT

YUHANUS Door Access Control System Instruction Manual

Model: K03-P9-280-RT

1. INTRODUCTION

This manual provides comprehensive instructions for the installation, operation, and maintenance of your YUHANUS Door Access Control System. Please read this manual thoroughly before installation and use to ensure proper functionality and safety.

The YUHANUS Door Access Control System is designed to provide secure and convenient access management for various premises. It features multiple access options including password input, RFID card swiping, and remote control. The system incorporates a robust 600lb electromagnetic lock for enhanced security and includes a doorbell chime for visitor management.

2. PACKAGE CONTENTS

Please verify that all components listed below are included in your package:

- Access Control Keypad (CU-K03)
- 600lb Electric Magnetic Lock
- Power Supply Unit (DC12V/4A)
- Exit Button (Push to Exit Switch)
- Doorbell Chime Unit (CU-B01)
- Remote Control Receiver Module
- Two Remote Control Transmitters
- RFID Key Fobs (Blue, 5 included)
- Mounting Hardware (Screws, anchors, L-bracket/Z-bracket if applicable)
- User Manual (This document)



Figure 2.1: Overview of all included components for the access control system.

3. SPECIFICATIONS

Feature	Specification
Brand	YUHANUS
Model Number	K03-P9-280-RT
Magnetic Lock Holding Force	600 lbs
Power Source	Corded Electric
Input Voltage (Power Supply)	AC 110V-240V (1A) 50Hz
Output Voltage (Power Supply)	DC 12V (4A)
Control Method	Keypad, RFID Card, Remote Control

Feature	Specification
Remote Control Frequency	433 MHz (approx.)
Item Dimensions (L x W x H)	11.81 x 7.09 x 3.15 inches
Material	Stainless Steel (Magnetic Lock)
Installation Type	Screw-In

4. SAFETY PRECAUTIONS

- Always disconnect power before performing any installation, wiring, or maintenance.
- Installation should be performed by qualified personnel if you are not familiar with electrical wiring.
- Ensure all wiring connections are secure and properly insulated to prevent short circuits.
- Do not open the power supply unit cover as it contains hazardous voltage.
- Keep the system components away from water and excessive humidity.
- Use only the provided power supply unit or a compatible replacement with the correct voltage and current ratings.

5. INSTALLATION AND SETUP

5.1. Component Identification

Familiarize yourself with the main components:



Figure 5.1.1: Access Control Keypad (CU-K03). This unit allows entry via passcode or RFID card.



Figure 5.1.2: 600lb Electric Magnetic Lock. This is the primary locking mechanism.



Figure 5.1.3: Power Supply Unit. Provides DC 12V power to the system components.



Figure 5.1.4: Exit Button. Allows for easy exit from the secured area.



Figure 5.1.5: Doorbell Chime Unit. Alerts occupants to visitors at the door.



Figure 5.1.6: Remote Control Receiver Module and Transmitters. Enables remote unlocking of the door.

5.2. Wiring Diagram

Follow the wiring diagram carefully for proper connection of all components. Ensure all connections are secure and insulated.



Figure 5.2.1: Comprehensive wiring diagram for the YUHANUS Access Control System, showing connections between the keypad,

magnetic lock, power supply, exit button, doorbell, and remote control module.

Key Wiring Points:

- Connect the AC 110V-240V input to the Power Supply Unit.
- The Power Supply Unit provides +12V and GND to the Access Control Keypad and the Magnetic Lock.
- The Magnetic Lock connects to the Power Supply Unit's NO (Normally Open) and GND terminals.
- The Exit Switch Button connects to the PUSH and GND terminals on the Power Supply Unit.
- The Doorbell Chime connects to the BELL terminals on the Access Control Keypad.
- The Remote Control Receiver Module connects to the Power Supply Unit's +12V, GND, NC, and COM terminals.

5.3. Magnetic Lock Installation

The 600lb magnetic lock is designed for surface mounting. Ensure the mounting surface is strong enough to support the lock's holding force.



Figure 5.3.1: Dimensions of the 600lb magnetic lock and armature plate.

1. **Mounting the Magnetic Lock Body:** Secure the main magnetic lock body to the door frame using appropriate screws. Ensure it is level and aligned with where the armature plate will be mounted on the door.
2. **Mounting the Armature Plate:** Attach the armature plate to the door. It should align perfectly with the magnetic lock body when the door is closed. Use the provided screws and ensure the plate can pivot slightly to ensure full contact with the electromagnet.
3. **Adjusting for Alignment:** Ensure the magnetic lock and armature plate make full contact when the door is closed. Minor adjustments may be needed for optimal performance.



Figure 5.3.2: Diagram illustrating the installation of the magnetic lock on a door frame and the armature plate on the door.

5.4. System Operation Overview

The system allows access through multiple methods:



Figure 5.4.1: Accessing the door by entering a valid passcode on the keypad.



Figure 5.4.2: Accessing the door by swiping a registered RFID key fob or card.



Figure 5.4.3: Accessing the door remotely using the provided remote control transmitters.

6. OPERATING INSTRUCTIONS

6.1. Initial Programming (Master Code Setup)

Before first use, you must set up a master code. This code is used to enter programming mode.

1. Power on the system.
2. Enter the default master code (refer to the keypad's specific manual, typically 123456 or 999999).
3. Press **#** to confirm. The keypad will indicate entry into programming mode (e.g., LED changes color, beeps).
4. To change the master code: Press **0**, then enter your new 4-6 digit master code, then press **#**. Re-enter the new master code and press **#** to confirm.

6.2. Adding User Passcodes

1. Enter programming mode using the master code.
2. Press **1** (or the designated key for adding users).
3. Enter a 4-6 digit user passcode, then press **#**.
4. Repeat for additional user passcodes.
5. Exit programming mode (usually by pressing ***** or waiting for timeout).

6.3. Adding RFID Cards/Key Fobs

1. Enter programming mode using the master code.
2. Press **2** (or the designated key for adding cards).
3. Present the RFID card/key fob to the keypad's reader. The keypad will beep to confirm registration.
4. Repeat for additional RFID cards/key fobs.
5. Exit programming mode.

6.4. Deleting Users (Passcodes/Cards)

Refer to your keypad's specific manual for detailed deletion procedures. Typically:

- Enter programming mode.
- Press the designated key for deleting users (e.g., **3**).
- Enter the specific user passcode or present the RFID card to be deleted.
- Alternatively, some keypads allow deleting all users at once (use with caution).
- Exit programming mode.

6.5. Using the Remote Control

The remote control transmitters are pre-programmed to the receiver module. Press the lock/unlock button on the remote to momentarily release the magnetic lock.

Note: The remote control operates on 433MHz. Be aware of potential interference from other devices operating on the same frequency, such as some wireless doorbells, which might inadvertently trigger the lock.

6.6. Using the Exit Button

Simply press the exit button located inside the secured area to momentarily release the magnetic lock and open the door.

6.7. Using the Doorbell Chime

Visitors can press the doorbell button on the access keypad. The indoor chime unit will sound, alerting occupants.

7. MAINTENANCE

- **Cleaning:** Wipe the keypad and other components with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Magnetic Lock Alignment:** Periodically check the alignment of the magnetic lock and armature plate. Ensure there is no gap when the door is closed, as this can reduce holding force.
- **Wiring Inspection:** Annually inspect all wiring connections for signs of wear, corrosion, or loose terminals. Tighten any loose connections.
- **Power Supply:** Ensure the power supply unit is in a well-ventilated area and free from obstructions.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
System has no power / Keypad not lighting up.	No power to the power supply unit; Loose wiring connection; Faulty power supply.	Check power outlet and circuit breaker. Verify all power connections are secure. Test power supply output.

Problem	Possible Cause	Solution
Magnetic lock does not engage/disengage.	Incorrect wiring; Insufficient power; Misaligned armature plate; Faulty lock.	Review wiring diagram (Section 5.2). Ensure power supply is providing correct voltage. Adjust armature plate for full contact. Contact support if lock is faulty.
Keypad does not respond to input.	No power to keypad; Keypad malfunction.	Check keypad power connections. If power is present, keypad may be faulty.
RFID card/key fob not recognized.	Card not programmed; Card damaged; Reader malfunction.	Ensure card is properly programmed (Section 6.3). Try another card. Contact support if reader is faulty.
Remote control not working.	Remote battery low/dead; Remote not paired; Receiver module faulty; Interference.	Replace remote battery. Ensure remote is paired with receiver. Check receiver wiring. Minimize other 433MHz devices.
Doorbell chime not sounding.	Incorrect wiring; Chime unit faulty.	Verify doorbell wiring to keypad. Test chime unit.

9. WARRANTY AND SUPPORT

YUHANUS products are designed for reliability and performance. For warranty information and technical support, please refer to the contact details provided with your purchase or visit the official YUHANUS website.

Please have your model number (K03-P9-280-RT) and purchase date ready when contacting support.

© 2025 YUHANUS. All rights reserved.

Related Documents - K03-P9-280-RT

 <p>Shenzhen YuHan International Business Co., Ltd. Model Differences Date: March 10, 2024 Project description: YUHANUS Bluetooth smart lock Model numbers: YH-D280, YH-D290, YH-D300, YH-D350, YH-D500, YH-D800 YH-ULock-01, YH-BikeLock-01, YH-BikeLock-02 YH Name: YUHANUS YH ID: 20240310-YH000 This document is for the internal use of YH and its vendor/partner companies. It must not be distributed outside YH's internal network. Page 01 Version 01 Signature:  I declare that this document is true and correct. Name: Wang Wei (YH) Title: Customer Support Manager Date: March 10, 2024 Address: Shenzhen YuHan International Business Co., Ltd., Shenzhen, China</p>	<p>Shenzhen YuHan Bluetooth Smart Lock Model Differences - YUHANUS</p> <p>Details on model differences for Shenzhen YuHan's YUHANUS Bluetooth smart locks, including model numbers YH-D280, YH-D290, YH-D300, YH-D350, YH-D500, YH-D800, YH-ULock-01, YH-BikeLock-01, YH-BikeLock-02. All models share the same circuit and RF module.</p>
---	--

	<p>CU-K03 RFID Standalone Keypad User Manual</p> <p>User manual for the CU-K03 RFID Standalone Keypad, detailing its technical features, indicator functions, buzzer alerts, setting procedures, FAQ, and wiring for access control systems.</p>
	<p>Saflok RT/RT Plus Installation Instructions</p> <p>This document provides detailed installation instructions for the dormakaba Saflok RT and RT Plus electronic mortise and cylindrical locks. It covers parts lists, tools required, step-by-step installation procedures for various models including ASM, ESM, Autodeadbolt, Mechanical Override, Cylindrical, and Escape Return, along with appendices for specific functions and troubleshooting. It also includes information on recodable cylinders and compliance statements.</p>
	<p>IbexOS Management Guide - Westermo</p> <p>Comprehensive guide to Westermo's IbexOS firmware, detailing features, configuration, and management for industrial wireless communication devices like Ibex-RT series.</p>
	<p>dormakaba Multihousing Price Book April 2021</p> <p>Comprehensive price book from dormakaba detailing a wide range of access control solutions and hardware for multihousing properties, including Saffire, Nova, Quantum, Ilco, MT, and InSync product lines, along with software and accessories.</p>
	<p>Danfoss Thermostat Type RT: Technical Data Sheet and Product Overview</p> <p>Comprehensive data sheet for Danfoss Thermostat Type RT, detailing features, technical specifications, types, applications, functions, and ordering information for industrial and marine use. Includes diagrams and selection guides.</p>