

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [CAMRY](#) /

> [Camry CR 6414 4.7L LED Slow Cooker Instruction Manual](#)

CAMRY CR 6414

Camry CR 6414 4.7L LED Slow Cooker

INSTRUCTION MANUAL

Introduction

Thank you for choosing the Camry CR 6414 4.7L LED Slow Cooker. This appliance is designed to simplify your cooking process, allowing you to prepare delicious and nutritious meals with minimal effort. Slow cooking at lower temperatures helps retain the nutritional value and enhance the flavors of your ingredients. Please read this manual thoroughly before first use to ensure safe and optimal operation.

Important Safety Instructions

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

1. Read all instructions before using this appliance.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock, do not immerse the base unit, cord, or plug in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
12. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
13. Do not use appliance for other than intended use.

14. Avoid sudden temperature changes, such as adding refrigerated foods into a heated pot.

Product Overview

The Camry CR 6414 Slow Cooker features a durable stainless steel housing, a removable ceramic cooking pot, and a digital control panel for easy operation. Its 4.7-liter capacity is ideal for preparing meals for up to 8 portions.



This image displays the Camry CR 6414 Slow Cooker filled with a meal, highlighting its oval shape, stainless steel exterior, and the digital control panel on the front. The black ceramic pot is visible, containing a stew with fish, mussels, and red peppers.

Components:

- **Stainless Steel Housing:** The main body of the slow cooker.
- **Removable Ceramic Pot:** The inner pot where food is cooked.
- **Glass Lid:** Allows you to monitor cooking progress.
- **Cool-Touch Handles:** For safe handling of the appliance.
- **Digital Control Panel:** For setting cooking time and temperature.

Setup

1. **Unpacking:** Carefully remove the slow cooker and all its components from the packaging. Retain packaging for future storage or transport.
2. **Initial Cleaning:** Before first use, wash the ceramic pot and glass lid in warm, soapy water. Rinse thoroughly and dry. Wipe the exterior of the stainless steel housing with a damp cloth. Do not immerse the housing in water.
3. **Placement:** Place the slow cooker on a stable, flat, heat-resistant surface, away from walls and other appliances to ensure proper ventilation. Ensure the power cord is not obstructed or near hot surfaces.
4. **Assembly:** Place the clean ceramic pot into the stainless steel housing.

Operating Instructions

The Camry CR 6414 Slow Cooker offers simple digital controls for setting your desired cooking parameters.

1. **Prepare Ingredients:** Place your ingredients into the ceramic pot. The 4.7L capacity allows for preparing up to 8 portions. Ensure the pot is not overfilled; leave at least an inch of space from the rim to prevent boil-overs.
2. **Secure Lid:** Place the glass lid onto the ceramic pot.
3. **Connect Power:** Plug the slow cooker into a standard electrical outlet. The LED display will illuminate.
4. **Select Mode:** Use the 'MODE' button on the digital control panel to select your desired cooking setting (e.g., LOW, HIGH, WARM).
5. **Set Time:** Use the 'TIMER' buttons (up/down arrows) to adjust the cooking duration. The LED display will show the set time.
6. **Start Cooking:** The slow cooker will begin cooking automatically after the time and mode are set.
7. **Monitor Progress:** The transparent glass lid allows you to check on your food without releasing heat.
8. **Serving:** Once cooking is complete, the slow cooker may automatically switch to a 'WARM' setting (if available). Use the cool-touch handles to safely transport the ceramic pot to a serving area.

Maintenance and Cleaning

Regular cleaning ensures the longevity and hygienic operation of your slow cooker.

- **Before Cleaning:** Always unplug the slow cooker from the power outlet and allow it to cool completely before cleaning.
- **Ceramic Pot and Lid:** The removable ceramic pot and glass lid are dishwasher safe. Alternatively, they can be washed by hand with warm, soapy water and a non-abrasive sponge. Rinse thoroughly and dry completely.
- **Housing:** Wipe the exterior stainless steel housing with a soft, damp cloth. For stubborn stains, a mild non-abrasive cleaner can be used. Do not use harsh chemicals or abrasive pads, as these can damage the finish. Never immerse the housing in water or any other liquid.
- **Digital Display:** Gently wipe the digital display with a soft, dry cloth. Avoid spraying cleaners directly onto the display.
- **Storage:** Ensure all parts are clean and dry before storing. Store the slow cooker in a dry place.

Troubleshooting

If you encounter any issues with your Camry CR 6414 Slow Cooker, please refer to the following common problems and solutions:

- **Appliance does not turn on:**
 - Ensure the power cord is securely plugged into a working electrical outlet.
 - Check your household circuit breaker or fuse box.
- **Food is not cooking properly:**
 - Verify that the correct temperature setting (LOW/HIGH) and cooking time have been selected.
 - Ensure the lid is properly seated to prevent heat loss.
 - Avoid lifting the lid frequently, as this can extend cooking times.
- **Stains on the metal container:**
 - If cooking juices boil over and stain the metal housing, clean immediately after the unit has cooled.
 - To prevent boil-overs, avoid filling the ceramic pot more than two-thirds full.
- **Food sticking to the ceramic pot:**
 - Ensure you are using enough liquid in your recipe.
 - For easier cleaning, you may lightly grease the inside of the ceramic pot before adding ingredients.

Specifications

Model Number:	CR 6414
Brand:	CAMRY
Capacity:	4.7 Liters
Power:	270 Watts
Voltage:	220 Volts
Material:	Stainless Steel (housing), Ceramic (pot)
Dimensions (L x W x H):	36.5 x 24.8 x 32.4 cm
Weight:	5 Kilograms
Features:	Digital display, Automatic shut-off (implied by digital control)

Warranty and Support

For warranty information or technical support, please refer to the documentation provided at the time of purchase or contact your retailer. Keep your proof of purchase for any warranty claims.