

IGLO3 Cordless Hand Mixer & Mini Food Processor

IGLO3 Cordless Hand Mixer & Mini Food Processor Instruction Manual

Model: Cordless Hand Mixer & Mini Food Processor (ASIN: B0C78LX18Y)

Brand: IGLO3

1. INTRODUCTION AND OVERVIEW

Thank you for choosing the IGLO3 Cordless Hand Mixer & Mini Food Processor. This versatile appliance is designed to simplify your kitchen tasks, offering the convenience of cordless operation for mixing, beating, and chopping. Its compact and lightweight design ensures comfortable handling and easy storage, making it an essential tool for any home cook.

The device features a rechargeable battery, multiple speed settings, and durable attachments for various culinary needs.

2. PRODUCT COMPONENTS

The IGLO3 Cordless Hand Mixer & Mini Food Processor comes with the following components:

- Main Mixer Unit
- Balloon Whisk Attachment (for eggs, cream)
- Beater Attachment (for batter, dough)
- Mini Food Processor Bowl with Blade
- USB Charging Cable



Figure 2.1: All included components.

3. SETUP AND INITIAL USE

3.1. Charging the Device

Before first use, fully charge the mixer unit. Connect the provided USB cable to the charging port on the mixer and to a suitable USB power source. The 1500 mAh battery fully charges in approximately 4 hours, providing up to 80 minutes of continuous use or up to 16 uses depending on intensity.

Simplicity & Elegance

Mini Food Processor

Rich in equipment

Multiple tool setup



Figure 3.1: USB charging port.

3.2. Attaching/Detaching Accessories

To attach a whisk or beater, align the attachment shaft with the opening on the mixer unit and push firmly until it clicks into place. To detach, simply pull the attachment out. For the mini food processor, place the blade inside the bowl, add ingredients, then align the mixer unit with the top of the food processor bowl and twist to secure.



Figure 3.2: Attaching a whisk.



Figure 3.3: Assembling the mini food processor.

4. OPERATING INSTRUCTIONS

4.1. Power On/Off and Speed Control

To turn on the mixer, press the power button twice. The mixer has 3 adjustable speed modes (low, medium, high). Press the power button once to cycle through the speeds. To turn off, press and hold the power button.



Figure 4.1: Power and speed controls.

4.2. Hand Mixer Function

Use the whisk attachment for light tasks like beating eggs, whipping cream, or frothing milk. The beater attachment is suitable for mixing batters, sauces, and light doughs. Select the appropriate speed for your ingredients to achieve desired consistency.

Your browser does not support the video tag.

Video 4.1: Demonstration of the hand mixer function for various ingredients.

This video illustrates the ease of attaching the whisk, powering on the device, and mixing ingredients like eggs and cream to achieve desired textures. It also shows the food processor in action.

4.3. Mini Food Processor Function

Attach the mixer unit to the mini food processor bowl. This function is ideal for crushing, slicing, and chopping small quantities of ingredients like garlic, herbs, or nuts. Ensure the lid is securely fastened before operating.

5. MAINTENANCE AND CLEANING

The IGLO3 Cordless Hand Mixer is designed for easy cleaning. The 304 stainless steel stirring mesh (whisk/beater attachments) is durable and dishwasher-safe. The mini food processor bowl and blade are also dishwasher-safe. The main mixer unit should be wiped clean with a damp cloth; do not immerse it in water.

Your browser does not support the video tag.

Video 5.1: Cleaning the whisk attachment under running water.

This video demonstrates the simple process of rinsing the whisk attachment for quick cleaning after use.

6. TROUBLESHOOTING

- **Device not turning on:** Ensure the battery is fully charged. Press the power button twice to activate.
- **Attachments not spinning:** Verify that the attachments are correctly and securely inserted into the mixer unit.
- **Reduced performance:** Recharge the battery if performance seems low. Ensure you are using the appropriate speed setting for the task.
- **Food processor not chopping:** Check that the blade is correctly seated and the mixer unit is properly attached to the bowl. Do not overfill the bowl.

7. SPECIFICATIONS

- **Brand:** IGLO3
- **Product Dimensions:** 8.5"D x 2.4"W x 7.48"H
- **Special Feature:** Adjustable Speed Control
- **Capacity (Food Processor):** 300 Milliliters
- **Controls Type:** Plastic buttons
- **Item Weight:** 1.04 pounds
- **Material:** Plastic (body), 304 Stainless Steel (attachments)
- **Voltage:** 5 Volts
- **Wattage:** 6 watts
- **Is Dishwasher Safe:** Yes (attachments and food processor bowl/blade)

8. WARRANTY AND SUPPORT

For warranty information or product support, please refer to the packaging or contact the seller directly through your purchase platform. Keep your purchase receipt as proof of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question