

- Manuals.plus /
- > Yoidesu /
- > Yoidesu Flip Phone for Seniors User Manual

Yoidesu Yoidesud36tzfn8bm-11

Yoidesu Flip Phone for Seniors User Manual

Brand: Yoidesu | Model: Yoidesud36tzfn8bm-11

INTRODUCTION

This manual provides comprehensive instructions for the operation and maintenance of your Yoidesu Flip Phone for Seniors. Designed with ease of use in mind, this phone features a large screen, big buttons, and essential functions tailored for elderly users, including an SOS button and one-touch family dialing. Please read this manual thoroughly to ensure proper usage and to maximize the phone's capabilities.



Image: The Yoidesu Flip Phone in its closed position, displaying the time '1:02' on its external screen. The phone features a sleek black and gold design with a visible keypad underneath the flip cover.

KEY FEATURES OVERVIEW

- **Flip Design:** Compact and protective, easy to answer and end calls by flipping open or closed.
- **Large 2.8-inch Screen:** Clear display with large characters for easy readability.
- **Big Buttons:** Ergonomically designed large keypad for comfortable and accurate dialing.
- **Long Standby Battery:** Equipped with a 5900mAh battery for extended usage time.
- **SOS Function:** One-click emergency button for immediate assistance.
- **Dual SIM Card Support:** Allows for two SIM cards to be used simultaneously.
- **LED Flashlight:** Built-in flashlight for convenience in low-light conditions.
- **Voice King Feature:** Enhanced audio for calls and ringtones.
- **MP3 Player & Camera:** Basic multimedia functions included.

EVERYTHING YOU WANT

The operation is simple and easy to understand



Image: An illustration of the Yeidesu Flip Phone highlighting its main features, including flip design, big buttons, long standby, LED flashlight, dual SIM support, and family number dialing.

SETUP GUIDE

1. Package Contents

Before proceeding, please ensure all items are present in the package:

- Yoidesu Flip Phone
- USB Cable
- (Optional: Protective Leather Case, if included with your purchase)

2. SIM Card and Battery Installation

1. **Open the Phone:** Gently open the back cover of the phone.
2. **Insert SIM Card(s):** Locate the SIM card slots. This phone supports dual SIM cards. Carefully insert your SIM card(s) into the designated slots, ensuring the gold contacts face downwards and the card is oriented correctly as indicated by the diagram near the slot.
3. **Insert Battery:** Place the 5900mAh battery into the battery compartment, aligning the gold contacts on the battery with the contacts in the phone.
4. **Close Cover:** Replace the back cover, pressing firmly until it clicks into place.



Image: A close-up view of the Yoidesu Flip Phone's interior, showing the location of the SIM card slot for proper installation.

3. Charging the Battery

Before first use, fully charge the phone's battery.

1. Connect the small end of the provided USB cable to the charging port on the phone.
2. Connect the other end of the USB cable to a compatible USB power adapter (not included) or a computer's USB port.
3. The charging indicator on the phone will illuminate. Once fully charged, the indicator may change color or turn off.

4. Powering On/Off

- **To Power On:** Press and hold the Power/End Call button (usually red) until the screen lights up.
- **To Power Off:** Press and hold the Power/End Call button until the power-off options appear, then select "Power Off" or simply hold until the phone shuts down.

OPERATING INSTRUCTIONS

1. Basic Call Functions

- **Making a Call:**
 - a. Open the flip cover.
 - b. Dial the desired phone number using the keypad.

c. Press the Call button (usually green) to initiate the call.

- **Answering a Call:**

a. When the phone rings, open the flip cover to answer the call automatically, or press the Call button.

- **Ending a Call:**

a. Press the End Call button (usually red) or close the flip cover.

- **Adjusting Call Volume:** Use the dedicated volume buttons on the side of the phone during a call to adjust the earpiece volume. The phone features a loud speaker for clear audio.

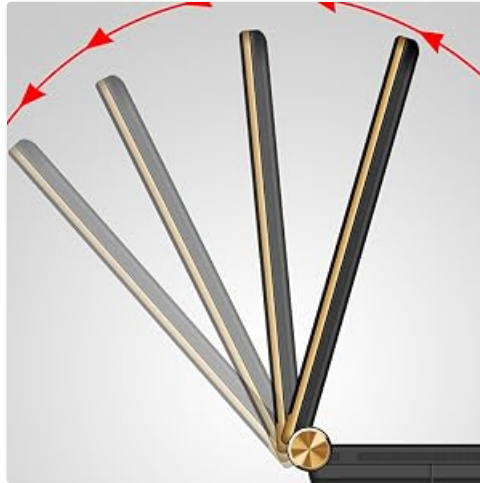


Image: A visual representation of the Yoidesu Flip Phone's stereo loudspeakers, emphasizing clear and high-volume audio output.

2. Sending and Receiving SMS Messages

- **To Send SMS:** Navigate to the "Messages" menu, select "Write Message," enter your text, and then select the recipient from your contacts or enter their number.
- **To Read SMS:** New messages will typically display a notification. Access the "Messages" menu and select "Inbox" to view received messages.

3. Keypad Functions and Shortcuts

The large keypad buttons are designed for easy use. Some keys have special functions when long-pressed:

- **Long press Key 9:** Activates the voice recorder.
- **Long press # Key:** Toggles mute on/off during a call or mutes ringtone when idle.
- **Long press Key 7:** Displays the current time.
- **Long press Key 8:** Opens the calendar.



Image: A detailed view of the phone's keypad, illustrating the one-touch family dialing keys (1-6) and explaining the functions of long-pressing keys 7, 8, and 9.

4. One-Touch Family Number Dialing

This feature allows you to quickly dial up to six pre-set family numbers with a single press.

1. Setting Up Family Numbers:

- Go to the "Settings" or "Phonebook" menu.
- Look for "Family Numbers," "Speed Dial," or a similar option.
- Assign a contact to each of the keys (1-6). Follow the on-screen prompts to save the numbers.

2. Using Family Numbers:

- Simply long-press the assigned number key (1-6) to automatically dial the corresponding family member.



Image: The phone's keypad illustrating the quick dial feature for family numbers, with keys 1 through 6 designated for pre-set contacts.

5. SOS Emergency Function

The SOS button provides a quick way to contact emergency numbers in critical situations.

1. Setting Up SOS Numbers:

- Go to the "Settings" or "SOS Settings" menu.
- Add up to 3-5 emergency contacts. These contacts will be called sequentially until one answers.
- You can also set a custom emergency SMS message that will be sent to these contacts along with your location (if GPS is enabled and supported by network).

2. Activating SOS:

- In an emergency, long-press the dedicated SOS button (usually located on the back or side of the phone).
- The phone will automatically dial the pre-set emergency numbers and send the emergency SMS.

SOS ONE CLICK HELP

Emergency contact can be set up, call at the same time,
SMS automatically send positioning
Help comes more timely



Image: The Yoidesu Flip Phone displaying the prominent "SOS One Click" button, indicating its emergency call feature.

6. Flashlight

To turn the LED flashlight on or off, locate the dedicated flashlight button or a shortcut key (refer to your phone's specific key mapping if not obvious).



Image: The Yoidesu Flip Phone with its LED flashlight activated, emitting a bright beam of light.

7. Camera and MP3 Player

- **Camera:** Access the camera application from the main menu to take photos. Photos are saved to the phone's internal memory or an inserted memory card (if supported).
- **MP3 Player:** Use the MP3 player to listen to music files stored on the phone or a memory card. Connect headphones for private listening or use the loud speaker.

8. Display Features

The phone features a 2.8-inch large screen display with clear, large fonts, making it easy to read numbers and text. The color display is designed to be mild and not dazzling for comfortable viewing.

BIG SCREEN CHARACTERS ARE NOT AFRAID TO SEE CLEARLY

Key and font design, parents see more clearly
Press more accurately



Image: The phone's screen displaying large, clear numbers and text, illustrating the 2.8-inch display and large font size for enhanced readability.

MAINTENANCE

Proper care ensures the longevity of your Yoidesu Flip Phone.

- **Cleaning:** Use a soft, dry cloth to clean the phone's exterior. Avoid using liquid cleaners or abrasive materials.
- **Battery Care:**
 - Avoid extreme temperatures, which can degrade battery performance.
 - Do not expose the battery to water or fire.
 - If the phone will not be used for an extended period, charge it to about 50% before storing.
- **Storage:** Store the phone in a cool, dry place away from direct sunlight and excessive dust.
- **Protective Case:** If your phone came with a protective leather case, use it to guard against drops and impacts. The case often includes a belt strap mounting buckle for convenient carrying.



PROTECTIVE LEATHER CASE

Drop-proof and shock-proof leather mobile phone protection case with a belt buckle on the back, bolted to the waist, very convenient.

Image: The Yoidesu Flip Phone shown with its protective leather case, highlighting the belt strap mounting buckle for secure attachment.

TROUBLESHOOTING

If you encounter issues with your phone, refer to the following common problems and solutions:

Problem	Possible Cause / Solution
Phone does not power on.	Battery is depleted. Charge the phone for at least 30 minutes. Ensure battery is correctly installed.
Cannot make or receive calls.	SIM card not properly inserted or activated. Check SIM card installation. Contact your mobile carrier to ensure your SIM card is active and your plan supports 2G/3G GSM networks. This phone may not be compatible with 4G/5G only networks (e.g., some AT&T plans).
Low call volume or faint sound.	Volume settings are too low. Adjust volume using the side buttons during a call. Ensure the speaker is not obstructed.

Problem	Possible Cause / Solution
Phone does not connect to the internet.	This phone is primarily designed for voice calls and SMS. Internet connectivity (if available) may be limited to basic WAP browsing and depends on carrier support for 2G/3G data. It is not designed for modern internet usage.
SIM card becomes invalid.	This can sometimes occur due to network changes or phone malfunction. Try reinserting the SIM card. If the issue persists, contact your mobile carrier.

If the problem persists after trying these solutions, please contact Yoidesu customer support for further assistance.

SPECIFICATIONS

Feature	Detail
Model Number	Yoidesud36tzfn8bm-11
Screen Size	2.8 Inches
Resolution	320 x 480
Battery Capacity	5900 Milliamp Hours
RAM Memory Installed Size	32 MB
Memory Storage Capacity	32 MB
Cellular Technology	GSM (Note: Compatibility with specific carriers depends on their network support for 2G/3G GSM.)
Wireless Carrier	Unlocked (Requires compatible GSM network)
Connectivity Technology	USB
Human Interface Input	Buttons
Form Factor	Flip
Color	Black
Manufacturer	Yoidesu
Date First Available	June 6, 2023

WARRANTY AND SUPPORT

Yoidesu products are manufactured to high quality standards. For information regarding warranty coverage, please refer to the documentation included with your purchase or visit the official Yoidesu website.

For technical support, troubleshooting assistance beyond this manual, or warranty claims, please contact Yoidesu customer service through their official channels. Keep your purchase receipt and product model number handy when contacting support.

IMPORTANT SAFETY INFORMATION

Please dispose of packaging materials properly after use to avoid choking hazard.



1 Warning

Please dispose of the packaging materials properly after use to avoid choking hazard.

2 Warnung

Bitte entsorgen Sie das Verpackungsmaterial nach Gebrauch ordnungsgemäß, um Erstickungsgefahr zu vermeiden.

3 Avertissement

Veuillez jeter les matériaux d'emballage correctement après utilisation pour éviter tout risque d'étouffement.

4 Advertencia

Deseche los materiales de embalaje adecuadamente después de su uso para evitar peligro de asfixia.

5 Ostrzeżenie

Po użyciu należy odpowiednio zutylizować materiały opakowaniowe, aby uniknąć ryzyka zadławienia.

6 Waarschuwing

Gooi de verpakkingsmaterialen na gebruik op de juiste manier weg om verstikkingsgevaar te voorkomen.

7 Varning

Kassera förpackningsmaterialet på rätt sätt efter användning för att undvika kvävningsrisk.

8 Attenzione

Smaltire correttamente i materiali di imballaggio dopo l'uso per evitare rischi di soffocamento.

9 Uyarı

Boğulma tehlikesini önlemek için lütfen kullanımdan sonra ambalaj malzemelerini uygun şekilde atın.

Image: A warning graphic advising proper disposal of packaging materials to prevent choking hazards.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0C794GSCX>

More documents and user manuals: <https://manuals.plus/>