

[Manuals.plus](#) /

› [BLACK+DECKER](#) /

› BLACK+DECKER Grand Digital AeroFry Air Fryer 4.3L AF700-B5 User Manual

BLACK+DECKER AF700-B5

BLACK+DECKER Grand Digital AeroFry Air Fryer 4.3L AF700-B5 User Manual

Model: AF700-B5

1. INTRODUCTION

Thank you for choosing the BLACK+DECKER Grand Digital AeroFry Air Fryer. This appliance is designed to provide a convenient and efficient way to prepare a variety of meals with less oil, promoting a healthier lifestyle. This manual provides essential information for the safe and effective use, maintenance, and troubleshooting of your air fryer. Please read it thoroughly before first use and retain it for future reference.

Guilt-free cooking

This air fryer is designed to function even without oil! It uses hot air to fry, bake and grill food, creating a guilt-free cooking experience. It is equipped with a removable and dishwasher-safe frying basket with a sliding lock guard for hassle-free cleaning.



Image 1.1: The BLACK+DECKER Grand Digital AeroFry Air Fryer preparing a meal.

The BLACK+DECKER Grand Digital AeroFry Air Fryer (AF700-B5) features a 4.3-liter capacity and utilizes Rapid Air Convection Technology for fast and even cooking. Its digital controls allow for precise temperature and time adjustments, making it suitable for various cooking needs.

2. PRODUCT OVERVIEW

2.1 Components

- **Main Unit:** Houses the heating element and fan.
- **Control Panel:** Digital display with touch controls for time, temperature, and pre-set modes.
- **Frying Basket:** Removable, non-stick basket for holding food.
- **Basket Handle:** For safe removal and insertion of the frying basket.
- **Sliding Lock Guard:** Secures the basket to prevent accidental detachment.



Image 2.1: Overview of the BLACK+DECKER Grand Digital AeroFry Air Fryer with its basket.

2.2 Control Panel

The digital touch control panel allows for easy operation. It includes:

- **Power Button:** To turn the appliance on/off.
- **Temperature Control:** Adjusts cooking temperature (80°C - 200°C).
- **Time Control:** Sets cooking duration (up to 60 minutes).
- **Mode Selection:** Cycles through 7 pre-set cooking modes.
- **LED Display:** Shows current temperature, time, and selected mode.



Additional features

- Brushed matte finish with cool-touch housing and handle
- Touch control with LED display
- 7 pre-set modes
- 60-minute timer and intelligent auto-off

Image 2.2: Detailed view of the digital touch control panel.

3. SETUP AND FIRST USE

3.1 Unpacking

1. Remove all packaging materials, stickers, and labels from the appliance.
2. Check that all components are present and undamaged.

3.2 Cleaning Before First Use

1. Wipe the exterior of the appliance with a damp cloth.
2. Clean the frying basket and pan with hot water, dish soap, and a non-abrasive sponge. Rinse thoroughly and dry completely.
3. Do not immerse the main unit in water or any other liquid.

3.3 Placement

- Place the air fryer on a stable, heat-resistant surface.
- Ensure there is adequate space (at least 10 cm) around the appliance for proper ventilation.
- Do not place the air fryer near flammable materials or heat sources.

4. OPERATING INSTRUCTIONS

4.1 Basic Operation

1. Plug the power cord into a grounded wall outlet.
2. Carefully pull the frying basket out of the air fryer.
3. Place your ingredients into the frying basket. Do not exceed the MAX fill line.
4. Slide the frying basket back into the air fryer until it clicks into place.
5. Press the Power button to turn on the appliance. The display will illuminate.
6. Use the temperature and time control buttons to set your desired cooking parameters.

7. Alternatively, select one of the 7 pre-set modes by pressing the Mode button.
8. Press the Start/Pause button to begin cooking.
9. During cooking, you can pull out the basket to shake or turn food. The air fryer will pause automatically and resume when the basket is reinserted.
10. Once the timer reaches zero, the air fryer will beep, indicating cooking is complete.
11. Carefully pull out the basket and empty the cooked food onto a plate.

Take the right step towards a healthy lifestyle with the BLACK+DECKER Grand Digital AeroFry Air Fryer (AF700-B5). With a 4.3L capacity and Rapid Air Convection Technology, this air fryer strikes the right balance between flavour and health.



Image 4.1: The air fryer in operation, demonstrating its capacity for foods like fries.

4.2 Rapid Air Convection Technology

The air fryer utilizes Rapid Air Convection Technology, which circulates hot air rapidly around the food. This ensures fast, even cooking and a crispy texture with minimal to no added oil.

5. COOKING GUIDE

The BLACK+DECKER Grand Digital AeroFry Air Fryer is versatile and can be used for frying, baking, grilling, and roasting. Here are some general tips:

- **Preheating:** For best results, preheat the air fryer for 3-5 minutes at the desired temperature before adding food.
- **Oil Usage:** While designed for oil-free cooking, a small amount of oil (1-2 teaspoons) can be added to some foods for extra crispiness.
- **Shaking/Tossing:** For even cooking, shake or toss smaller items (like fries or nuggets) halfway through the cooking time. Larger items may require flipping.
- **Batch Cooking:** Avoid overcrowding the basket. Cook in smaller batches if necessary to ensure proper air circulation and even cooking.
- **Doneness:** Always ensure food is cooked to a safe internal temperature.



Rapid Air Convention

The digital temperature control helps you set the right temperature (80°-200°C) required for your dish, while the smart cook function saves your favourite cooking combination for a one-touch quick start. Plus, the Rapid Air Convention heating inside the fryer results in fast and even cooking.

Image 5.1: Examples of various dishes that can be prepared using the air fryer.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer.

6.1 Cleaning Procedure

1. Unplug the air fryer and allow it to cool completely before cleaning.
2. Remove the frying basket. The basket is removable and dishwasher-safe for easy cleaning.
3. Clean the frying basket and pan with hot water, dish soap, and a non-abrasive sponge. For stubborn residue, soak in hot soapy water for 10-15 minutes.
4. Wipe the exterior of the air fryer with a damp cloth. Do not use abrasive cleaners.
5. Clean the interior of the appliance with a damp cloth and mild detergent.
6. Ensure all parts are completely dry before reassembling and storing.

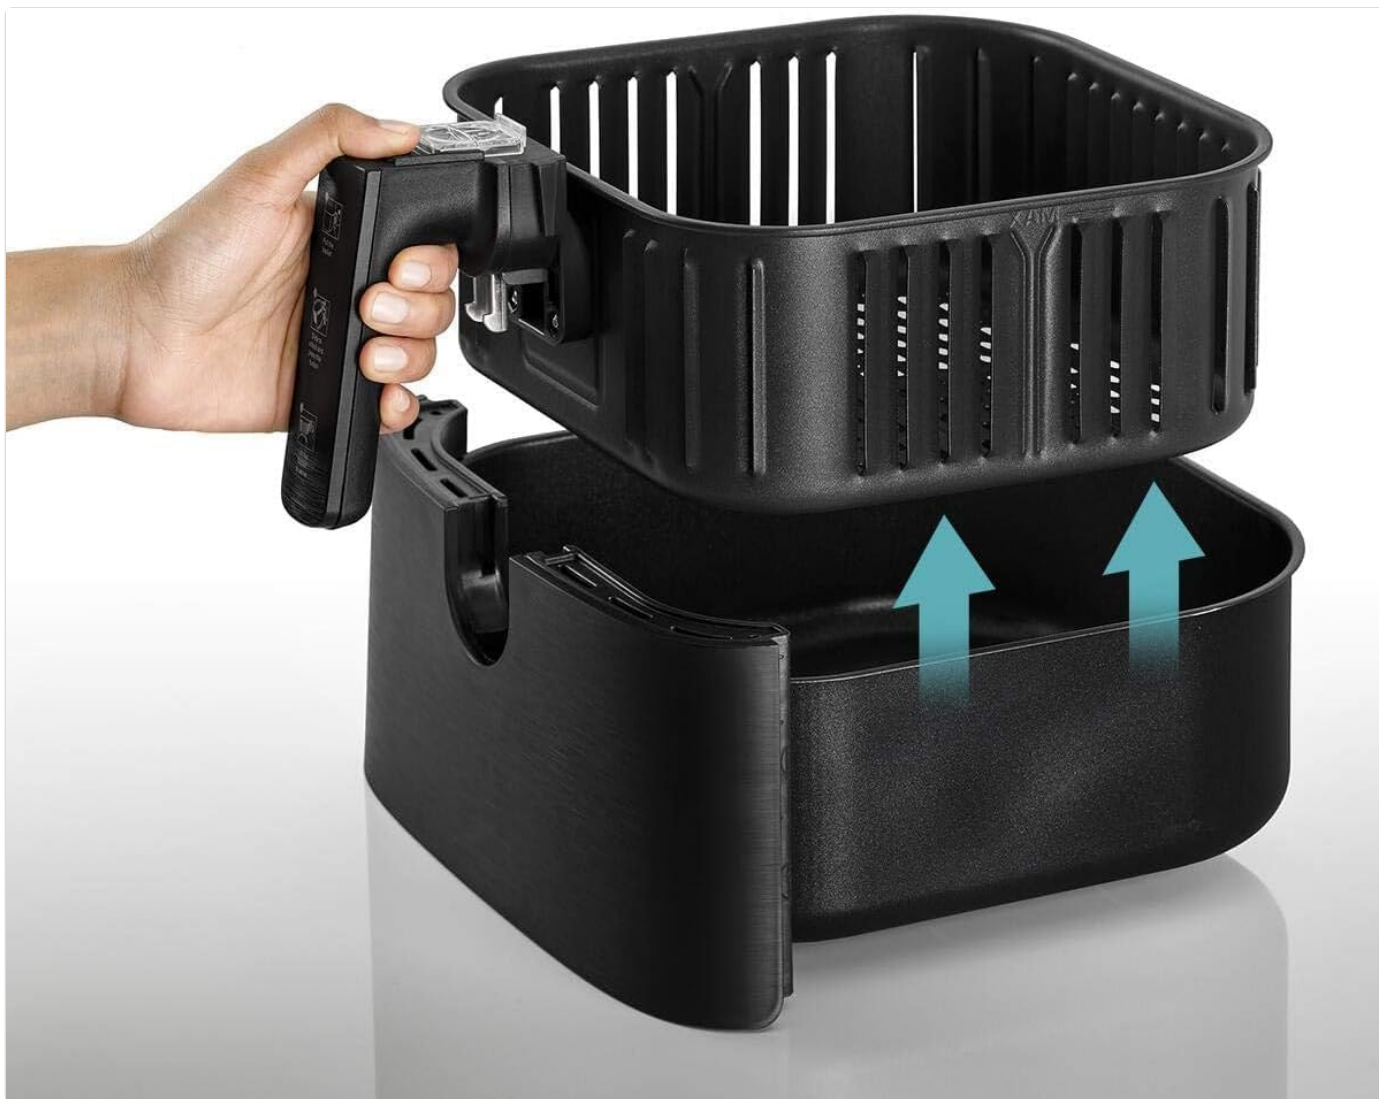


Image 6.1: Demonstrating the removal of the frying basket for cleaning.

6.2 Storage

Store the cleaned and dried air fryer in a cool, dry place.

7. TROUBLESHOOTING

If you encounter issues with your air fryer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Air fryer does not turn on.	Not plugged in; power outlet issue; appliance fault.	Ensure power cord is securely plugged in. Test outlet with another appliance. If problem persists, contact customer support.
Food is not cooked evenly.	Basket overcrowded; food not shaken/flipped.	Cook in smaller batches. Shake or flip food halfway through cooking.
White smoke coming from appliance.	Grease residue from previous use; high-fat food.	Clean the basket and pan thoroughly. For high-fat foods, drain excess fat during cooking.
Food is not crispy.	Too much moisture; not enough oil (for certain foods).	Pat food dry before cooking. Lightly brush with oil if desired. Ensure basket is not overcrowded.

If the issue is not resolved by the above steps, please contact customer support.

8. SPECIFICATIONS

- **Brand:** BLACK+DECKER
- **Model Number:** AF700-B5
- **Capacity:** 4.3 Liters
- **Power / Wattage:** 1800 watts
- **Voltage:** 240 Volts
- **Color:** Black
- **Material:** Aluminum, Plastic
- **Product Dimensions:** 34.8 x 34.8 x 34.8 cm
- **Item Weight:** 6.65 Kilograms
- **Special Features:** Temperature Control, Digital Display, 7 Pre-set Modes, 60-minute Timer, Auto-off

9. WARRANTY AND SUPPORT

This BLACK+DECKER Grand Digital AeroFry Air Fryer AF700-B5 comes with an International Warranty. Please refer to the warranty card included in your product packaging for specific terms, conditions, and duration of the warranty in your region. For technical support, service, or warranty claims, please contact your local BLACK+DECKER authorized service center or the retailer from whom you purchased the product. Keep your proof of purchase for warranty validation.

© 2023 BLACK+DECKER. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question