

Klipsch The Three Plus

Klipsch The Three Plus Bluetooth Speaker System User Manual

Model: The Three Plus (1064667)

INTRODUCTION

Welcome to the Klipsch The Three Plus Premium Bluetooth Speaker System. This manual provides essential information for the proper setup, operation, and maintenance of your new audio device. Designed with a blend of classic aesthetics and modern technology, The Three Plus delivers a powerful and detailed sound experience.

Please read this manual thoroughly before using your speaker system to ensure optimal performance and longevity.

PRODUCT OVERVIEW

The Klipsch The Three Plus is a sophisticated 2.1 stereo system, bi-amplified for audiophile-grade resolution. It features dual 2.25-inch full-range drivers and a 5.25-inch high-excursion woofer, designed to fill larger spaces with rich, dynamic sound. The speaker incorporates luxury materials such as real wood veneer and tactile switches and knobs, reflecting a heritage-inspired design.

Key Features:

- **Powerful 2.1 Stereo Sound:** Bi-amplified system with dual 2.25" full-range drivers and a 5.25" high-excursion woofer.
- **Premium Design:** Real wood veneer, tactile switches, and knobs for a classic aesthetic.
- **Versatile Connectivity:** Includes Phono/RCA inputs for turntables, USB-C for playback and reverse charging, and Optical input.
- **Advanced Bluetooth:** Bluetooth 5.3 wireless technology for up to 40 feet of range.
- **Klipsch Connect App:** Customize EQ settings, save presets, and access firmware updates.
- **Broadcast Mode:** Wirelessly connect 10+ individual Klipsch The Three Plus speakers for a multi-speaker sound experience.

Product Views:



Front view of the Klipsch The Three Plus speaker, showcasing its walnut top panel and gray fabric grille.




Side view of the Klipsch The Three Plus speaker, emphasizing its compact design.



Rear view displaying the AC power input, USB-C, Optical, RCA (Phono/Line), and ground terminal.



Top panel controls: power button, Bluetooth pairing button, and volume scroll wheel.

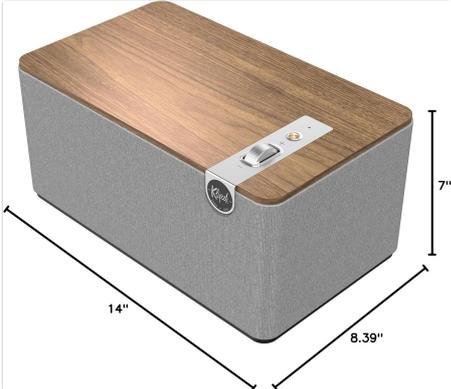

Dimensions of the speaker: 14" W x 8.39" D

Official Product Video:

Your browser does not support the video tag.

This video provides a brief overview of the Klipsch The Three Plus speaker, highlighting its design and features.

SETUP

1. **Unpacking:** Carefully remove the speaker and all accessories from the packaging. Retain the packaging for future transport or storage.
2. **Placement:** Place the speaker on a stable, flat surface, such as a tabletop. Ensure adequate ventilation around the unit.
3. **Power Connection:** Connect the included power cord to the AC IN port on the rear of the speaker, then plug it into a standard 120V AC wall outlet.
4. **Initial Power On:** Locate the power button on the top panel. Press and hold it for a few seconds until the indicator light illuminates, indicating the speaker is powered on.

OPERATING INSTRUCTIONS

Bluetooth Pairing:

1. Ensure the speaker is powered on.
2. Press the Bluetooth button on the top panel. The indicator light will begin to flash, signifying that the speaker is in pairing mode.
3. On your smartphone, tablet, or laptop, navigate to the Bluetooth settings.
4. Select "Klipsch The Three Plus" from the list of available devices.
5. Once connected, the indicator light on the speaker will turn solid. You can now stream audio wirelessly from up to 40 feet away.

Using the Klipsch Connect App:

- Download the Klipsch Connect App from your device's app store.
- Open the app and follow the on-screen instructions to connect to your Klipsch The Three Plus speaker.
- The app allows you to customize EQ settings, save favorite presets, and receive future firmware updates.

Wired Connections:

- **USB-C Input:** Connect compatible devices via a USB-C cable for audio playback and reverse charging.
- **Optical Input:** Use an optical cable to connect digital audio sources like TVs or CD players.
- **RCA (Phono/Line) Input:** Connect a turntable using the RCA inputs. Ensure the PHONO/LINE switch on the rear panel is set correctly for your device. Use the GND terminal for turntable grounding if necessary.

Broadcast Mode:

To create a multi-speaker sound experience, activate Broadcast Mode. This feature allows you to wirelessly connect 10 or more individual Klipsch The Three Plus speakers. Refer to the Klipsch Connect App or the official Klipsch website for detailed instructions on setting up Broadcast Mode.

Volume Control:

Adjust the speaker's volume using the scroll wheel located on the top panel. Rotate it upwards to increase volume and downwards to decrease it.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the wood veneer and fabric grille. Avoid using abrasive cleaners or solvents.
- **Dusting:** Regularly dust the speaker to prevent accumulation, especially on the fabric grille.
- **Placement:** Avoid placing the speaker in direct sunlight, near heat sources, or in areas with high humidity.
- **Handling:** Handle the speaker with care to prevent damage to its components or finish.

TROUBLESHOOTING

Problem	Possible Solution
No power	Ensure the power cord is securely connected to both the speaker and a working wall outlet. Check if the outlet is receiving power.
No sound	Check the volume level on both the speaker and your connected device. Ensure the correct input source is selected. Verify all audio cables are properly connected.
Bluetooth connection issues	Ensure the speaker is in pairing mode. Turn off and on Bluetooth on your device. Move your device closer to the speaker (within 40 feet). Disconnect and re-pair the device.
Klipsch Connect App not working	Ensure your speaker is powered on and connected via Bluetooth. Update the app to the latest version. Restart your mobile device.
Distorted sound	Reduce the volume on both the speaker and the source device. Check audio source quality. Ensure cables are not damaged.

SPECIFICATIONS

Feature	Detail
Model Name	The Three Plus
Item Model Number	1064667
Brand	Klipsch
Speaker Type	Component
Audio Configuration	2.1 Stereo Sound

Feature	Detail
Speaker Maximum Output Power	120 Watts
Frequency Response	Up to 20 KHz
Audio Driver Type	Dynamic Driver
Woofer Diameter	5.25 Inches
Wireless Communication Technology	Bluetooth 5.3
Bluetooth Range	40 Feet
Connectivity Technology	Optical, RCA (Phono/Line), USB-C
Control Method	App, Manual Controls
Power Source	Corded Electric
Input Voltage	120 Volts
Material	Wood
Color (Variant)	Walnut
Product Dimensions	8.39"D x 14"W x 7"H
Item Weight	10.6 Pounds
Mounting Type	Tabletop Mount
Water Resistance Level	Not Water Resistant
Included Components	Bluetooth speaker
UPC	743878053401

WARRANTY INFORMATION

The Klipsch The Three Plus speaker system comes with a Limited Warranty. For specific terms, conditions, and duration of your warranty, please refer to the warranty card included with your product or visit the official Klipsch website. Keep your proof of purchase for warranty claims.

SUPPORT

For further assistance, technical support, or to access additional resources, please visit the official Klipsch website at www.klipsch.com. You may also contact Klipsch customer service through the contact information provided on their website.

