
[Manuals.plus](#) /

› [Klipsch](#) /

› Klipsch The One Plus Premium Bluetooth Speaker System User Manual

Klipsch THE-ONE-PLUS-MB

Klipsch The One Plus Premium Bluetooth Speaker System

MODEL: THE-ONE-PLUS-MB

User Instruction Manual

INTRODUCTION

The Klipsch The One Plus is a premium Bluetooth speaker system designed to deliver high-fidelity audio with a classic aesthetic. It features luxurious materials such as real wood veneer and tactile controls, blending timeless design with modern technology. This manual will guide you through the setup, operation, and maintenance of your speaker to ensure you get the best possible sound experience.



Figure 1: Klipsch The One Plus Premium Bluetooth Speaker, Matte Black.

WHAT'S IN THE BOX

Upon unboxing your Klipsch The One Plus speaker, please ensure all the following items are present:

- Klipsch The One Plus Bluetooth Speaker
- Power Cable
- Quick Start Guide / Instruction Manual
- Optional AUX Cable (may vary by region/package)

CONTROLS AND CONNECTIONS

Top Panel Controls



Figure 2: Top panel controls including power button and volume rocker.

- **Power Button:** Press to turn the speaker on or off.
- **Volume Rocker:** Adjusts the master volume level.
- **Source Select:** Button to cycle through input sources (Bluetooth, AUX, USB-C).

Rear Panel Connections



Figure 3: Rear panel connections for power, USB-C, and AUX input.

- **AC IN:** Connect the provided power cable here.
- **USB-C:** For audio playback from compatible devices and reverse charging.
- **AUX:** 3.5mm auxiliary input for wired audio connections.

SETUP

1. **Placement:** Place the Klipsch The One Plus speaker on a stable, flat surface. For optimal sound, position it in a central location within your listening area.

2. **Power Connection:** Connect the power cable to the 'AC IN' port on the rear of the speaker and then plug it into a wall outlet.
3. **Power On:** Press the power button on the top panel to turn on the speaker. The indicator light will illuminate.

OPERATING INSTRUCTIONS

Bluetooth Pairing

1. Ensure the speaker is powered on and the source is set to Bluetooth (indicator light will typically blink).
2. On your mobile device, navigate to Bluetooth settings and select 'Klipsch The One Plus' from the list of available devices.
3. Once connected, the indicator light on the speaker will become solid. You can now stream audio wirelessly.

Using the Klipsch Connect App

Enhance your experience by downloading the Klipsch Connect App, available for iOS and Android devices. The app allows you to customize EQ settings, save presets, and access firmware updates.

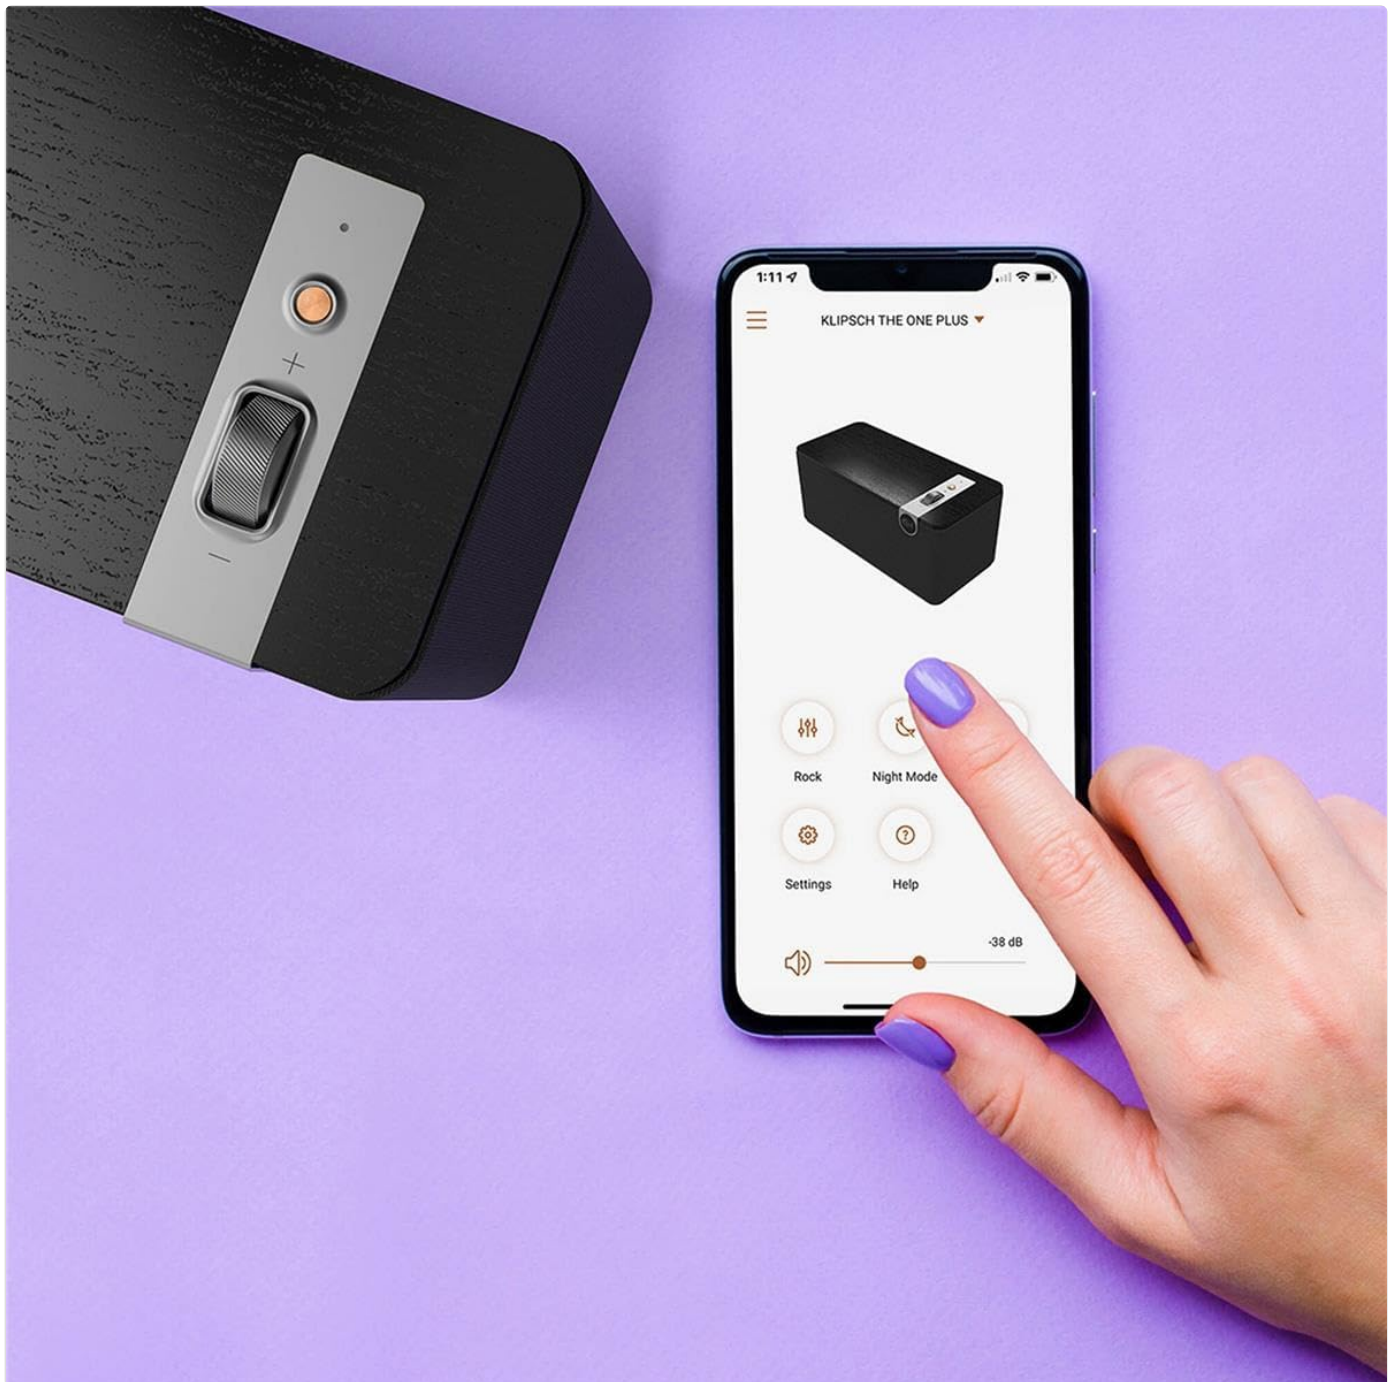


Figure 4: Klipsch Connect App interface for speaker control and customization.

1. Download and install the 'Klipsch Connect' app from your device's app store.
2. Open the app and follow the on-screen instructions to connect to your Klipsch The One Plus speaker.
3. Within the app, you can adjust equalizer settings (Bass, Mid, Treble), select audio presets (e.g., Rock, Vocal), and manage other speaker functions.

Wired Connections (USB-C & AUX)

- **USB-C:** Connect a compatible device (e.g., laptop, smartphone) to the USB-C port on the rear panel using a USB-C cable for digital audio playback. The USB-C port also supports reverse charging for your connected device.
- **AUX:** Connect any audio device with a 3.5mm output (e.g., MP3 player, CD player) to the 'AUX' input on the rear panel using a 3.5mm audio cable.

Product Overview Video

Video 1: An official overview of the Klipsch The One Plus speaker, highlighting its design and features.

Features and Comparison Video

Video 2: A detailed look at the Klipsch The One Plus and The Three Plus speakers, showcasing their capabilities and differences.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the speaker's surfaces. Avoid abrasive cleaners or solvents.
- **Dust:** Regularly dust the speaker grille and control panel to prevent accumulation.
- **Environment:** Keep the speaker away from direct sunlight, heat sources, and excessive moisture. Ensure proper ventilation around the unit.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cable not connected securely; outlet not active.	Check power cable connections; try a different outlet.
No sound	Incorrect source selected; volume too low; device not paired (Bluetooth).	Select correct input source; increase volume; re-pair Bluetooth device.
Bluetooth connection unstable	Device too far from speaker; interference.	Move device closer to speaker (within 40 feet); remove obstacles; try re-pairing.
App not connecting to speaker	Bluetooth not enabled on device; app outdated.	Ensure Bluetooth is on; update Klipsch Connect App; restart app/speaker.

SPECIFICATIONS

Feature	Detail
Model Name	The One Plus
Speaker Type	Multimedia
Connectivity Technology	Bluetooth 5.3
Wireless Range	Up to 40 feet (12 meters)
Audio Output Mode	2.1 Stereo (Biampified)
Drivers	Two 2.25" full range drivers, One 4.5" high excursion woofer
Max Output Power	100 Watts
Frequency Response	20 KHz (range not fully specified, typical for full-range speakers)
Inputs	USB-C, AUX (3.5mm)

Feature	Detail
Material	Real Wood Veneer
Color	Matter Black
Product Dimensions	6"D x 12"W x 6.39"H
Item Weight	7.92 Pounds
Control Method	Button, App (Klipsch Connect)
Power Source	Corded Electric
Is Waterproof	No

WARRANTY AND SUPPORT

For warranty information, please refer to the documentation included with your product or visit the official Klipsch website. For technical support, product registration, or further assistance, please contact Klipsch customer service through their official channels.

© 2023 Klipsch. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

