

[Manuals.plus](#) /

› [REDKEY](#) /

› REDKEY Single Electric Underblanket 150x80cm User Manual

REDKEY RK-WUB-150X80

REDKEY Single Electric Underblanket 150x80cm User Manual

Model: RK-WUB-150X80

INTRODUCTION

Thank you for choosing the REDKEY Single Electric Underblanket. This manual provides important information regarding the safe and efficient use, installation, and maintenance of your electric underblanket. Please read these instructions carefully before use and keep them for future reference.



Image: REDKEY Single Electric Underblanket. This image shows the product with its main features: single bed size (150x80cm), 7 temperature levels, washable, automatic shut-off, and overheating protection.

Package Contents:

- 1 x REDKEY Single Electric Underblanket (150x80cm)
- 1 x Control Unit with Power Cable
- 1 x User Manual (this document)
- 1 x Storage Bag

IMPORTANT SAFETY INSTRUCTIONS

WARNING: To reduce the risk of burns, electric shock, fire, and injury, this product must be used in accordance with the following instructions.

- Always ensure the electric underblanket is unplugged when not in use or before cleaning.
- Do not use with an infant, a child, an incapacitated person, a paraplegic, a quadriplegic, a diabetic, a person sensitive to heat, or anyone who cannot clearly understand the instructions and/or operate the controls.
- Do not use if wet.
- Do not use with pointed objects.
- Do not use if folded, rucked, or creased.
- Do not use if the power cord or plug is damaged. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.
- Avoid direct contact with the heating surface during use. Ensure other bedding components are placed on top of the underblanket.
- Individuals with pacemakers should not use this product.
- The product packaging may contain different information than what is shown on our website. Please always read the label, warnings, and instructions provided with the product before use.
- This underblanket is equipped with an integrated safety system that automatically switches off the underblanket in case of overheating.



Image: Overheating protection diagram. This diagram illustrates the internal heating elements and the safety certifications (CE, UKCA) indicating built-in overheating protection.

SETUP AND INSTALLATION

1. **Unpack:** Carefully remove the electric underblanket and control unit from its packaging.
2. **Positioning:** Lay the underblanket flat on your mattress. Ensure it is spread evenly without any folds or creases.
3. **Secure to Mattress:** The underblanket features elastic straps at all four corners. Secure these straps around the corners of your mattress to keep the underblanket firmly in place.



Image: Elastic straps for securing. This image demonstrates how the elastic straps on the underblanket are used to attach it securely to the mattress, preventing movement during use.

4. **Connect Control Unit:** Locate the connector on the underblanket and firmly plug in the control unit. Ensure it clicks into place.
5. **Power Connection:** Plug the power cord of the control unit into a suitable electrical outlet.
6. **Cover with Bedding:** Place your fitted sheet and other bedding on top of the electric underblanket. The underblanket is designed to be used underneath your regular bedding.

OPERATING INSTRUCTIONS

The REDKEY electric underblanket offers flexible temperature and timing settings for your comfort.



Image: Control unit overview. This image displays the control unit with its LED display, ON/OFF button, 'Time' button for setting the automatic shut-off, and 'Temp' button for adjusting temperature levels. It highlights 7 temperature levels and 1-9 hour automatic shutdown.

1. **Power On/Off:** Press the **ON/OFF** button (power symbol) to turn the underblanket on or off. The LED display will illuminate when powered on.
2. **Adjusting Temperature:**
 - Press the **Temp** button to cycle through the 7 temperature levels (1-7). Level 1 is the lowest heat, and Level 7 is the highest.
 - The current temperature level will be shown on the LED display.
3. **Setting Automatic Shut-off Timer:**

- Press the **Time** button to set the automatic shut-off timer. You can select a duration from 1 to 9 hours.
 - The selected time will be displayed on the LED.
4. **Switching Between Temperature and Timer Display:** Long press the **Time** and **Temp** buttons simultaneously for approximately two seconds to switch between displaying the set temperature and the remaining timer duration on the LED.
 5. **Automatic Temperature Reduction:** To prevent the risk of burns, the electric underblanket automatically reduces the temperature to Level 5 after 2.5 hours of continuous operation at Temperature Level 6 or 7.



Image: Intelligent temperature control. This image illustrates the automatic temperature reduction feature, where the blanket lowers its heat to Level 5 after 2.5 hours at Level 6 or 7 to ensure user safety and prevent overheating.

CARE AND MAINTENANCE

Proper care ensures the longevity and safe operation of your electric underblanket.

1. **Before Cleaning:** Always disconnect the control unit from the underblanket and unplug the power cord from the wall outlet.
2. **Detaching Control Unit:** The control unit is removable. Gently pull the connector to detach it from the underblanket.
3. **Washing:** The underblanket is machine washable.
 - Wash at a water temperature below 30°C (86°F) on a gentle cycle.
 - Do not bleach.

- Do not iron.
- Do not dry clean.



Image: Machine washable feature. This image highlights the detachable switch, allowing the underblanket to be safely machine washed.

4. **Drying:**

- Line dry or tumble dry on a low heat setting. Ensure the underblanket is completely dry before reconnecting the control unit and using it.
- Do not use clothespins or clips that could damage the internal wiring.

5. **Storage:** When not in use, store the clean and dry underblanket in its original storage bag in a cool, dry place. Avoid placing heavy objects on top of it to prevent damage to the heating elements.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Underblanket does not heat up.	Not plugged in. Control unit not properly connected. Power outage. Overheating protection activated.	Ensure the power cord is securely plugged into an outlet. Check that the control unit is firmly connected to the underblanket. Verify power supply to the outlet. Unplug the underblanket for 30 minutes, then plug it back in. If the issue persists, contact support.
Underblanket heats unevenly.	Underblanket is folded or creased.	Ensure the underblanket is spread flat on the mattress without any folds or rucks.
Control unit display is not working.	No power. Faulty control unit.	Check power connection. Contact customer support for assistance.

If you experience any issues not listed here, or if the suggested solutions do not resolve the problem, please contact REDKEY customer support.

SPECIFICATIONS

Brand	REDKEY
Model Number	RK-WUB-150X80
Dimensions	150 x 80 cm (Single)
Material	Polyester
Color	White
Power	66 Watts
Temperature Settings	7 Levels
Automatic Shut-off Timer	1-9 Hours
Special Feature	Machine Washable, Overheating Protection
Weight	1.18 kg (approx.)
Country of Origin	China

WARRANTY AND SUPPORT

REDKEY products are manufactured to high-quality standards. In the unlikely event of a defect, please refer to your purchase documentation for warranty details.

If you have any questions or require assistance with your REDKEY Electric Underblanket, please do not hesitate to contact us. Our customer service team is ready to help.

Contact Information: Please refer to the contact details provided with your purchase or visit the official REDKEY website for support.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question