

[Manuals.plus](#) /

› [FoodVille](#) /

› FoodVille MF02 Rechargeable Milk Frother Instruction Manual

FoodVille MF02

FoodVille MF02 Rechargeable Milk Frother Instruction Manual

Model: MF02 | Brand: FoodVille

INTRODUCTION

The FoodVille MF02 Rechargeable Milk Frother is a versatile handheld device designed to create silky and creamy milk foam for various beverages. Its powerful motor and multiple speed settings make it suitable for frothing milk for cappuccinos, lattes, bulletproof coffee, and mixing protein powders or matcha. This manual provides essential information for safe and effective use, maintenance, and troubleshooting.

SAFETY INFORMATION

- Keep the frother away from children.
- Do not immerse the main handle in water or other liquids.
- Use only the provided USB charging cable.
- Do not operate the frother with damaged attachments or if the device is malfunctioning.
- Avoid touching moving parts during operation.
- Ensure the frother is turned off before attaching or detaching whisks.

PACKAGE CONTENTS

- Main Handle (Rechargeable Frother Unit)
- Frother Head (Double Layer Whisk)
- Balloon Whisk Head
- Metal Stand
- USB Charging Cord



This image displays all items included in the FoodVille MF02 Milk Frother package: the main handle, two interchangeable whisk heads (frother and balloon), a metal stand for convenient storage, and a USB charging cable.

SETUP

1. **Charging:** Connect the provided USB charging cord to the charging port on the top of the main handle. Plug the other end into a compatible USB power adapter (not included). The indicator light will show charging status. A full charge provides long-lasting use.
2. **Attaching Whisk Head:** Select either the frother head or the balloon whisk head. Align the whisk shaft with the opening on the main handle and gently push until it clicks securely into place. Ensure it is firmly attached before use.
3. **Placement:** Place the frother on its metal stand when not in use for convenient storage and to allow the whisk to air dry.

Skip the Line & the Bill: 30s to a \$1 Latte.



*Based on 12oz latte: \$0.40 milk + \$0.50 coffee + \$0.10 energy vs \$5 cafe price + \$1 tip.
Save \$1,200/year if you replace 3 cafe drinks weekly!

This image highlights the long battery life of the FoodVille MF02 frother, indicating that one charge can last up to 60 days with average daily use, thanks to its 1800 mAh rechargeable battery.

OPERATING INSTRUCTIONS

- 1. Power On/Off:** Press the power button (usually the top button) to turn the frother on or off.
- 2. Speed Settings:** The frother features three adjustable speed levels: Low, Medium, and High. Press the respective buttons (Low, Mid, High) to select your desired speed.
- 3. Frothing Milk:**
 - Pour cold or warm milk into a cup or pitcher. For best results, use a container that allows enough space for the milk to expand.
 - Insert the frother head into the milk, ensuring the whisk is submerged but not touching the bottom or sides of the container.
 - Start on the Low speed setting to avoid splashing. Gradually move the frother up and down to create foam.
 - Increase to Medium or High speed for thicker, creamier foam as desired.
 - Froth until the desired consistency is achieved (typically 15-30 seconds).
- 4. Mixing Other Ingredients:**
 - Use the frother head for mixing powdered drinks like protein powder, matcha, or hot chocolate.
 - The balloon whisk head is ideal for whisking eggs or other liquid ingredients.
 - Select the appropriate speed setting based on the ingredient and desired consistency.

One Charge Lasts 60 Days (5 mins/day)

Days

60

The average daily usage
duration is 5 minutes

mah

1800

Rechargeable battery



This image illustrates the three distinct speed settings of the FoodVille MF02 frother, indicating their respective RPMs and suggested uses for different foam consistencies.

Three Speed Levels Means Possibilities



The image shows a blue FoodVille MF02 frother with a silver whisk head. On the left, the frother is shown vertically with three speed level buttons labeled 'Low', 'Mid', and 'High'. To the right of the buttons are three numbered circles (1, 2, 3) each containing a different drink. Circle 1 shows a glass of latte with the text '19000 RPM Silky Latte Froth'. Circle 2 shows a cup of cappuccino with the text '21000 RPM Creamy Cappuccino'. Circle 3 shows a cup of Dalgona Fluff with the text '23000 RPM Dalgona Fluff'.

Speed Level	RPM	Drink Example
1	19000 RPM	Silky Latte Froth
2	21000 RPM	Creamy Cappuccino
3	23000 RPM	Dalgona Fluff

This image highlights the versatility of the FoodVille MF02 frother, showcasing its two interchangeable heads: one for frothing milk and matcha, and another for whisking egg whites and mixing protein powder.

CLEANING AND MAINTENANCE

- **Detaching Whisk:** After use, turn off the frother and gently pull the whisk head straight off the main handle.
- **Washing Whisk:** Rinse the whisk head under running water immediately after use. For thorough cleaning, wash with warm, soapy water and rinse completely.
- **Cleaning Handle:** Wipe the main handle with a damp cloth. **Do not immerse the main handle in water.**
- **Drying:** Allow all parts to air dry completely before reassembling or storing. The metal stand can be used to hang the frother for drying.
- **Storage:** Store the frother and its attachments on the provided metal stand in a dry place.

Dual Heads From Coffee to Cooking



This image shows the frother whisk being cleaned under running water, emphasizing the ease of cleaning the detachable whisk head.

**4.5" Long Shaft
Fits 16 oz Tumblers.**



This image shows the FoodVille MF02 frother resting on its self-drying steel stand, illustrating convenient and hygienic storage after cleaning.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Frother not turning on	Low battery	Charge the frother using the USB cable.
Weak frothing/mixing	Low battery; Whisk head not properly attached; Insufficient liquid; Incorrect speed setting	Charge the frother; Ensure whisk is securely attached; Use adequate liquid; Select a higher speed setting.
Splashing during operation	Whisk not fully submerged; Speed setting too high for liquid volume	Ensure whisk is submerged in liquid; Start with a lower speed setting and gradually increase.
Frother stops unexpectedly	Low battery; Overheating	Charge the frother; Allow the device to cool down before resuming use.

SPECIFICATIONS

Feature	Detail
Model Name	MF02
Brand	FoodVille
Power Source	USB Charging (Rechargeable Battery)
Number of Settings	3 (Low, Mid, High)
Material	Plastic (main handle), Stainless Steel (whisk heads)
Product Dimensions	3"W x 9"H
Item Weight	8 ounces
Included Components	Main Handle, Frother Head, Balloon Whisk Head, Stand, USB Charging Cord
Product Care	Hand Wash Only (whisk heads), Wipe Clean (main handle)

WARRANTY AND SUPPORT

The FoodVille MF02 Rechargeable Milk Frother comes with a 2-year warranty. For any issues, questions, or warranty claims, please contact FoodVille customer service. Refer to your purchase documentation for specific contact details or visit the official FoodVille website.

ADDITIONAL TIPS

- For optimal frothing, use fresh, cold milk. Whole milk generally produces the richest foam.
- Experiment with different milk types (dairy, almond, oat, soy) and temperatures to find your preferred foam consistency.
- To create hot foam, warm your milk first (do not boil) before frothing.
- The frother can also be used to mix salad dressings, cocktails, or other small batches of liquid ingredients.



Decade of Froth, Perfection in Every Whisk.

FoodVille makes frother in
10 years since 2015!



This image shows the FoodVille MF02 frother being used to create a foamy latte, highlighting its ease of use for everyday beverages.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question