

[Manuals.plus](#) /

› [FoodVille](#) /

› FoodVille MF02 Rechargeable Milk Frother Instruction Manual

FoodVille MF02

FoodVille MF02 Rechargeable Milk Frother

INSTRUCTION MANUAL

Introduction

Thank you for choosing the FoodVille MF02 Rechargeable Milk Frother. This handheld foam maker is designed to create rich, creamy froth for your favorite beverages such as cappuccinos, lattes, bulletproof coffee, matcha, and protein shakes. With its powerful motor, multiple speed settings, and convenient USB charging, the MF02 offers a versatile and efficient frothing experience.

Package Contents

Please ensure all items are present in your package:

- Main Handle (Frother Body)
- Milk Frother Whisk Head (Double Layer)
- Balloon Whisk Head
- Metal Stand
- USB Charging Cord



Image: All components of the FoodVille MF02 Rechargeable Milk Frother, including the main handle, two interchangeable whisk heads (milk frother and balloon whisk), a metal stand for convenient storage, and a USB charging cable.

Specifications

Brand	FoodVille
Model Name	MF02
Special Feature	Adjustable Speed Control (3 settings)
Material	Plastic (main handle) and Stainless Steel (frother whisk head)
Product Dimensions	3"W x 9"H
Power Source	USB Charging
Battery Capacity	1800 mAh (up to 60 days of daily use, 5 mins/day)
Whisk Material	18/8 Grade Stainless Steel

Setup

- Initial Charge:** Before first use, fully charge the frother using the provided USB charging cord. The charging port is located at the top of the main handle. A full charge can last up to 60 days with typical daily use (5 minutes/day).




Join 1,124,843* Happy Coffee Lovers!



Serving More Than
500,000
families in US

*Data collects from the FoodVille sales record in 2015-2024.

Image: The FoodVille MF02 Milk Frother connected to a USB charger, illustrating its rechargeable battery feature which provides up to 60 days of use on a single charge.

- Attach Whisk Head:** Select either the milk frother whisk head or the balloon whisk head based on your needs. Gently push the desired whisk head into the connector at the bottom of the main handle until it clicks securely into place.
- Placement:** Place the frother in its metal stand for convenient storage and easy access.

Operating Instructions

The FoodVille MF02 features three adjustable speed levels to achieve your desired froth consistency.

Skip the Line & the Bill: 30s to a \$1 Latte.






1

\$

VS



6

\$

*Based on 12oz latte: \$0.40 milk + \$0.50 coffee + \$0.10 energy vs \$5 cafe price + \$1 tip.
Save \$1,200/year if you replace 3 cafe drinks weekly!

Image: The FoodVille MF02 Milk Frother highlighting its three speed settings, each suitable for different frothing needs, from silky lattes to thick Dalgona fluff.

- Prepare Liquid:** Pour your desired liquid (milk, cream, protein shake, etc.) into a cup or container. For best frothing results with milk, ensure it is cold.
- Insert Frother:** Submerge the whisk head into the liquid, ensuring it is deep enough to prevent splashing but not touching the bottom of the container.
- Select Speed:** Press the power button once to turn on the frother at the lowest speed. Press again to cycle through medium and high speeds.
- Froth:** Gently move the frother up and down in the liquid for 30-60 seconds until the desired froth consistency is achieved.

5. **Turn Off:** Press the power button until the frother turns off, or simply remove it from the liquid.

Usage Tips:

- For thicker foam, use higher fat content milk or cream.
- Avoid overfilling your cup to prevent spills, especially on higher speeds.
- The balloon whisk is ideal for mixing protein powders, eggs, or other ingredients.



1800 Mah Battery: 6-Hour Power for Weekend Getaways

**FoodVille**
1800 ⚡ mah
Use continuously for 6 hours

vs

**Other**
1200 ⚡ mah
Use continuously for 4 hours

Image: The versatility of the FoodVille MF02 is shown with its two interchangeable heads: the milk frother whisk for beverages like matcha and milk, and the balloon whisk for mixing ingredients such as egg whites and protein powder.

Demonstration Videos:

Video: A user demonstrates the FoodVille MF02 Milk Frother, showcasing its three speed settings and effectiveness in frothing heavy cream for cold foam.

Video: A user provides a review of the FoodVille MF02 Milk Frother, demonstrating its ease of use and effectiveness in creating frothed milk for coffee.

Video: A user demonstrates the FoodVille MF02 Milk Frother's power and speed in frothing egg whites, highlighting its efficiency.

Video: A user demonstrates the FoodVille MF02 Milk Frother's ability to froth milk quickly and effectively, noting its long-lasting charge.

Video: A user showcases the FoodVille MF02 Milk Frother's performance in creating smooth, frothed milk for various beverages.

Video: An honest review of the FoodVille MF02 Milk Frother, demonstrating its features and effectiveness in frothing.

Video: A user demonstrates the FoodVille Milk Frother's ability

to create foam for various drinks, highlighting its ease of use and cleaning.

Maintenance

1. **Cleaning the Whisk Heads:** After each use, detach the whisk head from the main handle. Rinse the whisk head under running water immediately. For thorough cleaning, use mild soap and water. The whisk heads are made of 18/8 grade stainless steel for durability and easy cleaning.
2. **Cleaning the Main Handle:** The main handle (motor unit) is **not** waterproof. Wipe the main handle with a damp cloth. Do not submerge the main handle in water or place it in a dishwasher.
3. **Charging:** Recharge the frother when the battery indicator light shows low power. Connect the USB charging cord to the frother's charging port and a suitable USB power source.
4. **Storage:** Store the frother in its metal stand in a dry place when not in use.

Troubleshooting

- **Frother Not Turning On:** Ensure the frother is fully charged. If the battery is low, connect it to the USB charger.
- **Weak Frothing/No Foam:**
 - Check battery level; a low battery can reduce power.
 - Ensure the whisk head is securely attached.
 - Use cold milk or cream with higher fat content for best results.
 - Adjust speed settings; higher speeds generally produce more foam.
- **Excessive Splashing:** Ensure the whisk head is adequately submerged in the liquid. Reduce speed if splashing persists.

Warranty and Support

The FoodVille MF02 Rechargeable Milk Frother comes with a 2-year warranty. For any product inquiries, technical support, or warranty claims, please contact FoodVille customer service through the retailer where you purchased the product or visit the official FoodVille website for contact information.

© 2026 FoodVille. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question