



Manuals.plus /

› Giantex /

› Giantex Electronic Wall Hidden Safe Security Box GT50957BK-HW Instruction Manual

Giantex GT50957BK-HW

Giantex Electronic Wall Hidden Safe Security Box

Model: GT50957BK-HW

Instruction Manual

IMPORTANT SAFETY INFORMATION

Please read this manual carefully before installing and operating your safe. Keep this manual for future reference.

- Do not store emergency keys inside the safe. Keep them in a secure, separate location.
- Ensure the safe is securely mounted to prevent unauthorized removal.
- Replace batteries promptly when the low battery indicator appears to avoid being locked out.
- This safe is designed for security against theft and is not fireproof or waterproof.
- Keep the safe's keypad and locking mechanism clean and free from obstructions.

PACKAGE CONTENTS

Verify that all components are present before installation.

- 1 x Giantex Electronic Wall Hidden Safe Security Box
- 2 x Emergency Keys
- 4 x Steel Screws (for mounting)
- 1 x Protective Pad (for interior)
- 1 x Instruction Manual (this document)



Figure 1: Safe dimensions and included accessories. The image displays the safe's external dimensions (22"H x 16"W x 4"D) and lists the keys, screws, and protective pad.

PRODUCT OVERVIEW

The Giantex Electronic Wall Hidden Safe Security Box is designed to provide secure storage for valuables within your home or office. Its recessed design allows it to be discreetly installed within a wall, making it less noticeable than traditional freestanding safes.

Key Features:

- **Dual Locking Mechanism:** Operates with a programmable electronic PIN code or emergency keys.
- **Solid Steel Construction:** Built from thick, robust steel with tamper-proof internal hinges for enhanced security.
- **Recessed Design:** Mounts flush within a wall, ideal for concealment behind artwork or furniture.
- **Interior Organization:** Includes two removable shelves to help organize contents.
- **Security Features:** Features a time-out period after three incorrect combination attempts to deter unauthorized access.

Dimensions:

- **External Overall Dimensions:** 22"H x 16"W x 4 1/7"D
- **Inside Dimensions:** 19"H x 13 4/5"W x 3 3/4"D
- **Door Dimensions:** 17 1/2"H x 12 1/5"W
- **Thickness of the Door:** 4mm
- **Thickness of the Box Panel:** 2mm



Figure 2: Interior view demonstrating the removable inner shelf for flexible storage.



Figure 3: Detail of the solid steel bolt locking mechanism, emphasizing the anti-theft design.

SETUP

1. Battery Installation

1. Open the safe door using one of the emergency keys.
2. Locate the battery compartment on the inside of the safe door.
3. Insert 4 x AA-size (1.5V) batteries, ensuring correct polarity. Batteries are not included.
4. Close the battery compartment cover.

2. Initial PIN Code Setting

1. With the safe door open, locate the red reset button on the inside of the door, near the hinge.
2. Press the red reset button. You will hear a beep, and the yellow indicator light on the keypad will illuminate.
3. Within 5 seconds, enter your desired 3-8 digit PIN code on the keypad.
4. Press the "A" or "B" button to confirm your new PIN code. You will hear a confirmation beep.
5. Test the new PIN code with the door open before closing it.

Hidden Recessed Design

Hide cabinet safe behind or inside your furniture



Figure 4: Location of the built-in battery box and password reset button.

3. Wall Mounting Instructions

This safe is designed to be recessed into a wall between standard 16-inch on-center wall studs. Professional installation is recommended.

1. **Choose Location:** Select a suitable location between two wall studs. Ensure there are no electrical wires, plumbing, or other obstructions within the wall cavity.
2. **Measure and Cut:** Carefully measure the dimensions of the safe's body (excluding the front flange) and mark the opening on the wall. Cut the drywall or other wall material to create the opening.
3. **Insert Safe:** Gently slide the safe into the prepared wall opening. The front flange of the safe should sit flush against the wall surface.
4. **Secure Safe:** Use the provided steel screws (or stronger lag bolts, if preferred) to secure the safe to the wall studs through the pre-drilled holes inside the safe. Ensure the safe is level and firmly attached.
5. **Concealment:** For optimal security, consider concealing the safe behind a picture, mirror, or piece of furniture.



Figure 5: Step-by-step guide for recessed wall installation.

OPERATING INSTRUCTIONS

1. Opening with PIN Code

1. Enter your 3-8 digit PIN code on the keypad.
2. Press the "A" or "B" button to confirm.
3. If the code is correct, the green indicator light will illuminate, and you will hear a beep.
4. Within 5 seconds, turn the knob clockwise to open the safe door.

2. Opening with Emergency Key

Use the emergency key if you forget your PIN code or if the batteries are depleted.

1. Locate the keyhole cover on the keypad panel.
2. Remove the cover to expose the keyhole.
3. Insert one of the emergency keys into the keyhole and turn it counter-clockwise.
4. While holding the key turned, turn the knob clockwise to open the safe door.
5. Once open, you can replace the batteries if needed or reset the PIN code.

Removable Inner Shelf



Guns



Files



Cash



Jewelry



Electronic
Product



Without Shelf



With Shelf

Figure 6: Dual opening methods: PIN code and emergency key.

3. Changing PIN Code

Follow these steps to change your PIN code:

1. Open the safe door.
2. Press the red reset button on the inside of the door.
3. Enter your new 3-8 digit PIN code on the keypad.
4. Press the "A" or "B" button to confirm.
5. Test the new PIN code with the door open before closing it.

4. Time-Out Period

If three incorrect PIN codes are entered consecutively, the safe will enter a time-out period. During this period, the keypad will be temporarily disabled, and you will not be able to enter any codes. This feature enhances security by preventing brute-force attempts to guess the code. Wait for the time-out period to expire before attempting to enter the correct code again or use the emergency key.

MAINTENANCE

1. Battery Replacement

When the batteries are low, the red indicator light on the keypad may flash or remain lit after entering a code. Replace all four AA batteries promptly to ensure proper operation and avoid being locked out.

1. Open the safe door using the current PIN code or an emergency key.
2. Open the battery compartment cover.
3. Remove the old batteries and dispose of them responsibly.
4. Insert four new AA (1.5V) alkaline batteries, observing correct polarity.
5. Close the battery compartment cover.
6. Test the safe operation with the new batteries.

2. Cleaning

Clean the exterior of the safe with a soft, damp cloth. Do not use abrasive cleaners or solvents, as these can damage the finish or electronic components. Ensure no moisture enters the keypad or locking mechanism.

TROUBLESHOOTING

- **Safe does not open with PIN code:**
 - Ensure batteries are not depleted. Replace if necessary.
 - Verify you are entering the correct PIN code.
 - Check if the safe is in a time-out period after multiple incorrect attempts. Wait for it to reset.
 - Use the emergency key to open the safe.
- **Keypad is unresponsive:**
 - Check battery levels and replace if low.
 - Ensure no debris is obstructing the buttons.
 - If still unresponsive, use the emergency key to open and check internal connections or reset the system by removing and reinserting batteries.
- **Safe door does not close properly:**
 - Ensure no items inside the safe are obstructing the door or locking bolts.
 - Check if the locking bolts are fully retracted before attempting to close.

SPECIFICATIONS

Brand:	Giantex
Model Number:	GT50957BK-HW
Color:	Black
Material:	Alloy Steel
Lock Type:	Combination, Electronic, Key
Mounting Type:	Wall Mount (Recessed)
External Dimensions (H x W x D):	22" x 16" x 4 1/7"
Internal Dimensions (H x W x D):	19" x 13 4/5" x 3 3/4"
Door Thickness:	4mm
Panel Thickness:	2mm
Power Source:	4 x AA (1.5V) Batteries (not included)
Water Resistance Level:	Not Water Resistant

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the retailer's policy or contact Giantex customer service. Keep your purchase receipt as proof of purchase.

For further assistance, visit the Giantex Store on Amazon.