

**Generisch 302.568.91**

# Instruction Manual: Replacement Part Compatible with IKEA PAX KOMPLEMENT Clothes Rail Support

**Model:** 302.568.91

**Brand:** Generisch

## INTRODUCTION

---

This manual provides essential information for the installation and maintenance of your replacement clothes rail support. This product is designed to be compatible with IKEA PAX KOMPLEMENT systems, specifically for clothes rails. It is an original replacement part, not 3D printed, ensuring quality and compatibility.

Please read these instructions carefully before proceeding with installation to ensure proper function and safety.

## SAFETY INFORMATION

---

- Always ensure the mounting surface is sturdy and capable of supporting the weight of the clothes rail and its contents.
- Use appropriate tools for installation.
- Keep small parts, such as screws, out of reach of children to prevent choking hazards.
- Do not overtighten screws, as this may damage the support or the mounting surface.
- If you are unsure about any step, consult a qualified professional.

## PACKAGE CONTENTS

---

Verify that all components are present before beginning installation:

- 1 x Clothes Rail Support (White plastic bracket)
- 2 x Mounting Screws (Silver, metal)



Image: The package includes one white plastic clothes rail support bracket and two silver mounting screws. The bracket is designed to hold a clothes rail, and the screws are for securing it to a surface.

## SETUP AND INSTALLATION

This clothes rail support is designed for wall mounting within the IKEA PAX KOMPLEMENT wardrobe system. Follow these steps for proper installation:

1. **Identify Mounting Location:** Determine the desired height and position for your clothes rail within the wardrobe. Mark the precise spots where the support bracket will be mounted. Ensure the marks are level.
2. **Prepare Mounting Surface:** If mounting into drywall or a hollow surface, use appropriate wall anchors (not included) for secure installation. For solid wood or studs, pre-drilling a pilot hole may be necessary to prevent wood splitting.
3. **Position the Support:** Place the clothes rail support bracket against the marked location, aligning the screw holes with your marks.
4. **Secure the Support:** Insert the provided screws into the holes of the support bracket. Using a screwdriver, carefully tighten the screws until the bracket is firmly secured to the wall. Do not overtighten.
5. **Repeat for Second Support:** If installing a clothes rail, you will need two supports. Repeat steps 1-4

for the second support, ensuring it is level and at the correct distance from the first support to accommodate your clothes rail.

6. **Install Clothes Rail:** Once both supports are securely mounted, insert your IKEA KOMPLEMENT clothes rail into the brackets. Ensure it sits firmly and is stable.

## OPERATING INSTRUCTIONS

---

The clothes rail support functions as a fixed anchor point for your IKEA KOMPLEMENT clothes rail. Once installed, it provides stable support for hanging garments. Ensure the clothes rail is properly seated within the bracket's groove.

Avoid exceeding the weight limit specified for your IKEA KOMPLEMENT clothes rail and wardrobe system, as this support is designed to work within those parameters.

## MAINTENANCE

---

To maintain the appearance and functionality of your clothes rail support:

- **Cleaning:** Wipe the support with a soft, damp cloth. Use mild soap if necessary, then wipe dry. Avoid abrasive cleaners or solvents that could damage the plastic.
- **Inspection:** Periodically check the screws to ensure they remain tight. If the support feels loose, gently retighten the screws.
- **Damage:** If the support becomes cracked or damaged, replace it immediately to prevent potential failure of the clothes rail.

## TROUBLESHOOTING

---

- **Support feels loose after installation:**
  - Ensure screws are fully tightened.
  - Verify that appropriate wall anchors were used for the mounting surface, if applicable.
  - Check if the mounting surface itself is stable and not damaged.
- **Clothes rail does not fit into the support:**
  - Confirm that your clothes rail is an IKEA KOMPLEMENT rail compatible with this type of support.
  - Ensure the support is oriented correctly.

## SPECIFICATIONS

---

Feature	Detail
Manufacturer	sparepartsets
Product Dimensions (L x W x H)	8 x 7 x 7 cm
Weight	50 grams
Item Model Number	302.568.91
Size	1 Bracket

<b>Feature</b>	<b>Detail</b>
Color	White
Material	Plastic
Mounting Type	Wall Mount
Components Included	Screws, Support
Batteries Required	No

## **WARRANTY AND SUPPORT**

---

Specific warranty information for this replacement part is not available in the product details. For any questions regarding product compatibility, installation, or potential defects, please contact the seller directly through your purchase platform.

Always refer to the original IKEA PAX KOMPLEMENT system's documentation for overall wardrobe assembly and weight capacity guidelines.