

Soundmaster NR560

Soundmaster NR560 Retro Stereo Music Center Instruction Manual

Model: NR560 | Brand: Soundmaster

1. INTRODUCTION AND OVERVIEW

The Soundmaster NR560 is a versatile retro stereo music center designed to provide a comprehensive audio experience, combining classic and modern playback options. This unit features a multi-speed turntable, CD player, cassette player, AM/FM radio, USB playback and recording capabilities, and Bluetooth connectivity for wireless streaming. Its elegant real wood casing, made from rustic oak, complements any living space while offering high-quality sound output.



Figure 1.1: Front view of the Soundmaster NR560 with the turntable lid open, showcasing its integrated components.

2. IMPORTANT SAFETY INSTRUCTIONS

Please read these instructions carefully before operating the unit. Keep this manual for future reference.

- Do not expose this appliance to rain or moisture.
- Do not block any ventilation openings.
- Ensure the power cord is not pinched or walked on.
- Unplug the unit during lightning storms or when unused for long periods.
- Refer all servicing to qualified service personnel.
- Avoid placing the unit near heat sources or in direct sunlight.
- Do not use chemical cleaners on the unit's surface.

3. PACKAGE CONTENTS

Verify that all items are included in your package:

- Soundmaster NR560 Music Center Unit
- Dust Cover
- Turntable Protection Mat
- Remote Control
- Instruction Manual (this document)
- Power Cable

4. PRODUCT FEATURES

The Soundmaster NR560 offers a wide array of features for your audio enjoyment:

- **Turntable:** Semi-automatic with selectable speeds of 33, 45, and 78 RPM.
- **CD Player:** Supports CD-R/RW and CD-MP3 playback.
- **Cassette Player:** Integrated cassette deck for tape playback.
- **Radio:** AM/FM stereo radio with a 75 ohm antenna connection for external antenna.
- **Bluetooth:** Built-in Bluetooth receiver for wireless audio streaming from smartphones, tablets, and other compatible devices.
- **USB Port:** For MP3 playback and direct recording (encoding) from turntable, CD, radio, or cassette.
- **Encoding Function:** Record audio directly from vinyl, CD, radio, or cassette to a USB drive with track separation capability.
- **Auxiliary Input:** 3.5mm jack for connecting external audio devices.
- **Headphone Jack:** For private listening.
- **RCA Audio Output:** (Cinch) for connecting to external amplifiers or speakers.
- **Equalizer:** With pre-calibrated sound settings and programmed sound parameters.
- **Output Power:** 2 x 4 W RMS.
- **Design:** Real wood casing in rustic oak finish.

5. SETUP

Follow these steps to set up your Soundmaster NR560:

1. **Unpacking:** Carefully remove all packaging materials. Retain the packaging for future transport or storage.
2. **Placement:** Place the unit on a stable, flat surface away from direct sunlight, heat sources, and excessive dust or moisture. Ensure adequate ventilation around the unit.
3. **Dust Cover Installation:** Attach the included dust cover to the hinges at the rear of the unit.
4. **Turntable Mat:** Place the protection mat onto the turntable platter.
5. **Antenna Connection:** For optimal radio reception, connect an external 75 ohm antenna to the dedicated input at the rear of the unit.
6. **Power Connection:** Connect the power cable to the AC IN port on the back of the unit, then plug the other end into a standard AC 230V ~ 50Hz wall outlet.

7. **Remote Control Batteries:** Open the battery compartment on the remote control and insert two AAA batteries (not included), observing the correct polarity (+/-).

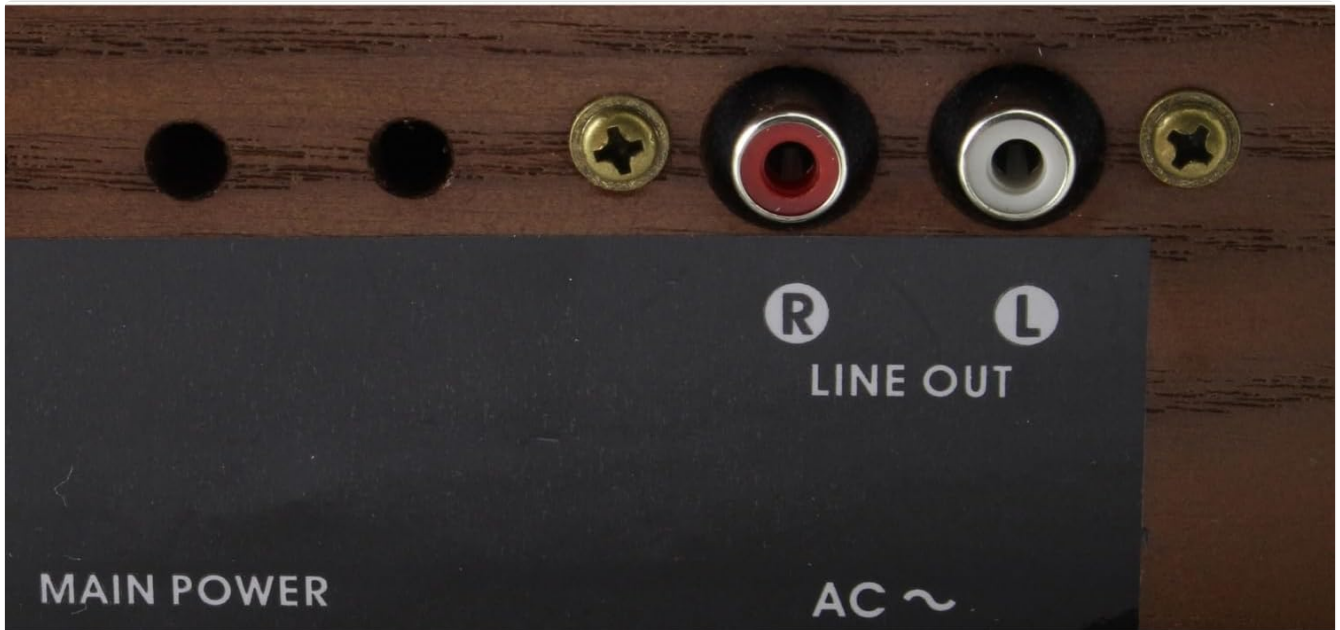


Figure 5.1: Rear panel of the Soundmaster NR560, illustrating the power input, 75 ohm antenna connection, and RCA Line Out ports.

6. OPERATING INSTRUCTIONS

6.1 General Operation

- **Power On/Off:** Press the POWER button on the front panel or remote control to turn the unit on or off.
- **Function Selection:** Use the FUNCTION button on the unit or remote control to cycle through modes: PHONO (Turntable), CD, TAPE (Cassette), RADIO, USB, BLUETOOTH, AUX.
- **Volume Control:** Rotate the VOLUME knob on the front panel or use the VOL+/- buttons on the remote control to adjust the sound level.

6.2 Turntable Operation

1. Select the PHONO function.
2. Open the dust cover.
3. Place a record on the turntable platter.
4. Select the appropriate speed (33, 45, or 78 RPM) using the speed selector switch. For 45 RPM records, place the included adapter on the spindle.
5. Gently lift the tone arm using the cueing lever and position the stylus over the desired track. Lower the tone arm slowly onto the record. The turntable will start spinning automatically.
6. At the end of the record, the tone arm will automatically return to its rest position (semi-automatic function).



Figure 6.1: Detailed view of the turntable platter and tone arm, ready for vinyl playback.

6.3 CD Player Operation

1. Select the CD function.
2. Press the OPEN/CLOSE button to open the CD tray.
3. Place a CD (audio CD or MP3 CD) with the label side facing up into the tray.
4. Press the OPEN/CLOSE button again to close the tray. The unit will read the disc.
5. Press the PLAY/PAUSE button to start playback. Use the SKIP buttons (◀◀/▶▶) to navigate between tracks.



Figure 6.2: The CD player tray extended, showing where to place a compact disc.

6.4 Cassette Player Operation

1. Select the TAPE function.
2. Insert a cassette tape into the cassette slot on the side of the unit.
3. Press the PLAY button to begin playback.
4. Use the FAST FORWARD and REWIND buttons to navigate the tape. Press STOP to end playback.



Figure 6.3: Side view of the unit, highlighting the integrated cassette player slot with a tape partially inserted.

6.5 Radio Operation

1. Select the RADIO function.
2. Rotate the TUNING knob to select your desired AM or FM station.
3. Adjust the antenna for optimal reception.

6.6 Bluetooth Operation

1. Select the BLUETOOTH function. The unit will enter pairing mode, indicated by a flashing Bluetooth indicator.
2. On your smartphone or tablet, enable Bluetooth and search for available devices. Select

Related Documents - NR560



[soundmaster MCD5550 Bedienungsanleitung | Stereo-Musikcenter mit DAB+, CD, Bluetooth](#)

Das soundmaster MCD5550 ist ein vielseitiges Stereo-Musikcenter mit DAB+, CD, Bluetooth, Kassette und Plattenspieler. Diese umfassende Bedienungsanleitung erklärt Installation, Bedienung und alle Funktionen für ein optimales Hörerlebnis.



[soundmaster ICD2020: Ihr vielseitiges Internetradio mit DAB+, CD und Bluetooth](#)

Entdecken Sie das soundmaster ICD2020 Musikcenter. Genießen Sie Internetradio, DAB+, CD-Wiedergabe, Bluetooth-Streaming und mehr mit diesem stilvollen und funktionsreichen Audiogerät von Wörlein GmbH.



[soundmaster CD9220 Tragbarer CD-Player Bedienungsanleitung](#)

Umfassende Bedienungsanleitung für den tragbaren CD-Player soundmaster CD9220. Enthält Informationen zu Funktionen, Sicherheit, Bedienung und Fehlerbehebung für Audio-CDs, MP3 und WMA.



[soundmaster PL860 Plattenspieler Bedienungsanleitung](#)

Umfassende Bedienungsanleitung für den soundmaster PL860 Plattenspieler, inklusive Installations-, Betriebs- und Sicherheitshinweisen. Erfahren Sie mehr über die Funktionen und die richtige Handhabung Ihres Geräts.



[soundmaster PL790 Plattenspieler Bedienungsanleitung | Installation & Bedienung](#)

Die offizielle Bedienungsanleitung für den soundmaster PL790 Plattenspieler. Finden Sie detaillierte Anleitungen zur Installation, Einrichtung, Bedienung, Bluetooth-Konnektivität, Wartung und Sicherheit für Ihren Schallplattenspieler.



[Soundmaster PL895 ELITE line Bedienungsanleitung](#)

Umfassende Bedienungsanleitung für das Soundmaster PL895 ELITE line Audiosystem. Entdecken Sie Funktionen wie Plattenspieler, DAB+/UKW-Radio, CD/USB-Wiedergabe, Bluetooth® und Aufnahme.

