

Manuals.plus /

> Philips /

> Philips Cordless Vacuum 8000 Series Aqua Plus XC8347/61 Instruction Manual

Philips XC8347/61

Philips Cordless Vacuum 8000 Series Aqua Plus

MODEL: XC8347/61

- Introduction
- Safety Information
- Package Contents
- Setup
- Operation
- Maintenance
- Troubleshooting
- Specifications
- Warranty & Support

1. Introduction

Welcome to the Philips Cordless Vacuum 8000 Series Aqua Plus instruction manual. This appliance is designed for efficient cleaning of various surfaces, offering 3-in-1 functionality as a stick vacuum, handheld vacuum, and an Aqua cleaning system. It features PowerCyclone 10 technology and a 360° suction nozzle for comprehensive dirt capture.





Figure 1: The Philips Cordless Vacuum 8000 Series Aqua Plus in its full stick vacuum configuration.

2. Important Safety Information

Please read this instruction manual carefully before using the appliance and save it for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Do not use the appliance outdoors or on wet surfaces.
- Do not allow children to use the appliance. Close supervision is necessary when used near children.
- Do not pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Always turn off the appliance before connecting or disconnecting the motorized nozzle.
- Use only Philips recommended accessories and replacement parts.
- Ensure the charging dock is placed on a stable, flat surface.

3. Package Contents

Verify that all components are present in the package:

- Main unit (motor and dustbin)
- Extension wand
- 360° Suction Nozzle with LED lights
- Aqua Nozzle with two microfiber pads
- Mini turbo brush
- Crevice tool
- Integrated brush
- Charging Dock
- Power adapter
- User Manual



Figure 2: All components included with the Philips 8000 Series Aqua Plus vacuum cleaner.

4. Setup

4.1 Assembly

1. **Attach the Extension Wand:** Insert the extension wand into the main unit until it clicks into place.
2. **Attach the Nozzle:** Connect the desired nozzle (360° Suction Nozzle or Aqua Nozzle) to the end of the extension wand until it clicks.
3. **Handheld Configuration:** For handheld use, detach the extension wand and connect accessories like the crevice tool or mini turbo brush directly to the main unit.

4.2 Charging the Battery

1. Place the charging dock in a convenient location near a power outlet.
2. Connect the power adapter to the charging dock and plug it into the wall outlet.
3. Place the vacuum cleaner onto the charging dock. The digital display on the main unit will show the charging status.
4. A full charge provides up to 80 minutes of run time, depending on the power mode used.



Figure 3: Digital display indicating battery charge level.

5. Operating Instructions

5.1 General Vacuuming (Stick Mode)

1. Ensure the 360° Suction Nozzle is attached.
2. Press the power button to turn on the vacuum.
3. Select the desired power mode (Eco, Normal, Turbo) using the mode button. The LED lights on the nozzle illuminate the cleaning path.
4. Move the vacuum across the floor surface. The 360° suction design captures dirt from all sides.



Figure 4: Vacuum in stick mode, demonstrating LED illumination for enhanced visibility of dust.

5.2 Handheld Vacuuming

1. Detach the extension wand from the main unit.
2. Attach the crevice tool for narrow spaces or the mini turbo brush for upholstery and pet hair.
3. Press the power button and clean the desired surfaces.



Figure 5: Using the vacuum in handheld mode to clean upholstery.

5.3 Aqua Cleaning (Wet Cleaning)

1. Ensure the Aqua Nozzle is attached to the extension wand.
2. Fill the water tank of the Aqua Nozzle with clean water and a small amount of floor cleaning solution (if desired).
3. Attach the microfiber pads to the bottom of the Aqua Nozzle.
4. Press the power button to activate vacuuming and wet cleaning simultaneously. The Aqua Nozzle cleans and vacuums in one pass.
5. This mode is suitable for hard floors.



Figure 6: The Aqua Nozzle in action, simultaneously vacuuming and wet cleaning a floor.



Figure 7: Instructions for filling the Aqua Nozzle's water tank.

6. Maintenance

6.1 Emptying the Dustbin

1. Ensure the appliance is turned off.
2. Press the dustbin release button and remove the dustbin from the main unit.
3. Open the dustbin lid and empty the contents into a waste bin.
4. Close the dustbin lid and reattach it to the main unit.

6.2 Cleaning the Filter

1. Remove the filter from the dustbin.
2. Tap the filter gently over a waste bin to remove loose dust.
3. Rinse the filter under running water. Allow it to air dry completely for at least 24 hours before reinserting.
4. Do not use a brush or any abrasive materials to clean the filter.

6.3 Cleaning the Aqua Nozzle and Microfiber Pads

1. Empty any remaining water from the Aqua Nozzle's tank.
2. Remove the microfiber pads. The pads can be machine washed or hand washed.

3. Rinse the Aqua Nozzle's water tank and internal components with clean water.
4. Allow all parts to air dry completely before reassembly.



Figure 8: Microfiber pads for the Aqua Nozzle, which should be cleaned regularly.

7. Troubleshooting

Problem	Possible Cause	Solution
Appliance does not turn on.	Battery is discharged.	Charge the battery fully.
Reduced suction power.	Dustbin is full or filter is clogged.	Empty the dustbin and clean the filter.
Nozzle is blocked.	Check the nozzle and extension wand for obstructions.	
Aqua Nozzle not dispensing water.	Water tank is empty or clogged.	Refill the water tank. Check for blockages in the water dispensing mechanism.
Battery run time is shorter than expected.	Using Turbo mode frequently.	Use Eco or Normal mode for longer run time. Ensure battery is fully charged.

8. Technical Specifications

Model: XC8347/61

Brand: Philips

Form Factor: Stick

Power Source: Battery Powered

Battery Type: Lithium-Ion

Voltage: 240 Volts

Run Time: Up to 80 minutes (depending on mode)

Dustbin Capacity: 0.6 Liters

Item Weight: 1 Kilogram

Special Features: Bagless, Compact, Cordless, Portable, Wet/Dry

Filter Type: Cartridge

Surface Recommendation: All floors

Included Components: Charging Dock

9. Warranty and Support

This Philips appliance comes with a standard manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions, including the warranty period. For technical support, spare parts, or service, please contact Philips customer support in your region. You can find contact information on the official Philips website or through the documentation provided with your product.

Online Support: Visit the official **Philips website** for FAQs, troubleshooting guides, and product registration.