

LG Front Control Dishwasher LDFC2423V Instruction Manual

Model: LDFC2423V | Brand: LG

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your LG Front Control Dishwasher, model LDFC2423V. Designed with a rust-resistant stainless steel tub, Dynamic Dry™ technology, and LoDecibel™ Quiet Operation, this appliance offers reliable performance and spotless results. Please read this manual thoroughly before operating your dishwasher and keep it for future reference.

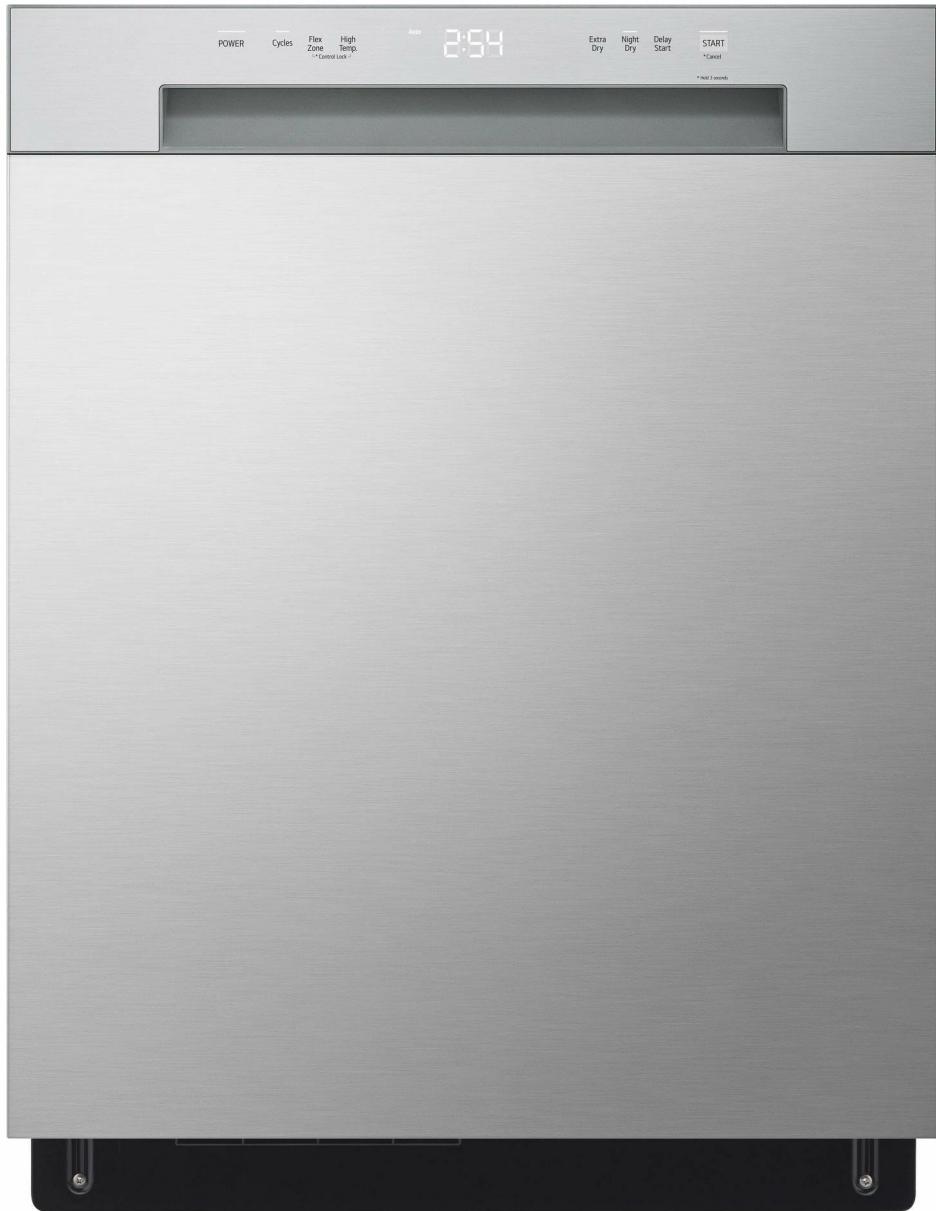


Figure 1.1: The LG Front Control Dishwasher (LDFC2423V) with its door open, showcasing the interior racks filled with various dishes.

2. KEY FEATURES

- **Rust-resistant stainless steel tub:** Durable interior designed to prevent rust and ensure long-lasting use.
- **Dynamic Dry™:** A 2-stage fan system that delivers fast and efficient drying performance for spotless dishes.
- **Built-in leak detection:** Continuously monitors water supply and drainage to help prevent potential leaks.
- **Inverter Direct Drive motor:** Provides quiet operation at 52 dB and is backed by a 10-year limited warranty for reliable performance.
- **ENERGY STAR® certified:** Helps reduce energy consumption and lower utility costs.

3. SETUP AND INSTALLATION

For detailed installation instructions, please refer to the separate Installation Guide provided with your appliance. Proper installation is crucial for optimal performance and safety. Ensure the dishwasher is level and securely connected to water and power supplies.

Before first use, remove all packing materials and internal accessories. It is recommended to run an empty cycle with dishwasher detergent to clean the interior.

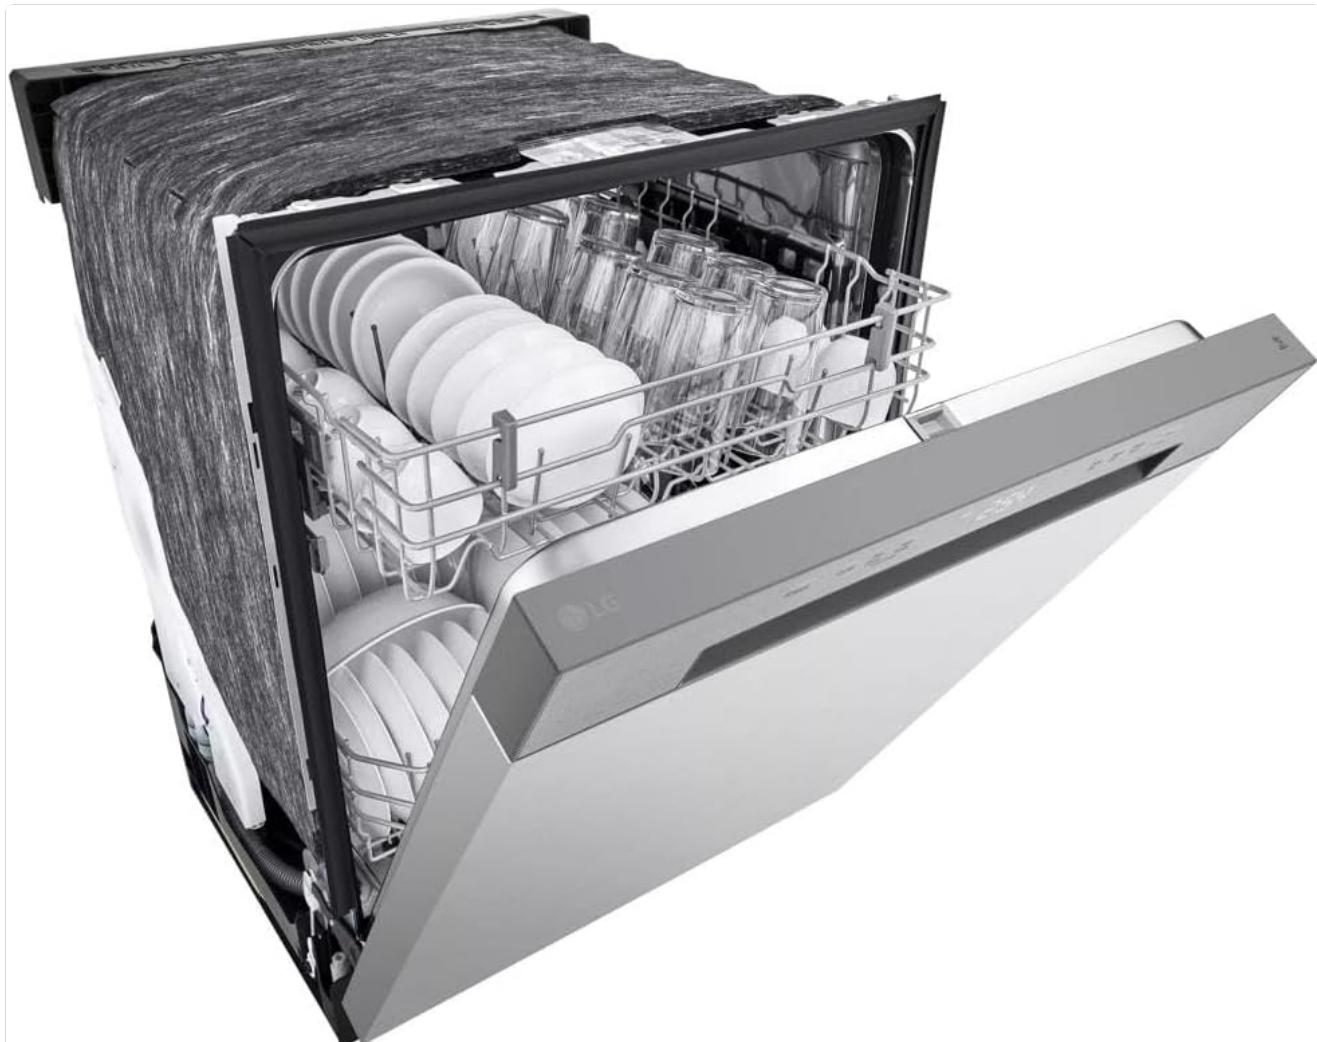


Figure 3.1: The LG Front Control Dishwasher (LDFC2423V) seamlessly integrated into a modern kitchen setting, highlighting its sleek stainless steel finish.

4. OPERATING INSTRUCTIONS

4.1. Loading the Dishwasher

Proper loading ensures effective cleaning and drying. Arrange dishes to allow water spray to reach all surfaces. Avoid overcrowding.

- **Lower Rack:** Ideal for plates, bowls, pots, and pans. Ensure larger items do not block the spray arms.
- **Upper Rack:** Suitable for glasses, cups, and smaller bowls. The upper rack is adjustable to accommodate taller items.
- **Cutlery Basket:** Place forks and spoons with handles down, and knives with handles up for safety.



Figure 4.1: A view inside the LG Dishwasher, showing the lower and upper racks properly loaded with various dishes, including plates, bowls, and glasses.

4.2. Adding Detergent and Rinse Aid

Use only automatic dishwasher detergent. Fill the main wash dispenser according to the detergent manufacturer's recommendations and the soil level of your dishes. Fill the rinse aid dispenser to the indicated level; it will automatically dispense during the rinse cycle to improve drying and prevent water spots.

Your browser does not support the video tag.

Video 4.1: A demonstration of loading the LG dishwasher, including adding detergent and rinse aid, and arranging dishes in the racks.

4.3. Selecting a Cycle and Options

The control panel is located on the top edge of the door. Select your desired wash cycle and any additional options before closing the door and pressing Start.



Figure 4.2: Close-up of the LG Front Control Dishwasher's hidden control panel, showing cycle and option buttons.

- **Cycles:** Auto, Heavy, Normal, Turbo, Machine Clean.
- **Options:** Flex Zone, High Temp, Extra Dry, Night Dry, Delay Start.

Refer to the Quick Guide or Owner's Manual for detailed descriptions of each cycle and option.

Your browser does not support the video tag.

Video 4.2: A demonstration of the LG dishwasher in operation, highlighting its ability to clean dishes effectively for spotless results.

5. MAINTENANCE

5.1. Cleaning the Interior

Regularly clean the interior of your dishwasher to prevent odors and maintain performance. Wipe down the stainless steel tub and door gasket with a damp cloth. For stubborn stains, use a dishwasher cleaner.

5.2. Filter Maintenance

The dishwasher features a filter system that should be cleaned periodically. Remove the lower rack, twist and remove the filter assembly, rinse it under running water to remove food particles, and then reassemble.



Figure 5.1: A close-up view of the bottom of the LG Dishwasher's tub, showing the filter assembly and lower spray arm, important components for cleaning and maintenance.

6. TROUBLESHOOTING

If you encounter issues with your dishwasher, refer to the following common solutions:

- **Dishes not clean:** Ensure proper loading, check detergent levels, clean filters, and verify water temperature.
- **Water not draining:** Check for clogs in the drain hose or filter.
- **Dishwasher not starting:** Ensure the door is fully closed and latched, check power supply, and verify that a cycle has been selected.
- **Excessive noise:** Ensure dishes are not interfering with spray arms, and check for foreign objects in the pump area.
- **Error codes:** Consult the full owner's manual for specific error code meanings and solutions.

7. SPECIFICATIONS

Feature	Detail
Brand	LG
Model Name	LDFC2423V
Finish Type	Stainless Steel
Form Factor	Built-In
Item Weight	75.6 pounds
Product Dimensions	24.63"D x 23.75"W x 33.63"H
Noise Level	52 Decibels (LoDecibel™ Quiet Operation)
Cycle Options	Auto, Heavy, Normal, Turbo, Machine Clean
Special Features	Dynamic Dry™ with 2-Stage Fan, Rust-Resistant Stainless Steel Tub, Built-In Leak Detection, ENERGY STAR® Certified
Annual Energy Consumption	268 Kilowatt Hours Per Year
UPC	048231345354

8. WARRANTY AND SUPPORT

Your LG Front Control Dishwasher (LDFC2423V) comes with a 10-year limited warranty on the Inverter Direct Drive motor, ensuring long-term reliability.

For complete warranty details, product registration, and customer support, please visit the official LG website or refer to the full Owner's Manual. You can also contact customer service as provided in your Limited Warranty document.

Included components: Dishwasher, Installation Guide, Power Cord, Drain Hose.