



Manuals.plus /

- › Braun /
- › BRAUN Shaver 51-B7200cc-V Instruction Manual

## Braun 51-B7200cc-V

# BRAUN Shaver 51-B7200cc-V Instruction Manual

Brand: Braun | Model: 51-B7200cc-V

## 1. INTRODUCTION

Thank you for choosing the Braun Shaver 51-B7200cc-V. This advanced electric shaver is designed to provide a close and comfortable shave, adapting to your unique beard density and facial contours. It features innovative technology for efficient shaving and easy maintenance.



Image 1: The Braun Shaver 51-B7200cc-V, including the shaver unit, charging and cleaning station, and a precision trimmer attachment.

### Key Features:

- **Artificial Intelligence Technology:** Automatically adjusts power 13 times per second by reading beard density.
- **3-Blade Close Contact System:** Unique floating blades adhere closely to facial contours for a deep shave.
- **Quick Clean System:** Allows for easy debris cleaning without opening the nozzle or turning on the power.
- **Deep Catch Foil:** Equipped with blades also found in top-tier models, designed to cut all types of stubble effectively.
- **4-in-1 Cleaning & Charging Station:** Provides automatic cleaning, charging, and lubrication for optimal performance.
- **Head Replacement System:** Includes a precision trimmer attachment for versatile grooming needs.

## 2. SAFETY INFORMATION

Please read all instructions carefully before using this appliance to ensure safe and effective operation. Keep this manual for future reference.

- **WARNING:** This appliance is suitable for cleaning under running water. Do not immerse the appliance in water for extended periods.
- **WARNING:** The power supply is detachable. Only use the power supply provided with the appliance.
- **CAUTION:** This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- **CAUTION:** Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 years and supervised.
- **CAUTION:** Do not use the shaver if the foil or cutter block is damaged, as this may cause skin injury.
- **CAUTION:** For hygienic reasons, do not share the shaver with other persons.

### 3. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

## 付属品一覧



シェーバー本体



電源コード



ブラシ

アルコール洗浄システム  
洗浄液 1個



ポーチ



網刃保護キャップ



キワぞりトリマー

Image 2: A visual representation of all items included in the product package.

- Shaver Unit (Main Body)
- Power Cord / Charger
- Cleaning Brush
- Pouch
- Foil Protection Cap
- Alcohol Cleaning System (Charging & Cleaning Station)
- Cleaning Cartridge (1 unit)
- Precision Trimmer Attachment

## 4. SETUP

### 4.1 Initial Charging

1. Connect the power cord to the shaver or the cleaning station.
2. Plug the power cord into an electrical outlet.
3. Charge the shaver for approximately 1 hour for a full charge, which provides up to 50 minutes of cordless shaving time.
4. The charging indicator lights will show the charging status.

### 4.2 Attaching/Detaching Attachments

- To attach the precision trimmer: Align the trimmer attachment with the shaver head and press firmly until it clicks into place.
- To detach: Press the release buttons on the side of the shaver head and pull the attachment off.

## 5. OPERATING INSTRUCTIONS

### 5.1 Shaving

1. Ensure the shaver is charged.
2. Press the power button to turn on the shaver.
3. Hold the shaver at a right angle (90°) to your skin and shave against the direction of beard growth.
4. Apply gentle pressure. The shaver's Artificial Intelligence Technology will automatically adjust power based on your beard density for an optimal shave.



Image 3: The shaver's AI technology intelligently adapts to beard density for efficient shaving.

5. The 3-Blade Close Contact System ensures the blades float and adapt to your facial contours, providing a deep and comfortable shave even in difficult areas.



Image 4: The flexible 3-blade system ensures maximum skin contact for a thorough shave.

## 5.2 Using the Precision Trimmer

Attach the precision trimmer for shaping sideburns, mustaches, or for pre-trimming longer hairs.



Image 5: The precision trimmer attachment allows for detailed styling and trimming.

## 6. MAINTENANCE

### 6.1 Quick Clean System

The Quick Clean System allows for easy and hygienic cleaning of your shaver without removing the foil head.

1. After shaving, turn on the shaver.
2. Rinse the shaver head under warm running water. The Quick Clean System allows water to flow through the shaver head, flushing out stubble and debris.



Image 6: The Quick Clean System enables easy cleaning under running water without disassembling the shaver head.

3. Turn off the shaver and shake off excess water.
4. Allow the shaver to air dry completely before storing or placing it back in the cleaning station.

## 6.2 Using the 4-in-1 Cleaning & Charging Station

For thorough cleaning, charging, and lubrication, use the included 4-in-1 Cleaning & Charging Station.

1. Insert a Braun cleaning cartridge into the station.
2. Place the shaver head-down into the cleaning station.
3. The station will automatically clean, lubricate, dry, and charge the shaver. This process ensures optimal hygiene and performance.

**4in1** 洗浄・充電・潤滑化  
自動モード選択

**ブラウン唯一のアルコール洗浄で、99.9%除菌\***

※試験機関: INSTITUT FRESENIUS、試験方法: アルコール洗浄システム後の刃部の除菌率を測定。試験結果: 99.9%の除菌率

Image 7: The 4-in-1 Cleaning & Charging Station provides comprehensive maintenance for your shaver.

4. Braun's unique alcohol cleaning system eliminates 99.9% of germs.

### 6.3 Replacing Shaver Parts

To maintain 100% shaving performance, replace the shaver foil and cutter block every 18 months, or when worn. Replacement parts are available from authorized Braun retailers or online.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Shaver does not turn on.	Battery is depleted.	Charge the shaver for at least 5 minutes.
Poor shaving performance.	Foil or cutter block is worn or dirty.	Clean the shaver thoroughly or replace the foil and cutter block.
Shaver makes unusual noise.	Debris caught in the shaver head or worn parts.	Clean the shaver. If the noise persists, consider replacing the foil and cutter block. If still an issue, contact customer support.
Cleaning station not working.	Cleaning cartridge is empty or not inserted correctly.	Replace the cleaning cartridge or ensure it is properly seated. Check power connection.

## 8. SPECIFICATIONS

Feature	Detail
Product Dimensions (approx.)	Width: 6.4 cm, Depth: 5.1 cm, Height: 16.6 cm
Product Weight (approx.)	173 g
Power Source	Rechargeable Lithium-ion battery
Charging Time	Approx. 1 hour
Continuous Use Time	Approx. 50 minutes
AC Voltage	100-240V (Worldwide compatible)
Blade Material	Metal
Head Type	Foil shaver
Number of Blades	3
Color	Black

	Series 7	Series 6	Series 5
			
	究極の密着性で、 あご下の剃り残しゼロへ	肌にやさしい、 密着深剃り	密着刃で、 深剃りをよりシンプルに
肌への密着	360°密着システム	スイング密着システム	3連密着ブレード
顔の凹凸への密着			
あご下への密着			
深剃り			
肌へのやさしさ			
早剃り			
ディープキャッチ網刃 (多くのヒゲを一度で捕らえてカット)	✓	✓	✓
人工知能テクノロジー (カットパワーを最大値にキープ)	✓	✓	✓
お風呂剃り設計	✓	✓	✓
クイック洗浄システム			✓
充電時間 / 駆動時間	約1時間 / 約50分	約1時間 / 約50分	約1時間 / 約50分

Image 8: Comparison of key features across Braun Shaver Series.

## 9. WARRANTY AND SUPPORT

Braun products are manufactured to the highest quality standards. This product comes with a manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions.

For technical support, replacement parts, or further assistance, please visit the official Braun website or contact their customer service department. You can find more information and support resources at [www.braun.com](http://www.braun.com).