

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [RCA](#) /

> [RCA Universal Rechargeable 4-Device Streaming Remote Control User Manual](#)

## RCA RCTC4GBV

# RCA Universal Rechargeable 4-Device Streaming Remote Control User Manual

Brand: RCA | Model: RCTC4GBV

## INTRODUCTION

The RCA Universal Rechargeable 4-Device Streaming Remote Control is designed to simplify your home entertainment experience by consolidating control of up to four devices into a single, sleek unit. This remote is ideal for managing TVs, audio systems, soundbars, and various streaming devices, offering a convenient and eco-friendly solution with its rechargeable battery.



This image displays the RCA Universal Remote Control from both a front and side perspective, highlighting its slim profile and button layout.

## KEY FEATURES

- **Rechargeable Design:** Features a USB-C rechargeable battery, eliminating the need for disposable batteries and reducing waste. A single charge can last 8-10 months with average use.
- **Streaming Optimization:** Layout specifically designed for seamless integration with popular streaming platforms such as Roku, Apple TV, and Fire TV.
- **Quick Access Keys:** Dedicated buttons for Netflix, Disney+, Hulu, and YouTube provide instant access to your favorite content.
- **Easy Setup:** Supports automatic, brand-specific, manual, and direct code search methods for straightforward device programming.
- **Ultra-Slim Profile:** Ergonomic and sleek design for comfortable handling.
- **Backlit Keypad:** Illuminated buttons for easy visibility in low-light conditions.
- **Universal Compatibility:** Controls up to 4 devices from various major brands.



This image shows the remote being charged via its USB-C port, emphasizing its rechargeable feature and the benefit of saving money and reducing waste.



The remote's backlit keypad is shown illuminated, making it easy to use in dark environments.

## SETUP AND PROGRAMMING

### Charging the Remote

Before initial use, or when the battery indicator is low, charge your RCA Universal Remote Control using the provided USB-C cable. Connect the cable to the remote's USB-C port and plug the other end into a standard USB power adapter (not included) or a powered USB port. A full charge typically provides 8-10 months of average use.

### Programming Your Devices

The remote supports multiple programming methods to connect with your devices. The most common method involves using direct codes or an automatic search.

1. **Turn on the device** you wish to control (e.g., TV, DVD player, streaming box).
2. **Find the product code** for your device's brand from the code list. If a physical list is not available, visit [RCACodeSupport.com](https://www.rcacodesupport.com) for an updated list.
3. **Press and hold the device key** on the remote (e.g., TV, DVD, STREAM) that you want to program for approximately 2 seconds. The power key will illuminate and stay on. Release the key.

4. **Enter the first five-digit code** for your brand. The power key will flash after each digit is entered. If the code is correct, the power key will turn off.
5. **Test the remote** by pressing the Power button. If the device turns off, try other functions like volume or channel. If it works, the programming is complete. If not, repeat the steps with the next code for your brand.

For automatic code search, consult the full manual available at [RCACodeSupport.com](https://www.rcacodesupport.com).



This image illustrates the four-step process for programming the remote, including turning on the device, finding the code, holding the device key, and entering the code.

## OPERATING INSTRUCTIONS

Once programmed, your RCA Universal Remote Control functions like your original device remotes. Select the desired device mode (TV, SAT/CBL/DVD, STREAM) using the dedicated buttons at the top of the remote, then use the corresponding control buttons.

### Quick Access Streaming Keys

The remote features dedicated quick access buttons for popular streaming services. Simply press the Netflix, Disney+, Hulu, or YouTube button to launch the respective application on your programmed streaming device.



## PROGRAMMING YOUR REMOTE

- 1 Turn on device you want to control.
- 2 Find product code from list provided.\*
- 3 Press and hold the device key you want to program for about 2 seconds, until the power key illuminates and stays on. Then release the key.
- 4 Enter the first five-digit code for your brand in the code list (the power key flashes after each digit).

\*Find your code: [RCAcodeSupport.com](https://www.RCAcodeSupport.com)

This image illustrates the quick access buttons for streaming services like Netflix, Disney+, Hulu, and YouTube, demonstrating the remote's streaming-friendly design.

### SPECIFICATIONS

| Feature                         | Detail                                     |
|---------------------------------|--|
| Product Dimensions              | 7.33 x 1.78 x 0.6 inches                   |
| Item Weight                     | 4.6 ounces                                 |
| Model Number                    | RCTC4GBV                                   |
| Brand                           | RCA  |
| Special Feature                 | Universal                                  |
| Color                           | Black                                      |
| Max Number of Supported Devices | 4 (TV, Audio, Soundbar, Streaming Devices) |
| Compatible Devices              | TV, Audio, Soundbar, Streaming Devices     |

# ONE REMOTE TO CONTROL ALL OF YOUR DEVICES



Great for  
**Streaming**



**QUICK ACCESS**  
TO YOUR FAVORITE  
STREAMING SERVICES

This image illustrates the ultra-thin design of the remote, showing its dimensions of 7.33 inches in length and 1.78 inches in width.

## TROUBLESHOOTING

If your remote is not functioning as expected, consider the following common issues:

- **Remote Not Responding:** Ensure the remote is fully charged. Connect it to a USB-C power source and allow it to charge for a few hours.
- **Device Not Responding to Remote:** Verify that the remote is programmed correctly for the specific device. Re-attempt the programming steps, trying alternative codes if available for your brand. Ensure you are in the correct device mode (TV, DVD, STREAM).
- **Limited Functionality:** Some advanced functions of original remotes may not be supported by universal remotes. Ensure the remote is pointed directly at the device's IR receiver.
- **Backlight Not Working:** Check if the remote needs charging.

For more detailed troubleshooting guides and a comprehensive list of device codes, please visit the official RCA support website.

## WARRANTY AND SUPPORT

The RCA Universal Rechargeable 4-Device Streaming Remote Control comes with a **Lifetime Limited Warranty**, ensuring peace of mind regarding your purchase. For warranty claims, technical assistance, or to find the latest device codes, please visit:

[RCAcodeSupport.com](https://www.RCAcodeSupport.com)

Designed and Engineered in the USA.