

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [LOVENSE](#) /

› [LOVENSE Ridge App-Controlled Rotating Vibrating Anal Beads User Manual](#)

LOVENSE Ridge

LOVENSE Ridge App-Controlled Rotating Vibrating Anal Beads User Manual

This manual provides essential information for the safe and effective use of your LOVENSE Ridge device. Please read thoroughly before first use.

INTRODUCTION

The LOVENSE Ridge is an innovative device designed for personal pleasure, featuring 360° rotating and vibrating anal beads. It offers both manual and app-controlled functionalities for a customizable experience. This manual will guide you through its features, setup, operation, and maintenance.

PRODUCT OVERVIEW

Key Features

- **Rotation & Vibration Anal Beads:** Features a gradual increase in bead size for comfortable insertion, a flared base for secure placement, and a flexible joint to accommodate various positions.
- **Ultimate Pleasure:** Constructed from smooth, soft silicone. The gradual increase in bead size, combined with two-way 360° rotational movement, provides targeted stimulation for the prostate or indirect stimulation for the A-spot and G-spot.
- **App Controlled & Customizable Vibration:** Individual or combined control of rotation and vibration is available via the Lovense Remote app. The app supports long-distance control and allows for saving up to 10 customized patterns, with unlimited patterns available from the app's library.
- **Stable Connection:** Utilizes a new generation chip for reliable Bluetooth connectivity with iOS and Android devices, as well as Mac and Windows PCs (Windows PC requires a Lovense USB Adapter). The Lovense Remote app includes additional features such as an alarm, music syncing, and sound control.
- **Privacy Packaging:** Shipped in discreet packaging to ensure customer privacy.

Package Contents

Your LOVENSE Ridge package includes:

- LOVENSE Ridge device
- USB Charging Cable
- User Manual
- Storage Pouch



Image: LOVENSE Ridge package contents, showing the device, USB charging cable, user manual, and a black storage pouch.

SETUP

Initial Charging

Before first use, fully charge your LOVENSE Ridge device.

1. Locate the magnetic charging port on the device's base.
2. Connect the provided USB charging cable to the device and a compatible USB power source (e.g., computer, wall adapter).
3. The indicator light on the device will illuminate to show charging status. A full charge typically takes approximately 2 hours.

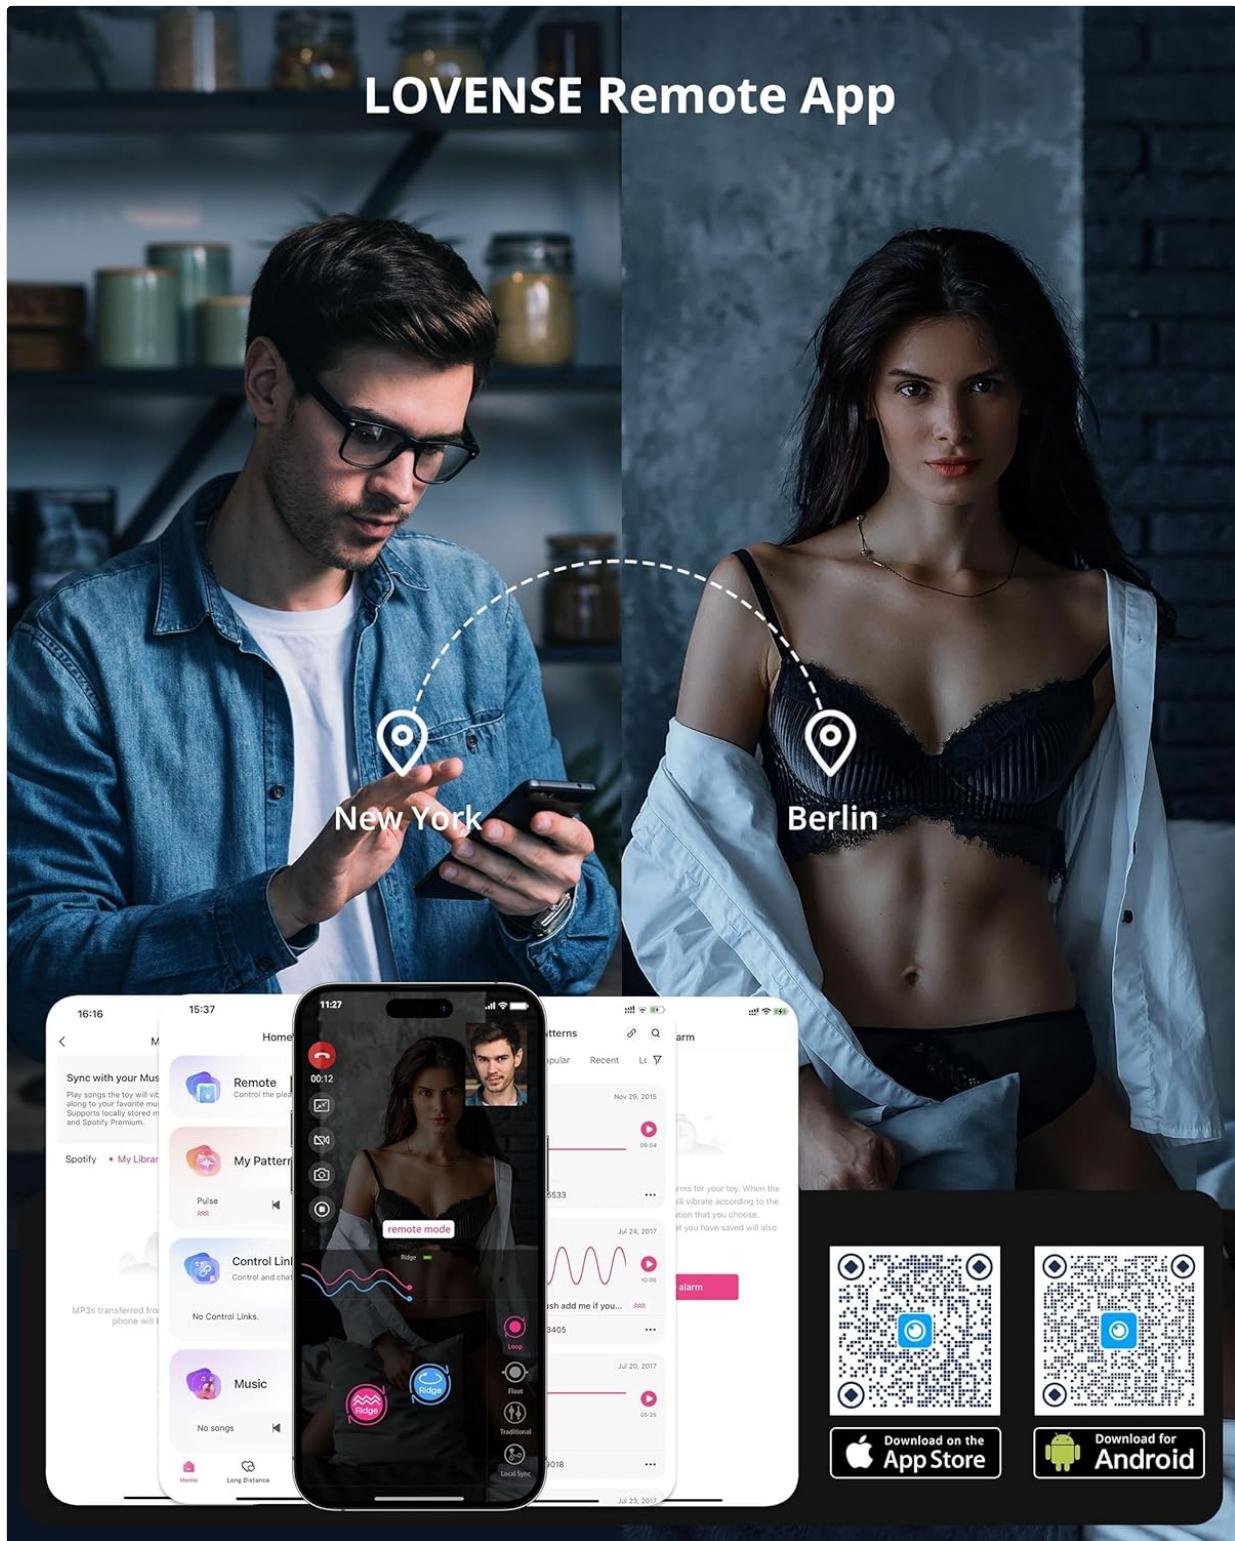


Image: The LOVENSE Ridge device with its magnetic charging port visible at the base.

App Installation (Optional, but recommended for full features)

To unlock the full potential of your LOVENSE Ridge, download the Lovense Remote app.

- Search for "Lovense Remote" on the App Store (iOS) or Google Play Store (Android).
- Install the app and follow the on-screen instructions to create an account.
- Ensure your smartphone's Bluetooth is enabled.

Your browser does not support the video tag.

Video: This video demonstrates the unboxing process of the Lovense Ridge, showing the device and its accessories.

OPERATION

Basic Device Controls

The LOVENSE Ridge can be operated directly using its physical buttons.

- **Power On/Off:** Press and hold the power button for 3 seconds to turn the device on or off.
- **Cycle Modes:** Short press the mode button to cycle through the available vibration patterns.
- **Rotation Control:** Use the dedicated rotation button to activate and adjust the 360° rotation.

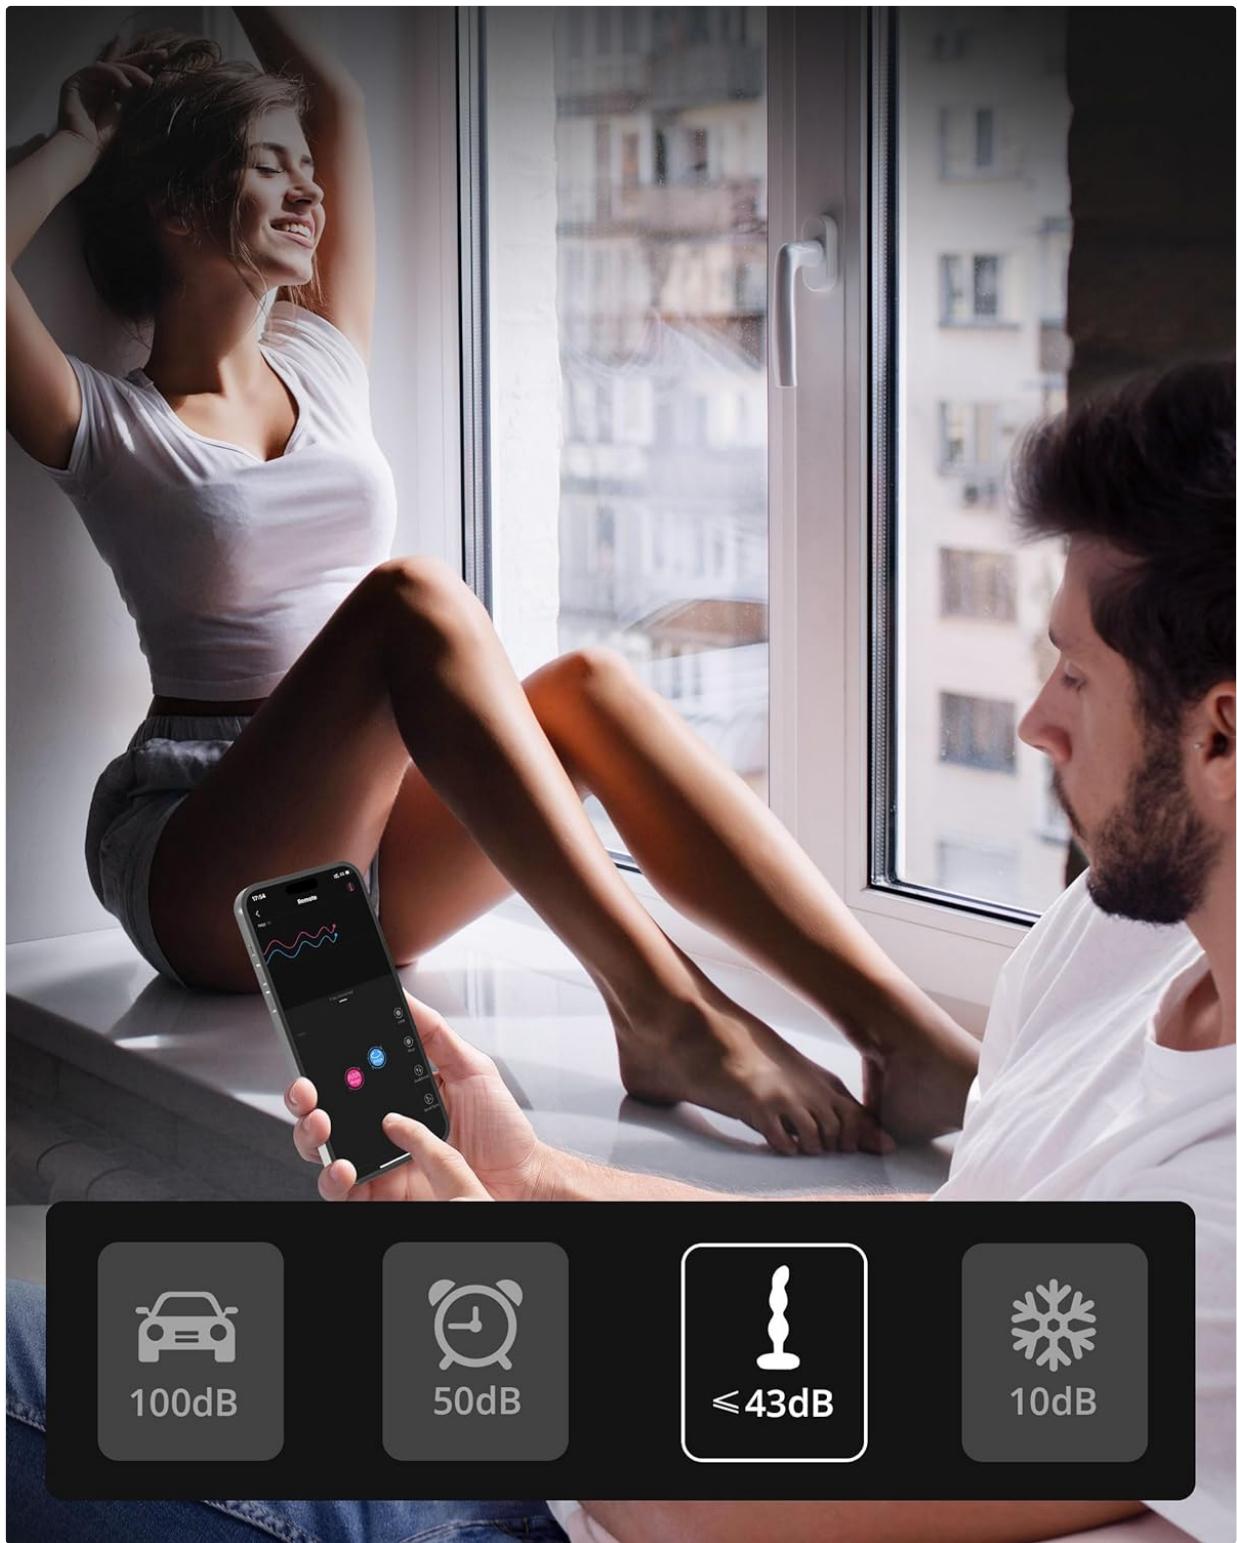


Image: The LOVENSE Ridge device illustrating the physical buttons for power, vibration patterns, and rotation control.

App Control

Connect your LOVENSE Ridge to the Lovense Remote app for advanced control and customization.

1. Open the Lovense Remote app and ensure your Ridge device is powered on and within Bluetooth range.
2. The app will automatically detect and connect to your device.
3. Use the app interface to select from various vibration patterns, adjust intensity, and control the rotation speed and direction.
4. Explore features like music syncing, sound control, and long-distance control with a partner.

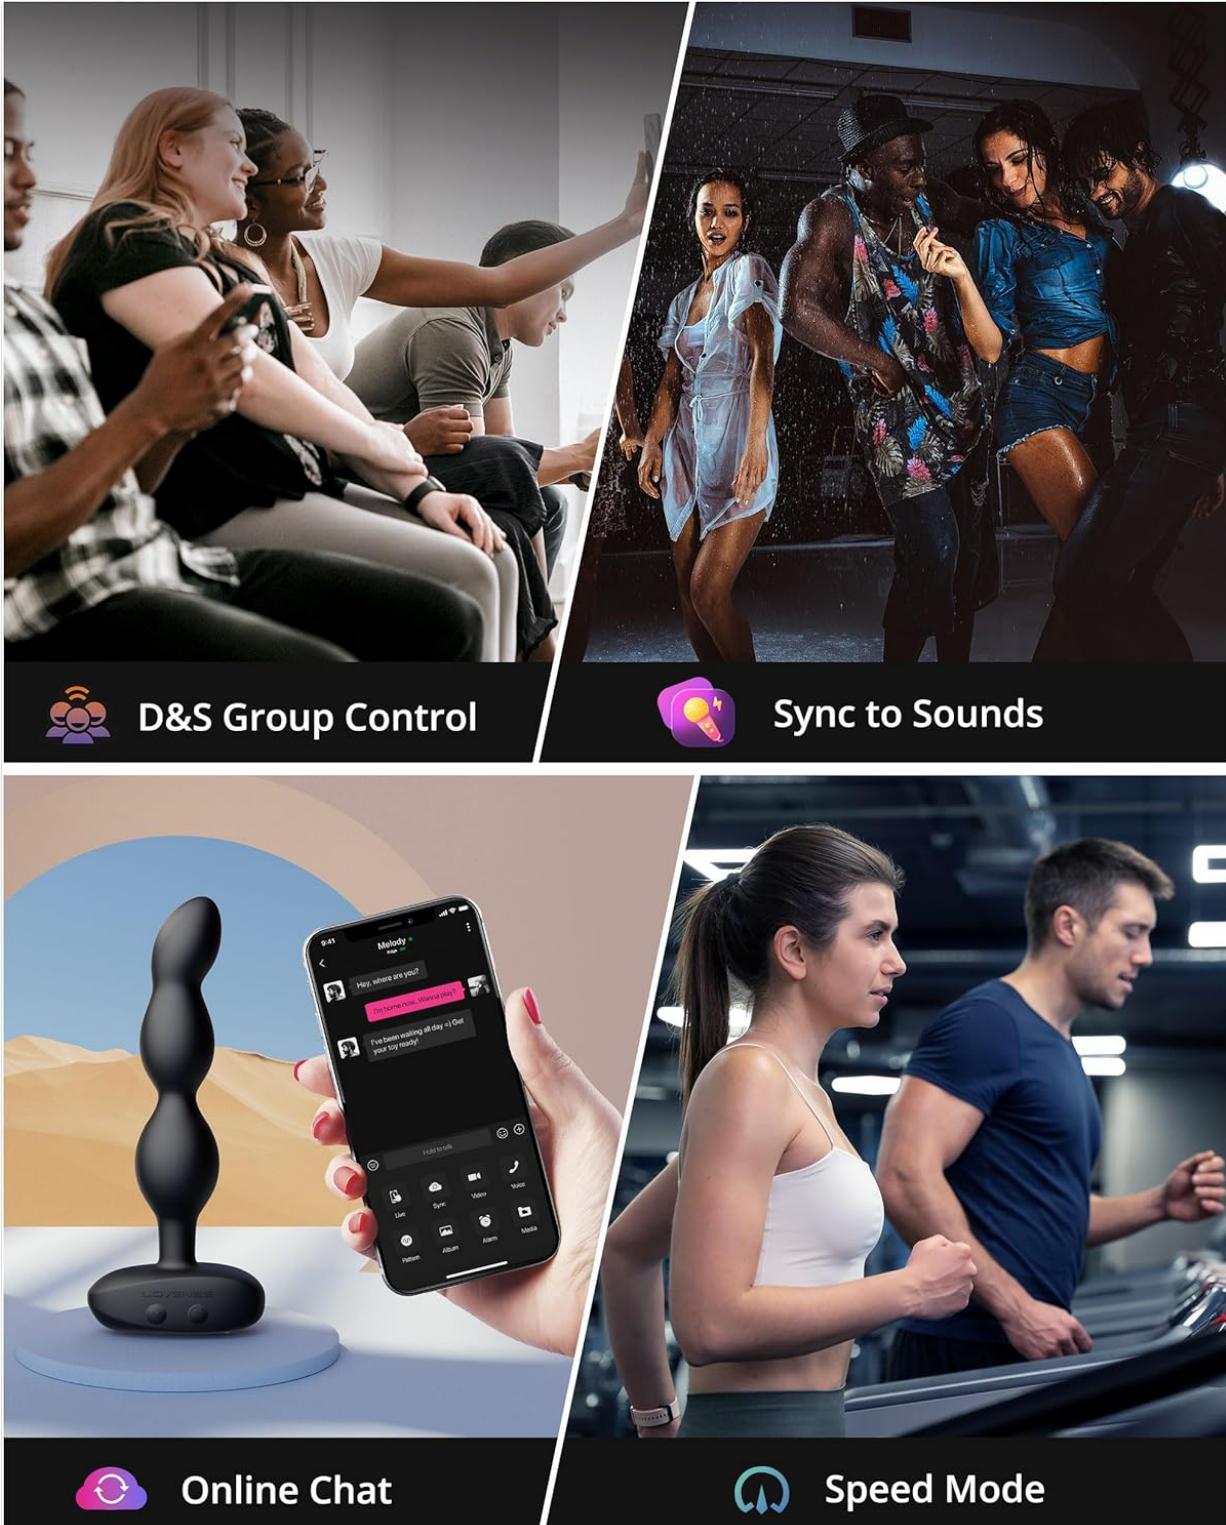


Image: A smartphone screen showing the Lovense Remote app, which allows for remote control and customization of the device.

APP Remote Control: 10000+ Patterns



Button Control: 7 Patterns

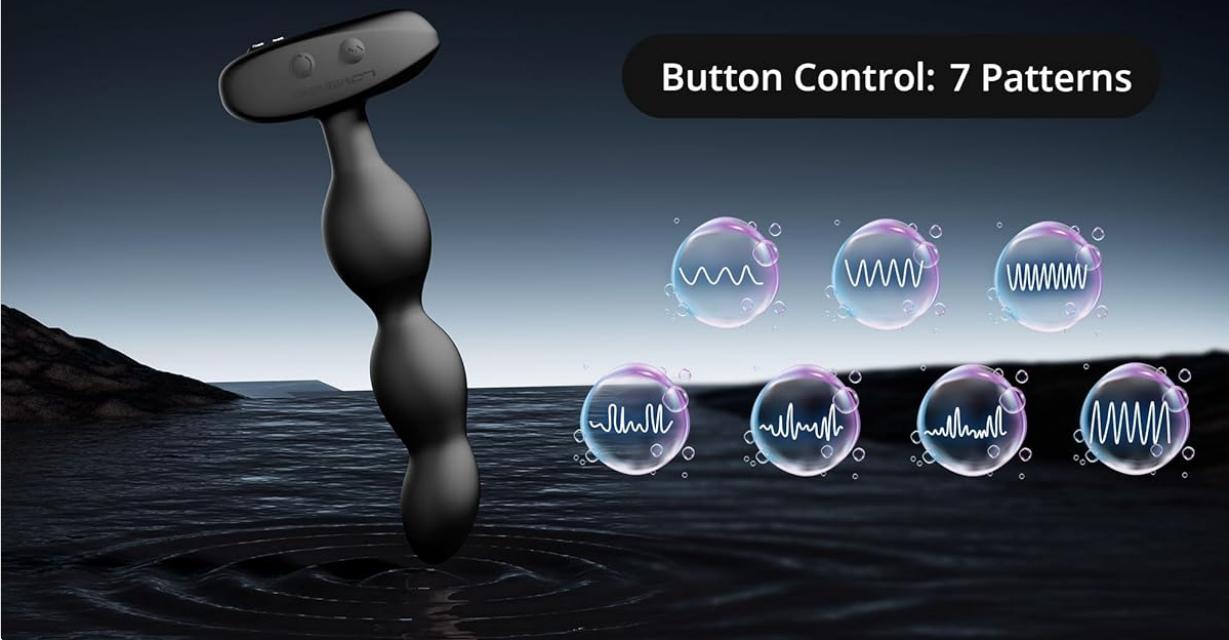


Image: Overview of Lovense Remote app features, such as D&S Group Control, Sync to Sounds, Online Chat, and Speed Mode.

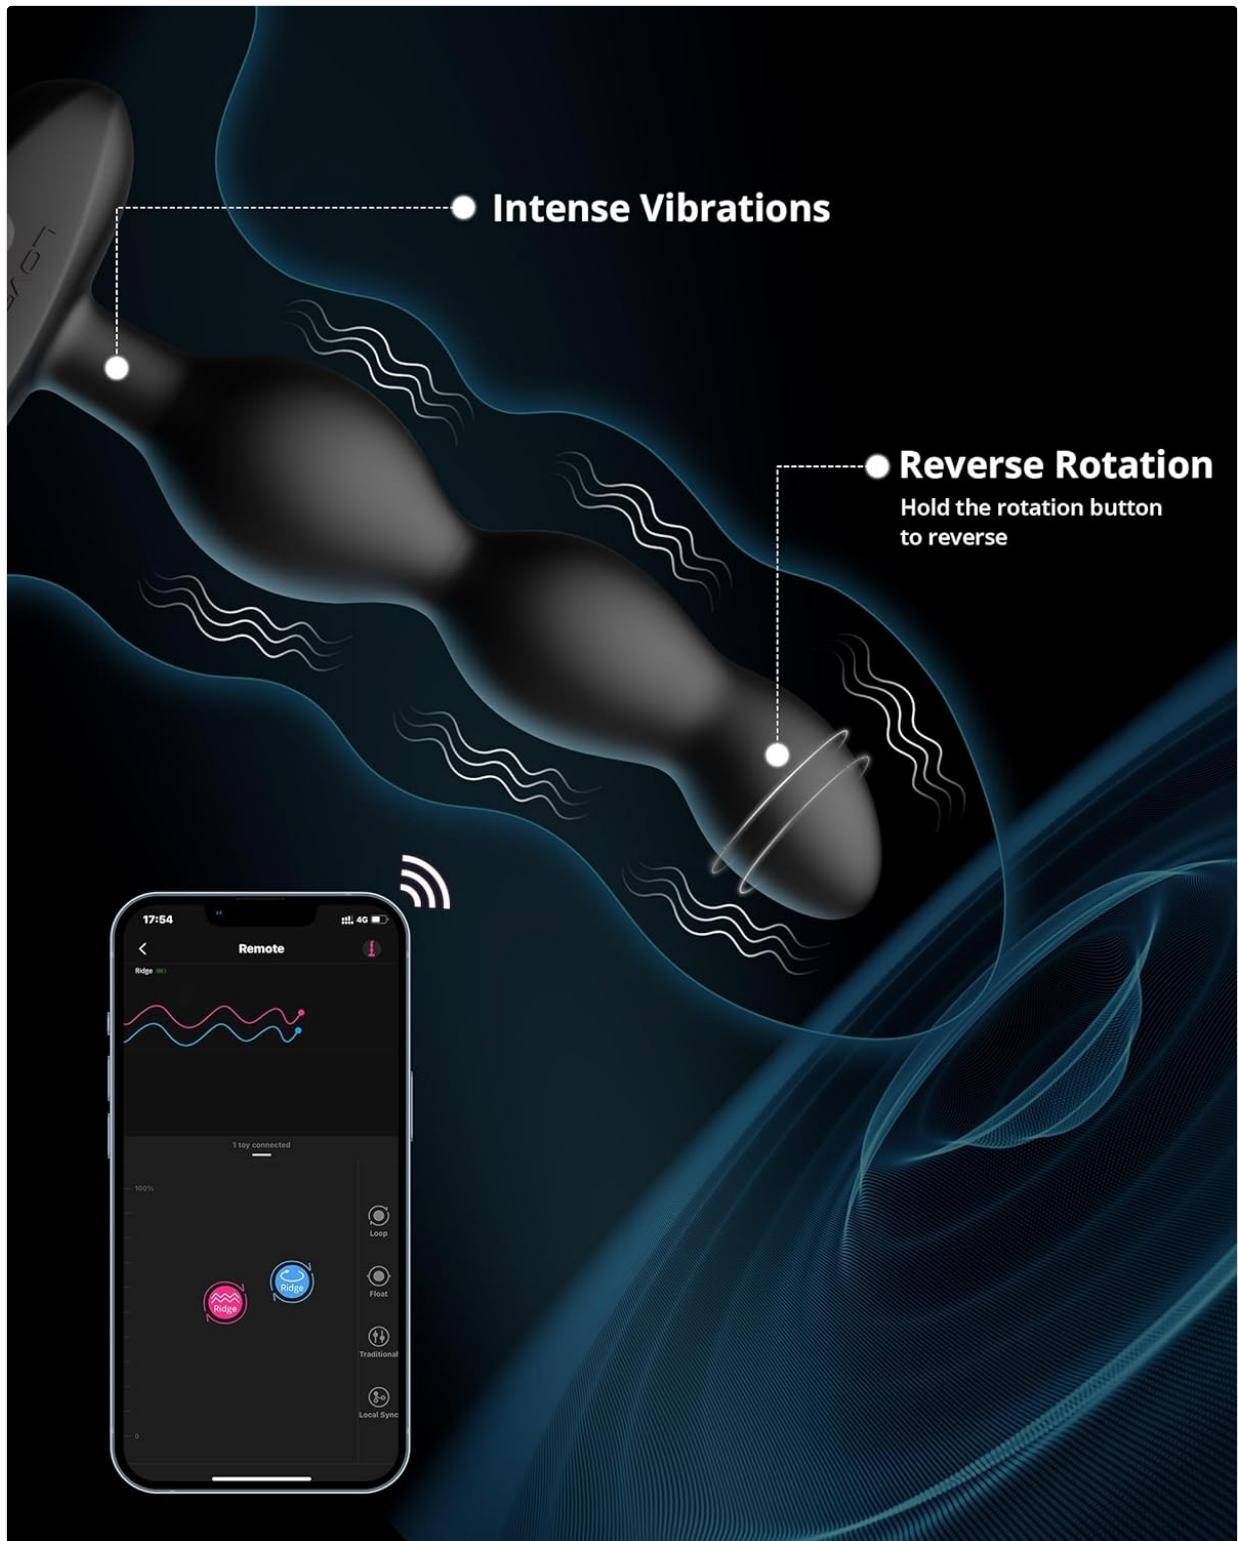


Image: A diagram highlighting the intense vibrations and reverse rotation capabilities of the LOVENSE Ridge device.

Your browser does not support the video tag.

Video: This video illustrates the app-controlled features of the LOVENSE Ridge, demonstrating how to adjust rotation and vibration settings via the Lovense Remote application.

Your browser does not support the video tag.

Video: This video provides a general overview of the LOVENSE Ridge Vibrator Anal Beads, showcasing its design and basic functionalities.

Your browser does not support the video tag.

Video: A short video highlighting the key features and movement of the LOVENSE Ridge Vibrator.

MAINTENANCE

Cleaning Instructions

Proper cleaning ensures hygiene and extends the lifespan of your device.

- Always clean the device before and after each use.
- Wash the silicone parts with warm water and mild soap.
- Rinse thoroughly to remove all soap residue.
- Allow the device to air dry completely before storing.
- **Important:** Only use water-based lubricants with silicone products to prevent material degradation.

Your browser does not support the video tag.

Video: This short video demonstrates the ease of cleaning water-based lubricants, which are recommended for use with silicone products like the LOVENSE Ridge.

Storage

Store your LOVENSE Ridge in a cool, dry place, away from direct sunlight and extreme temperatures. Keep it separate from other silicone products to prevent material interaction.

TROUBLESHOOTING

If you encounter any issues with your LOVENSE Ridge, please refer to the following common solutions:

- **Device not turning on:** Ensure the device is fully charged. If the issue persists, try a different charging cable or power source.
- **App connection issues:** Make sure Bluetooth is enabled on your smartphone and the device is powered on and within range. Restart both the app and the device.
- **Rotation not working:** Check if the rotation function is activated in the app or via the physical button. If the device has been used frequently, mechanical wear might occur.
- **Weak vibration/rotation:** Ensure the device is fully charged. Adjust intensity settings in the app.

For further assistance, please contact LOVENSE customer support.

SPECIFICATIONS

Feature	Detail
Brand	LOVENSE
Model	Ridge
Material	Silicone
Color	Black
Insertable Part Length	5.79 inches (147 mm)
Max Diameter	1.34 inches (34 mm)
Base Width	2.76 inches (71.28 mm)

Feature	Detail
Package Dimensions	8.07 x 3.94 x 1.93 inches
Weight	8.78 ounces
Connectivity	Bluetooth
Control	App-controlled, Button-controlled
Water Resistance	IPX7 (Waterproof)
Power Source	Rechargeable (USB)

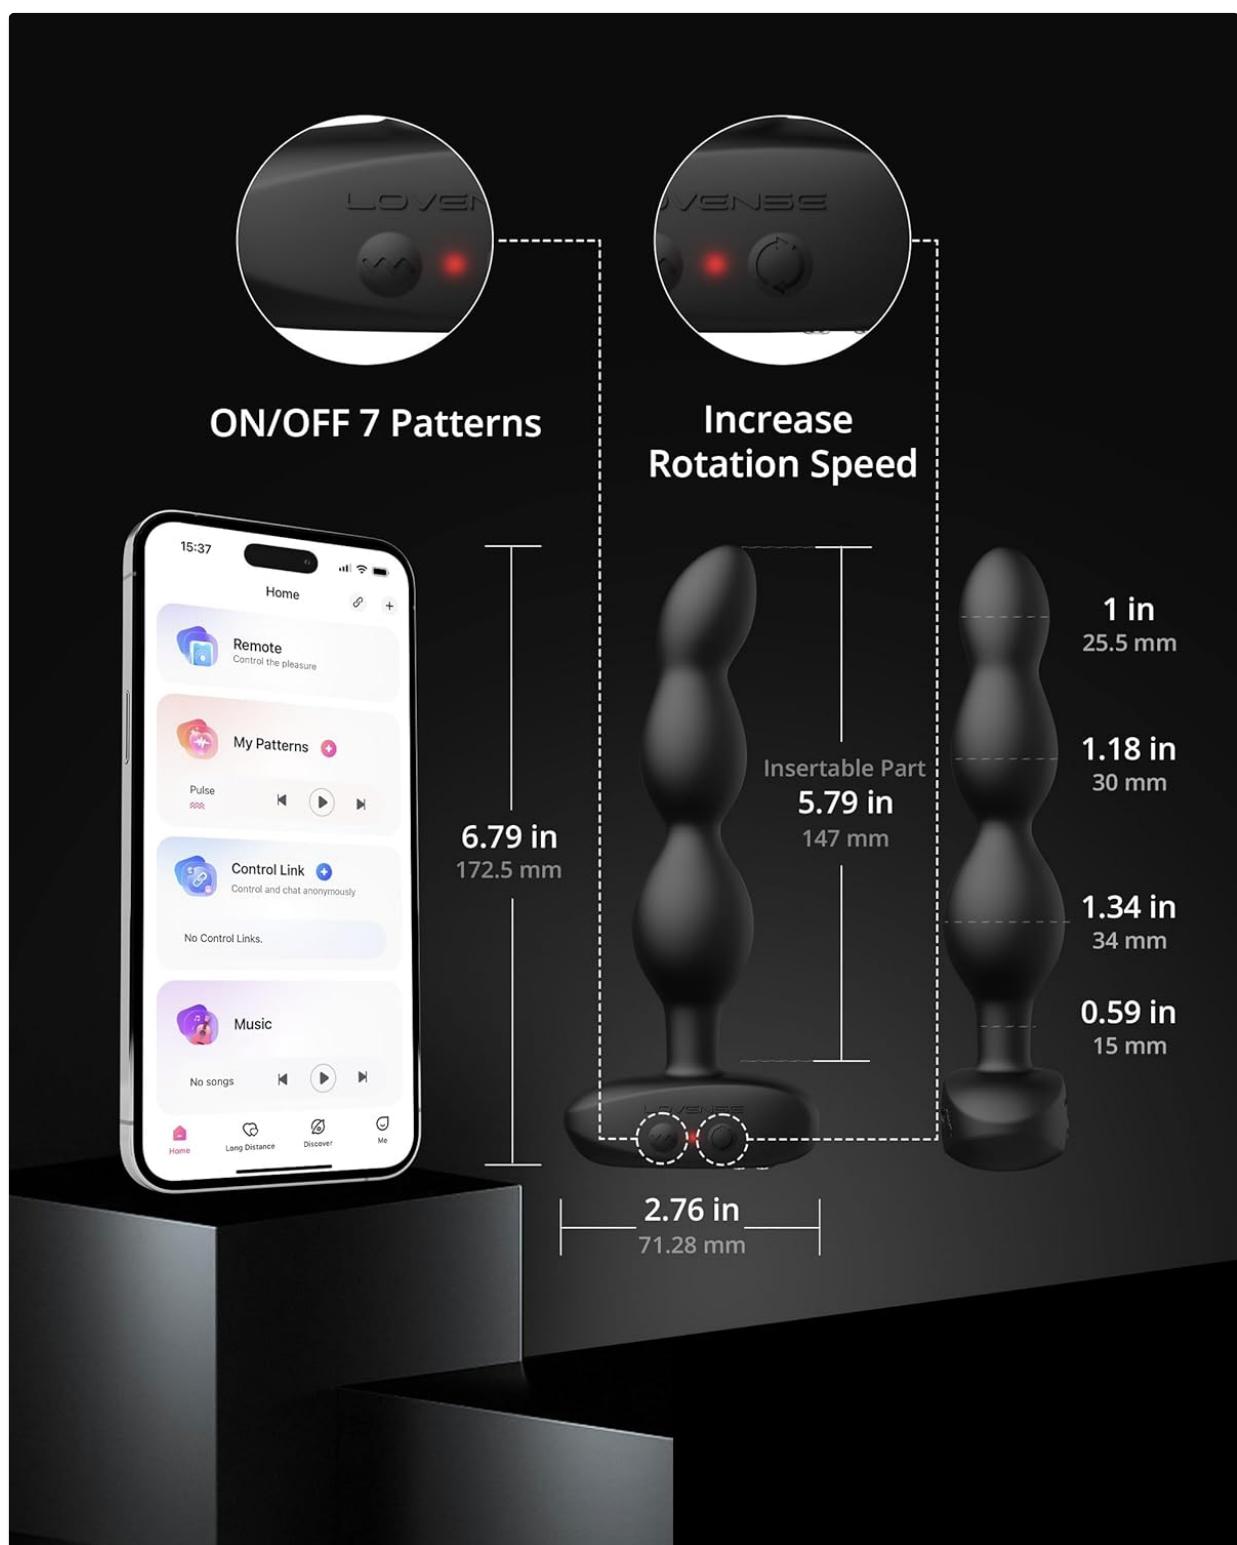


Image: A detailed diagram illustrating the dimensions of the LOVENSE Ridge device.

WARRANTY AND SUPPORT

For any questions, concerns, or warranty inquiries regarding your LOVENSE Ridge device, please contact the LOVENSE Official Store directly. Our support team is available to assist you within 24 hours. You can visit the official LOVENSE store for more information: [LOVENSE Official Store](#).