

[Manuals.plus](#) /

> [VOLTRX](#) /

> VOLTRX Merger USB C Rechargeable Electric Protein Shaker Bottle Instruction Manual (Model vt005)

VOLTRX vt005

VOLTRX Merger USB C Rechargeable Electric Protein Shaker Bottle Instruction Manual

Model: vt005

INTRODUCTION

The VOLTRX Merger Electric Protein Shaker Bottle is designed to provide a smooth, lump-free mix for your protein shakes and meal replacements. Featuring a powerful blending motor, leak-proof design, and long-lasting rechargeable battery, this 24oz shaker is convenient for daily use. It is constructed from BPA-free, eco-friendly materials.



SETUP

1. **Initial Cleaning:** Before first use, disassemble the bottle and wash all parts with warm soapy water. The bottle cup is dishwasher safe, but the motor base should be hand-washed carefully to avoid water damage to the electronics.
2. **Charging:** Ensure the motor base is fully charged before initial use. Connect the included USB-C charging cable to the port on the motor base and a suitable power source. A full charge provides up to 120 uses.
3. **Assembly:**
 - Attach the mixing blade to the motor base.
 - Securely screw the motor base onto the bottom of the bottle cup.
 - Ensure the silicone seal is properly seated in the lid to prevent leaks.
 - Close the flip-top lid firmly.



Image: The shaker bottle disassembled, showing the detachable motor base and cup for cleaning and assembly.



Image: Close-up of the USB-C charging port located on the motor base of the shaker bottle.

OPERATING INSTRUCTIONS

1. **Add Liquid First:** Pour the desired amount of liquid (water, milk, etc.) into the shaker bottle. It is recommended to add liquid before powder to ensure optimal mixing and prevent clumping.
2. **Add Powder:** Add your protein powder, meal replacement, or other mixable supplements. The 24oz capacity can accommodate up to 3 scoops of powder.
3. **Secure Lid:** Ensure the lid is securely fastened and the flip-top cap is closed to prevent leaks during mixing.
4. **Activate Mixing:** Press the power button on the motor base to start the blending process. The powerful motor will

create a vortex to thoroughly mix your ingredients.

5. **Mixing Duration:** Allow the bottle to mix for approximately 15 seconds, or until your desired consistency is achieved. The mixer will typically stop automatically.
6. **Enjoy:** Open the flip-top cap and enjoy your smoothly blended drink.



Image: Illustration of protein powder being added to the shaker bottle for mixing.



Image: The interior of the shaker bottle showing a perfectly blended, smooth drink.

MAINTENANCE

Cleaning

- **Detachable Design:** The VOLTRX Merger shaker bottle features detachable parts for easy cleaning. Unscrew the motor base from the bottle cup.
- **Bottle Cup:** The bottle cup is dishwasher safe. Alternatively, it can be hand-washed with warm soapy water.
- **Motor Base:** The motor base, containing the electronic components, should **only be hand-washed**. Wipe the exterior with a damp cloth. Avoid submerging the motor base in water or placing it in a dishwasher to prevent damage.
- **Mixing Blade:** The mixing blade can be removed from the motor base for thorough cleaning. Wash with warm soapy water.
- **Lid and Seals:** Wash the lid and silicone seals with warm soapy water. Ensure all seals are clean and properly re-seated after washing to maintain leak-proof performance.
- **Drying:** Allow all components to dry completely before reassembling or storing.



Image: A hand demonstrating the removal of the silicone seal from the lid for detailed cleaning.



Image: The shaker bottle cup being rinsed under running water, illustrating its easy-to-clean design.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Bottle not mixing	Low battery; Motor base not securely attached; Too much powder/thick mixture.	Charge the motor base; Ensure the motor base is screwed on tightly; Reduce powder quantity or add more liquid.
Leaking from lid	Lid not closed properly; Silicone seal misplaced or dirty.	Ensure lid and flip-top are firmly closed; Check and clean the silicone seal, then re-seat it correctly.
Lumps in shake	Powder added before liquid; Insufficient mixing time; Too much powder.	Always add liquid first; Increase mixing time; Reduce powder amount.
Motor not turning on	Battery depleted; Faulty connection.	Recharge the motor base fully; Ensure USB-C cable is properly connected. If problem persists, contact customer support.

SPECIFICATIONS

- **Brand:** VOLTRX
- **Model Name:** Merger
- **Model Number:** vt005
- **Capacity:** 24 oz (approximately 700 ml)
- **Material:** Polypropylene, BPA-Free
- **Color:** Grey (for this specific variant)
- **Charging:** USB-C Rechargeable
- **Battery Life:** Up to 120 uses per charge
- **Item Weight:** 0.37 Kilograms
- **Dimensions (W x H):** 3.5" x 10.2" (95mm x 235mm)
- **Care Instructions:** Bottle cup is dishwasher safe; Motor base is hand-wash only.



Image: Diagram showing the dimensions of the VOLTRX Merger Shaker Bottle.

WARRANTY AND SUPPORT

VOLTRX offers a **1-Year No-Risk Trial** for this product. If you are not satisfied, you may return it. Additionally, VOLTRX provides **365 Days, 24/7 Professional Customer Support** to assist with any questions or issues you may encounter. For support, please refer to the contact information provided with your product packaging or visit the official VOLTRX website.

