

[Manuals.plus](#) /

› [PERFASCIN](#) /

› PERFASCIN XXD3154 Replacement Remote Control User Manual for Pioneer AV Receivers

PERFASCIN XXD3154

PERFASCIN XXD3154 Replacement Remote Control User Manual

FOR PIONEER AV RECEIVER SYSTEMS: VSX817K, VSX818VS, VSX817S, VSX418, VSX-418, VSX-418-K, VSX-418-S

Introduction

This manual provides instructions for the PERFASCIN XXD3154 replacement remote control. This remote is designed to operate various Pioneer AV Receiver Systems without the need for programming or pairing. It functions as a direct replacement for your original remote.

Package Contents

The package includes:

- 1 x PERFASCIN XXD3154 Replacement Remote Control





Image 1: Top-down view of the PERFASCIN XXD3154 replacement remote control, showcasing all buttons and its ergonomic design.

Setup

Battery Installation

The PERFASCIN XXD3154 remote control requires two AAA batteries (not included). Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover off.
3. Insert two new AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

Once batteries are installed, the remote is ready for use. No programming or pairing is required.



Image 2: Angled view of the PERFASCIN XXD3154 remote control, highlighting its side profile and button layout.

Operating Instructions

This remote control is designed to replicate the functions of your original Pioneer AV Receiver remote. Point the remote directly at your AV receiver for optimal performance.

Basic Remote Functions

Power On/Off: Press the **RECEIVER POWER** button (red button, top right) to turn your Pioneer AV receiver on or off.

Input Selection: Use the input selection buttons (e.g., **DVD**, **TV**, **CD**, **FM**, **AM**) to choose your desired audio/video source.

Volume Control: Adjust the volume using the **MASTER VOLUME +** and **MASTER VOLUME -** buttons. Press **MUTE** to temporarily silence the audio.

Navigation and Menu Control: Use the directional arrow buttons (**UP**, **DOWN**, **LEFT**, **RIGHT**) and the

central **ENTER** button for menu navigation and selection within your AV receiver's interface.

Number Pad: The number pad (0-9) can be used for direct input, such as selecting radio station presets or track numbers, depending on your receiver's capabilities.



Image 3: Another angled view of the PERFASCIN XXD3154 remote control, providing a clear perspective of the button layout and overall design.

Care and Maintenance

- Keep the remote control dry. Liquids can damage the internal circuitry.
- Avoid exposing the remote to extreme temperatures.
- Do not drop or subject the remote to strong impacts.
- Clean the remote with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- If the remote will not be used for an extended period, remove the batteries to prevent leakage.

Troubleshooting

Problem	Solution
Remote is not responding.	• Ensure new alkaline batteries are correctly installed with proper polarity. • Check if the batteries are depleted and replace them if necessary. • Ensure there are no obstructions between the remote and the AV receiver's infrared sensor. • Verify that the remote is pointed directly at the AV receiver.

Problem	Solution
Certain buttons do not work.	• Confirm that the button function is supported by your specific Pioneer AV receiver model. • Clean the remote control surface, especially around the non-working buttons, to remove any debris.
Remote range is reduced.	• Replace the batteries with new ones. • Ensure no strong light sources (e.g., direct sunlight, fluorescent lights) are interfering with the infrared signal.

Product Specifications

Model: PERFASCIN XXD3154

Compatibility: Pioneer VSX817K, VSX818VS, VSX817S, VSX418, VSX-418, VSX-418-K, VSX-418-S AV Receiver Systems

Power Source: 2 x AAA Batteries (not included)

Special Features: Ergonomic design, No programming required, Infrared (IR) controller

Color: Black

Dimensions: Approximately 6 x 5 x 0.55 inches

Weight: Approximately 1.4 ounces (without batteries)

Warranty and Support

This PERFASCIN remote control has been tested before shipping to ensure functionality.

For any questions or assistance regarding your PERFASCIN XXD3154 replacement remote control, please contact the seller directly through your purchase platform for prompt support.