

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Erbauer](#) /
- › [Erbauer ERO18-Li 18V Brushless Random Orbital Sander User Manual](#)

Erbauer ERO18-Li

Erbauer ERO18-Li 18V Brushless Random Orbital Sander User Manual

Model: ERO18-Li

INTRODUCTION

This manual provides essential information for the safe operation, maintenance, and troubleshooting of your Erbauer ERO18-Li 18V Brushless Random Orbital Sander. Please read these instructions carefully before using the tool and keep them for future reference.

GENERAL SAFETY INSTRUCTIONS

Always follow basic safety precautions to reduce the risk of fire, electric shock, and personal injury. Keep your work area clean and well-lit. Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases, or dust.

- **Wear Eye Protection:** Always wear appropriate eye protection, such as safety goggles, when operating the sander.
- **Wear Respiratory Protection:** Use a dust mask or respirator, especially when sanding materials that produce fine dust.
- **Secure Workpiece:** Always secure the workpiece firmly to prevent movement during sanding.
- **Inspect Tool:** Before each use, inspect the tool for any damage or loose parts. Do not use if damaged.
- **Battery Safety:** Use only specified battery packs. Do not expose batteries to heat or water.
- **Keep Hands Clear:** Keep hands and fingers away from the sanding pad during operation.

PRODUCT OVERVIEW

The Erbauer ERO18-Li is a cordless 18V brushless random orbital sander designed for efficient sanding of various surfaces. Its brushless motor provides extended runtime and durability.



Image 1: Erbauer ERO18-Li 18V Brushless Random Orbital Sander. This image displays the main body of the sander, featuring its black and teal color scheme, the Erbauer logo, and the red power button. The battery slot is visible at the rear.

Key Components:

- Sanding Pad (125mm diameter)
- On/Off Switch
- Dust Collection Port
- Battery Port
- Auxiliary Handle (if applicable, not clearly visible in image but common)

SETUP

1. Battery Installation

1. Ensure the sander is switched off.
2. Align the fully charged 18V Erbauer battery pack with the battery port on the sander.
3. Slide the battery pack into the port until it clicks securely into place.
4. To remove, press the release button on the battery pack and slide it out.

2. Sandpaper Attachment

1. Ensure the sander is switched off and the battery is removed.
2. Select a 125mm diameter sanding disc with the appropriate grit for your application.
3. Align the holes on the sanding disc with the holes on the sanding pad for optimal dust extraction.
4. Press the sanding disc firmly onto the hook-and-loop sanding pad.
5. To remove, simply peel the sanding disc off the pad.

3. Dust Collection

Attach a dust bag or connect a vacuum cleaner to the dust collection port for efficient dust management. This improves visibility and reduces airborne dust.

OPERATING INSTRUCTIONS

1. Switching On/Off

- To switch on, press the On/Off switch (typically a red button or lever).
- To switch off, release or press the On/Off switch again.

2. Sanding Techniques

- **Starting:** Place the sander flat on the workpiece before switching it on.
- **Movement:** Move the sander in smooth, overlapping circular or linear motions. Avoid applying excessive pressure; let the tool do the work.
- **Even Finish:** Maintain consistent speed and pressure for an even sanding result.
- **Stopping:** Lift the sander from the workpiece before switching it off.

3. Material Considerations

Always test on a scrap piece of material first. Use coarser grit sandpaper for removing more material and finer grit for a smoother finish. Adjust sanding speed if your model features variable speed control (not explicitly stated for ERO18-Li, so keep general).

MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your tool.

- **Cleaning:** After each use, disconnect the battery and clean the tool with a soft, damp cloth. Remove any dust buildup from the ventilation openings and the sanding pad. Do not use solvents.
- **Sanding Pad Inspection:** Regularly check the hook-and-loop sanding pad for wear. Replace if it no longer holds sandpaper securely.
- **Battery Care:** Store batteries in a cool, dry place. Do not store fully discharged batteries for extended periods.
- **Storage:** Store the sander in a dry, secure location, out of reach of children.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Sander does not start.	Battery not charged or improperly inserted.	Ensure battery is fully charged and correctly inserted.
Poor sanding performance.	Worn sandpaper or incorrect grit. Worn sanding pad.	Replace sandpaper. Use appropriate grit. Replace sanding pad if hook-and-loop is worn.
Excessive vibration.	Sanding disc not centered or damaged.	Re-center or replace sanding disc. Inspect sanding pad for damage.
Excessive dust.	Dust bag full or not properly attached. Dust extraction holes blocked.	Empty and reattach dust bag. Clear dust extraction holes on sandpaper and pad.

TECHNICAL SPECIFICATIONS

Model:	ERO18-Li
---------------	----------

Brand:	Erbauer
Voltage:	18 Volts
Power Source:	Battery-powered (Lithium-ion)
Max Rotation Speed:	10000 RPM
Disc Diameter:	125 mm
Weight:	4 kg

WARRANTY AND SUPPORT

This product is new in its original packaging and benefits from the manufacturer's original warranty. For specific warranty details, please refer to the documentation included with your purchase or contact Erbauer customer support.

For technical assistance, spare parts, or service inquiries, please contact your retailer or the official Erbauer service center. Keep your proof of purchase for warranty claims.