

- Manuals.plus /
- > [ECONTROLLY](#) /
 - > User Manual: ECONTROLLY Replacement Remote Control for Pheanoo P15 Soundbar

ECONTROLLY Replacement Remote Control for Pheanoo P15 Soundbar

User Manual: Replacement Remote Control

Brand: ECONTROLLY | Model: Replacement Remote Control for Pheanoo P15 Soundbar

1. INTRODUCTION

This document serves as the official instruction manual for the ECONTROLLY Replacement Remote Control, specifically designed to operate the Pheanoo P15 Soundbar. This infrared remote control requires no programming and is ready for use upon battery installation. It provides intuitive control over your soundbar's functions, including power, volume, input selection, and sound modes.



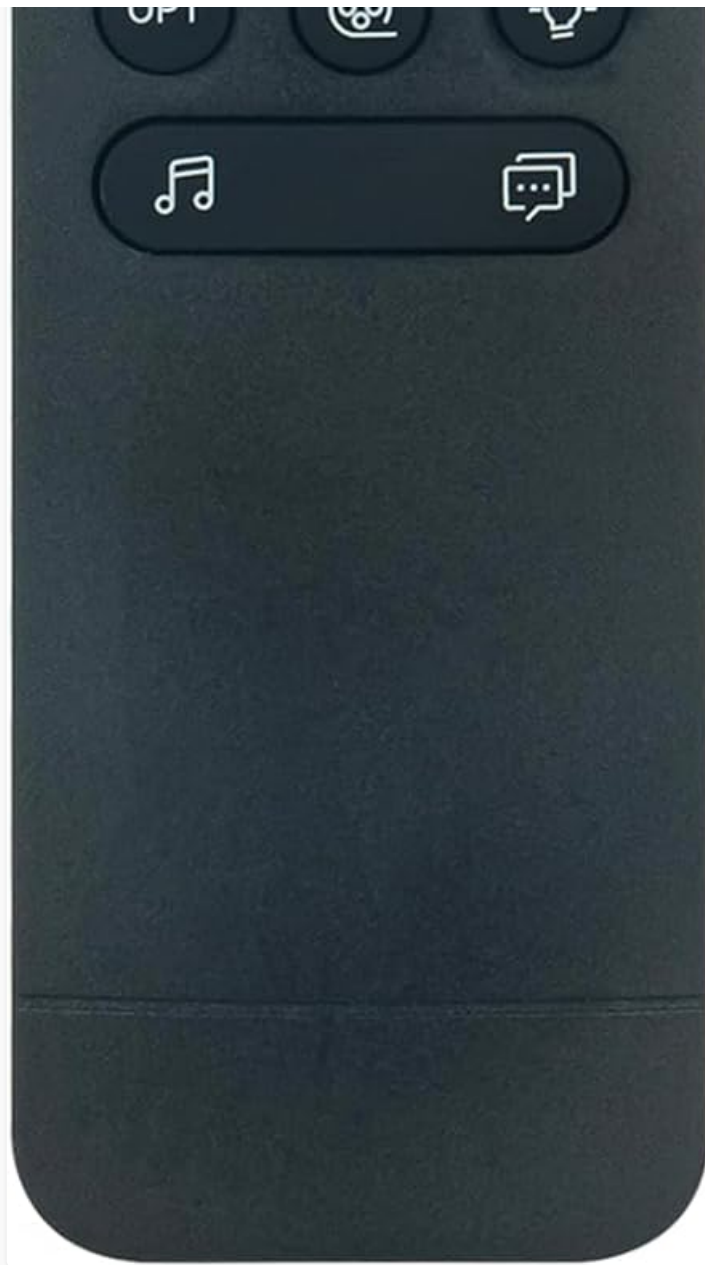


Image 1.1: Front view of the ECONTROLLY Replacement Remote Control, showing all buttons and their labels.

2. SETUP

2.1 Battery Installation

The remote control requires two (2) AAA ALKALINE batteries for operation. Rechargeable batteries are not recommended.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or in the direction indicated by an arrow to open it.
3. Insert two AAA ALKALINE batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery cover by sliding it back into position until it clicks securely.



Image 2.1: Angled view of the remote control, illustrating its ergonomic design.

3. OPERATING INSTRUCTIONS

This remote control is pre-programmed for the Pheanoo P15 Soundbar and requires no additional setup. Simply point the remote towards the soundbar and press the desired button.

3.1 Button Functions

- **(Power):** Turns the soundbar on or off.
- **(Mute):** Mutes or unmutes the soundbar audio.
- **TV ARC:** Selects the TV ARC input source.
- **AUX:** Selects the Auxiliary input source.
- **BT:** Selects the Bluetooth input source for wireless audio streaming.
- **VOL+ / VOL-:** Increases or decreases the master volume level.
- **BASS+ / BASS-:** Adjusts the bass level up or down.
- **/ RESET:** Play/Pause function. Press and hold to reset sound settings to default.
- **OPT:** Selects the Optical input source.

- **(Movie Mode):** Activates the Movie sound mode for enhanced cinematic audio.
- **(Light/EQ Mode):** Cycles through different EQ modes or light settings (if applicable to soundbar).
- **(Music Mode):** Activates the Music sound mode for optimized music playback.
- **(News/Dialogue Mode):** Activates the News or Dialogue sound mode for clearer voice reproduction.

4. MAINTENANCE

Proper care ensures the longevity and functionality of your remote control.

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use abrasive cleaners, waxes, or solvents.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or it stops functioning. Always replace both batteries at the same time.
- **Storage:** Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures.
- **Liquid Exposure:** Avoid exposing the remote control to water or other liquids. If it gets wet, remove batteries immediately and allow it to dry completely before reinserting them.

5. TROUBLESHOOTING

If you encounter issues with your remote control, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Remote control not working.	Dead or incorrectly inserted batteries. Obstruction between remote and soundbar. Remote out of range.	Replace batteries with new AAA ALKALINE batteries, ensuring correct polarity. Remove any obstructions. Ensure you are within effective range (typically 20-30 feet) and pointing directly at the soundbar's IR receiver.
Buttons are unresponsive or sticky.	Dirt or debris under buttons.	Clean the remote control surface with a soft, dry cloth. Avoid pressing buttons excessively hard.
Soundbar not responding to specific functions.	Soundbar may be in an unresponsive state or the function is not supported.	Try power cycling the soundbar (unplug and plug back in). Refer to your Pheanoo P15 Soundbar's manual for specific function details.

6. SPECIFICATIONS

Feature	Detail
Product Dimensions	3.94 x 1.57 x 0.59 inches
Item Weight	1.13 ounces
Batteries Required	2 AAA batteries (Alkaline recommended)

Feature	Detail
Compatible Devices	Pheanoo P15 Soundbar
Connectivity Technology	Infrared (IR)
Color	Black
Special Feature	Pre Programmed

7. SUPPORT

For any questions, concerns, or assistance regarding your ECONTROLLY Replacement Remote Control, please feel free to contact us. We are committed to providing support to ensure your satisfaction.

Please refer to the seller's contact information on the platform where the product was purchased for direct support channels.

© 2023 ECONTROLLY. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B0C7K12YY6>

More documents and user manuals: <https://manuals.plus/>