

Moulinex AT714, AT718, MQ711 Series

Moulinex Multi Moulinette XXL Chopper Bowl Lid Instruction Manual

Brand: Moulinex

Model Compatibility: AT714, AT718, MQ711 Series

1. INTRODUCTION

This manual provides essential information for the proper use, installation, and maintenance of your Moulinex Original Replacement Chopper Bowl Lid. This lid is designed as a genuine spare part for specific Moulinex and Tefal Multi Moulinette XXL choppers, ensuring optimal performance and fit.

It functions as a deflector lid for the chopper bowl, an integral component for safe and efficient operation of your appliance.

2. PRODUCT OVERVIEW

The Moulinex Chopper Bowl Lid is a transparent, circular component designed to securely cover the chopper bowl during operation. It features a central opening, likely for the motor unit shaft, and is crucial for containing food contents and ensuring safe blending/chopping.



Figure 2.1: Top view of the Moulinex Chopper Bowl Lid. This image shows the clear, circular design of the lid with a central opening, indicating its function as a cover for a food processor bowl.



Figure 2.2: Angled view of the Moulinex Chopper Bowl Lid. This perspective highlights the slightly raised central section and the overall transparent construction of the lid.

No official product videos are available for this specific replacement part from the manufacturer.

3. COMPATIBILITY

This replacement lid is compatible with various Moulinex and Tefal Multi Moulinette models. It is crucial to verify your appliance's model number to ensure proper fit and function.

You can typically find your product's data on the identification plate, which is usually located on the underside of the appliance.

Compatible Models:

- **Moulinex:**

- AT712G
- AT7131
- AT714G
- AT718A
- AT712G30/350 MULTI-MOULINETTES
- AT712G30/35B MULTI-MOULINETTES
- AT712G31/350 MULTI-MOULINETTE
- AT712G31/35B MULTI-MOULINETTES
- AT712G61/350 MULTI-MOULINETTE
- AT712G61/35B MULTI-MOULINETTES
- AT713165/350 MULTI-MOULINETTE
- AT713165/35B MULTI-MOULINETTES
- AT714G32/350 MULTI-MOULINETTE
- AT714G32/35B MULTI-MOULINETTES
- AT714G40/350 MULTI-MOULINETTE
- AT718A10/350 MULTI-MOULINETTES XXL 0,8L
- AT718A10/35B MULTI-MOULINETTES XXL 0,8L
- AT718A27/350 MULTI-MOULINETTES XXL 0,8L
- AT718A27/35B MULTI-MOULINETTES XXL 0,8L

- **Tefal:**

- MQ7114
- MQ7141

- MQ718A
- MQ711410/35B MULTI-MOULINETTE
- MQ714140/350 MULTI-MOULINETTES
- MQ714140/35B MULTI-MOULINETTES
- MQ718A67/350 MULTI-MOULINETTES XXL 0,8L
- MQ718A67/35B MULTI-MOULINETTES XXL 0,8L

If your model is not listed, please contact the manufacturer or seller for compatibility confirmation before purchase.

4. SETUP

As a replacement part, the setup primarily involves replacing an existing or lost lid.

1. **Unpack:** Carefully remove the new lid from its packaging.
2. **Inspect:** Before first use, inspect the lid for any signs of damage from shipping. Do not use if damaged.
3. **Clean:** Wash the lid thoroughly with warm, soapy water before its initial use. Rinse well and dry completely.
4. **Prepare Appliance:** Ensure your Moulinex or Tefal Multi Moulinette chopper bowl is clean and dry.

5. OPERATING

The lid's primary function is to cover the chopper bowl during operation, preventing spills and ensuring safe use of the appliance.

1. **Place Ingredients:** Add your desired ingredients into the chopper bowl.
2. **Insert Blade:** Ensure the chopping blade is correctly seated on the central pin within the bowl.
3. **Position Lid:** Carefully place the replacement lid onto the chopper bowl, aligning any tabs or grooves with the bowl's rim. The central opening of the lid should align with the blade's shaft or the motor unit's connection point.
4. **Secure Lid:** Gently press down or twist (depending on your specific model's design) until the lid is securely fastened to the bowl. A proper seal is essential for safe operation.
5. **Attach Motor Unit:** Once the lid is securely in place, attach the motor unit of your Multi Moulinette chopper according to your appliance's main instruction manual.
6. **Operate:** You can now operate your chopper as usual.

Important: *Never operate the chopper without the lid securely in place.*

6. MAINTENANCE

Proper cleaning and care will extend the life of your replacement lid.

- **Cleaning:** After each use, detach the lid from the chopper bowl. Wash it immediately with warm water and a mild dish soap. Use a soft sponge or cloth to clean all surfaces.
- **Rinsing:** Rinse thoroughly under running water to remove all soap residue.
- **Drying:** Allow the lid to air dry completely or dry with a clean cloth before storing.
- **Storage:** Store the lid in a clean, dry place, preferably with your chopper bowl and other accessories.
- **Avoid Harsh Cleaners:** Do not use abrasive cleaners, scouring pads, or harsh chemicals, as these can scratch or damage the plastic.
- **Dishwasher Safety:** Refer to your main appliance manual for specific dishwasher safety instructions for

accessories. If not specified, hand washing is recommended to preserve the material.

7. TROUBLESHOOTING

This section addresses common issues related to the chopper bowl lid.

- **Lid does not fit:**
 - Ensure you have the correct model. Refer to Section 3: Compatibility.
 - Check for any obstructions or debris on the rim of the bowl or the lid itself.
 - Verify that the blade is correctly seated in the bowl, as improper blade placement can prevent the lid from closing.
- **Lid is damaged (cracked, broken):**
 - If the lid arrived damaged, contact the seller immediately for a replacement.
 - If damage occurred during use, the lid may need to be replaced. Continued use of a damaged lid can be unsafe.
- **Lid leaks during operation:**
 - Ensure the lid is securely fastened and properly aligned with the bowl.
 - Do not overfill the chopper bowl beyond its maximum capacity.
 - Check for any cracks or deformities in the lid or bowl that might compromise the seal.

8. SPECIFICATIONS

Product Type	Replacement Chopper Bowl Lid (Deflector Lid)
Brand	Moulinex (Original Part)
Manufacturer	Moulinex
Material	Transparent Plastic
Compatible Capacity	Primarily for 0.8L XXL Multi Moulinette models
ASIN	B0C7KM4ZP3
First Available Date	June 9, 2023

9. WARRANTY AND SUPPORT

Specific warranty information for this replacement part is not provided in the product details. For warranty claims or technical support, please refer to the original purchase documentation or contact the seller directly.

You may also visit the official Moulinex website for general support information or to locate authorized service centers.

Moulinex Official Store: [Visit Store](#)

