

## MUSIC HERO MHHEADFLICKBTW

# MUSIC HERO SKIDUP Wireless Headphones

Model: MHHEADFLICKBTW

## INTRODUCTION

Thank you for choosing the MUSIC HERO SKIDUP Wireless Headphones. These headphones are designed to provide a comfortable and immersive audio experience for music, videos, and calls. Featuring soft, padded earcups, an adjustable headband, and integrated controls, they offer convenience and up to 20 hours of playtime on a single charge. This manual provides essential information for setup, operation, maintenance, and troubleshooting to ensure optimal performance.

## SAFETY INFORMATION

- Do not expose the headphones to extreme temperatures, humidity, or corrosive substances.
- Avoid dropping or subjecting the headphones to strong impacts.
- Do not disassemble or attempt to repair the headphones yourself. This may void the warranty and cause damage.
- Clean the headphones with a soft, dry cloth. Do not use liquid cleaners.
- Prolonged listening at high volume levels may cause hearing damage. Adjust volume to a safe level.
- Keep out of reach of children.

## PACKAGE CONTENTS

Please check the package for the following items:

- MUSIC HERO SKIDUP Wireless Headphones
- USB-A to USB-C Charging Cable
- User Manual (this document)

## PRODUCT OVERVIEW

Familiarize yourself with the components of your headphones.



**Image:** Front view of the white MUSIC HERO SKIDUP Wireless Headphones. The headphones feature a minimalist design with padded earcups and an adjustable headband.

### **Controls and Indicators:**

- **Power Button:** On/Off, Play/Pause, Answer/End Call.
- **Volume Up/Next Track Button:** Increase volume, skip to next track.
- **Volume Down/Previous Track Button:** Decrease volume, go to previous track.
- **Microphone:** For hands-free calls.
- **USB-C Charging Port:** For charging the headphones.
- **LED Indicator:** Shows power, charging, and pairing status.

## **SETUP**

### **1. Initial Charging**

1. Connect the small end of the included USB-C charging cable to the USB-C port on the headphones.

2. Connect the larger USB-A end of the cable to a USB power adapter (not included) or a computer's USB port.
3. The LED indicator will illuminate during charging and change color or turn off when fully charged. A full charge provides up to 20 hours of playtime.

## 2. Powering On/Off

- **To Power On:** Press and hold the Power Button for approximately 3 seconds until the LED indicator flashes.
- **To Power Off:** Press and hold the Power Button for approximately 3 seconds until the LED indicator turns off.

## 3. Bluetooth Pairing

1. Ensure the headphones are powered off.
2. Press and hold the Power Button for approximately 5-7 seconds until the LED indicator flashes rapidly (usually blue and red alternately), indicating pairing mode.
3. On your device (smartphone, tablet, laptop, Smart TV), enable Bluetooth and search for available devices.
4. Select "SKIDUP" or "MHHEADFLICKBTW" from the list of found devices.
5. Once paired, the LED indicator will flash slowly or turn solid blue.
6. The headphones will automatically reconnect to the last paired device when powered on, if Bluetooth is enabled on the device.

## OPERATING INSTRUCTIONS

---

### Music Playback

- **Play/Pause:** Press the Power Button once.
- **Next Track:** Press and hold the Volume Up button.
- **Previous Track:** Press and hold the Volume Down button.
- **Volume Up:** Press the Volume Up button briefly.
- **Volume Down:** Press the Volume Down button briefly.

### Call Management

- **Answer/End Call:** Press the Power Button once.
- **Reject Call:** Press and hold the Power Button for 2 seconds.
- **Redial Last Number:** Double-press the Power Button.

## MAINTENANCE

---

- **Cleaning:** Use a soft, dry, lint-free cloth to clean the headphones. Do not use abrasive cleaners, alcohol, or chemical solvents.
- **Storage:** When not in use, store the headphones in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, charge the headphones regularly, even if not used frequently. Avoid fully discharging the battery for extended periods.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Headphones do not power on.	Low battery.	Charge the headphones using the provided USB-C cable.
Cannot pair with device.	Headphones not in pairing mode; Bluetooth off on device; device too far.	Ensure headphones are in pairing mode (rapidly flashing LED). Turn on Bluetooth on your device. Move headphones closer to the device (within 10 meters).
No sound or low volume.	Volume too low on headphones or device; headphones not properly connected.	Increase volume on both headphones and connected device. Re-pair the headphones.
Poor sound quality.	Interference; device too far; low battery.	Move closer to the connected device. Avoid obstacles. Charge the headphones.

## SPECIFICATIONS

- **Model Name:** MHHEADFLICKBTW
- **Connectivity Technology:** Wireless (Bluetooth)
- **Control Method:** Tactile
- **Special Features:** Integrated Microphone
- **Ear Placement:** Over-Ear (Supra-aural)
- **Battery Type:** Lithium-Polymer (1 included)
- **Battery Life:** Up to 20 hours (playback/calls)
- **Charging Port:** USB-C
- **Compatible Devices:** Mobile phones, tablets, laptops, PCs, Smart TVs
- **Manufacturer:** SBS

## WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided with your purchase or visit the official MUSIC HERO website. Keep your proof of purchase for warranty claims.

**Manufacturer:** SBS

**Brand:** MUSIC HERO