

Spirit Halloween Scary Sitting Scarecrow Animatronic

Spirit Halloween 4.5 Ft Scary Sitting Scarecrow Animatronic

INSTRUCTION MANUAL

1. Introduction

This manual provides detailed instructions for the safe and effective use of your Spirit Halloween 4.5 Ft Scary Sitting Scarecrow Animatronic. This animated decoration is designed to provide a pop-up motion scare, suitable for various Halloween displays. Please read all instructions thoroughly before assembly and operation to ensure proper function and safety.

2. Safety Information

- Read all instructions before use and retain for future reference.
- For indoor or covered outdoor use only. Protect the animatronic from direct exposure to rain, snow, and extreme weather conditions.
- Keep away from open flames, heaters, and other heat sources.
- This product is not a toy. Keep out of reach of small children and pets.
- Ensure the animatronic is placed on a stable, level surface to prevent tipping. If placing on a chair, ensure the chair is sturdy.
- Unplug the animatronic from the power outlet when not in use, during assembly, disassembly, or cleaning.
- Do not attempt to modify or repair the animatronic. Refer all servicing to qualified personnel.

3. Package Contents

Verify that all components are present before beginning assembly:

- 1 x Spirit Halloween 4.5 Ft Scary Sitting Scarecrow Animatronic Unit
- 1 x Power Adapter
- 1 x Instruction Manual

4. Setup

1. **Unpack Components:** Carefully remove all items from the packaging. Inspect for any damage.
2. **Placement:** Position the animatronic in its desired location. The unit is designed to sit, so a sturdy chair or similar support (not included) is recommended. Ensure the surface is flat and stable.
3. **Connect Power:** Connect the power adapter cable to the designated port on the animatronic. Then, plug the power adapter into a standard household electrical outlet.
4. **Sensor Positioning:** The animatronic features a motion sensor. Position the unit so that the sensor can detect movement in the area where you intend to trigger the scare effect.





Figure 1: The Spirit Halloween 4.5 Ft Scary Sitting Scarecrow Animatronic, ready for placement.



Figure 2: Example placement of the animatronic in a Halloween setting.

5. Operating Instructions

1. **Power On:** Once the power adapter is securely plugged into both the animatronic and the wall outlet, the unit will power on. It may perform an initial activation sequence.
2. **Activation:** The Scary Sitting Scarecrow Animatronic is primarily activated by its integrated motion sensor. When movement is detected within the sensor's range, the animatronic will initiate its scare sequence.
3. **Scare Sequence:** Upon activation, the scarecrow will rise up with a pop-up motion, accompanied by sounds and illuminated eyes (if applicable).
4. **Power Off:** To turn off the animatronic, simply unplug the power adapter from the electrical outlet.

6. Maintenance

- **Cleaning:** To clean the animatronic, gently spot clean fabric and plastic components with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners. Do not immerse any part of the animatronic in water.
- **Storage:** When not in use, unplug the animatronic and store it in a dry, cool environment, away from direct sunlight and extreme temperatures. Ensure all components are completely dry before storing.
- **Inspection:** Periodically inspect the power cord and animatronic for any signs of wear or damage. If damage is found, discontinue use and contact customer support.

7. Troubleshooting

Problem	Possible Cause	Solution
Animatronic does not activate.	No power; Motion sensor obstructed or improperly positioned.	Check power adapter connection to both the unit and the outlet. Ensure the outlet is functional. Verify the motion sensor is clear and facing the detection area.
Motion is erratic or incomplete.	Unstable power supply; Obstruction in movement path; Internal mechanism issue.	Ensure a stable power source. Check for any objects blocking the animatronic's movement. If the issue persists, contact customer support.
Sound is distorted or absent.	Speaker obstruction; Volume setting (if applicable); Internal audio component issue.	Check if anything is covering the speaker. Ensure any volume controls are set appropriately. If the problem continues, contact customer support.

8. Specifications

- **Product Dimensions:** 17 x 15 x 54 inches
- **Item Weight:** 6 pounds
- **Manufacturer:** Spirit Halloween
- **Materials:** Metal, fabric, plastic, polyester
- **Power Source:** AC Adapter (specific voltage/amperage details typically found on the adapter itself)

9. Warranty and Support

For detailed warranty information, product registration, or to contact customer support, please visit the official Spirit Halloween website or refer to the contact information provided on your product packaging. Please retain your proof of purchase for any warranty claims or support inquiries.