

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [ZEBRONICS](#) /

› [ZEBRONICS Zeb-Rainbow 400 Multimedia Speaker User Manual](#)

## ZEBRONICS Zeb Rainbow 400

# ZEBRONICS Zeb-Rainbow 400 Multimedia Speaker

## INSTRUCTION MANUAL

### Introduction

Thank you for choosing the ZEBRONICS Zeb-Rainbow 400 Multimedia Speaker. This manual provides essential information for the proper setup, operation, and maintenance of your speaker system. Please read it carefully before use and retain it for future reference.

### Safety Instructions

- Do not expose the unit to rain or moisture to prevent fire or electric shock.
- Do not open the speaker cabinet. Refer all servicing to qualified personnel.
- Ensure proper ventilation around the unit. Do not block any ventilation openings.
- Protect the power cord from being walked on or pinched.
- Unplug the unit during lightning storms or when unused for long periods.
- Keep the product away from direct sunlight, heat sources, and strong magnetic fields.

### Package Contents

Please check the box for the following items:

- Subwoofer Unit
- Satellite Speakers (4 units)
- Remote Control
- Audio Input Cable (3.5mm to RCA)
- User Manual

## Product Overview

The ZEBRONICS Zeb-Rainbow 400 is a 4.1 channel multimedia speaker system designed for versatile audio playback. It features multiple connectivity options including Bluetooth, AUX, USB, and FM radio. The system includes a powerful subwoofer and four satellite speakers for an immersive audio experience, complemented by integrated RGB lighting.



Image: The complete ZEBRONICS Zeb-Rainbow 400 multimedia speaker system, showing the subwoofer, four satellite speakers, and remote control.

## Setup

### 1. Unpacking

Carefully remove all components from the packaging. Retain the packaging materials for future transport or storage.

### 2. Speaker Placement

Place the subwoofer on a stable, flat surface, preferably on the floor for optimal bass response. Position the four satellite speakers around your listening area for a balanced sound field. Ensure adequate space for ventilation.



Image: A visual representation of the 4.1 speaker setup, illustrating the subwoofer and four satellite speakers.

### 3. Connecting Satellite Speakers

Connect each of the four satellite speakers to the corresponding output ports on the rear panel of the subwoofer unit. Ensure the connections are secure.

### 4. Connecting Audio Sources

- AUX Input:** Use the provided 3.5mm to RCA cable to connect your audio device (e.g., smartphone, tablet, PC) to the AUX input ports on the subwoofer.
- USB Input:** Insert a USB flash drive containing MP3 audio files into the USB port on the subwoofer.

### 5. Power Connection

Connect the power cable to the subwoofer unit and then plug it into a standard AC power outlet.

## Operating Instructions

### 1. Power On/Off

Press the Power button on the front panel of the subwoofer or on the remote control to turn the speaker system on or off.

### 2. Mode Selection

Press the 'MODE' button on the front panel or remote control to cycle through the available input modes:

Bluetooth (BT), AUX, USB, and FM Radio.



Image: Close-up of the subwoofer's front panel, showing the control buttons (Mode, Play/Pause, Next/Previous, Bass, Volume) and the integrated RGB lighting.

### 3. Volume Control

Rotate the 'VOLUME' knob on the front panel of the subwoofer or use the Volume Up/Down buttons on the remote control to adjust the overall sound level. The 'BASS' knob can be used to adjust the bass intensity.

### 4. Bluetooth Mode

1. Switch the speaker to Bluetooth mode using the 'MODE' button. The display will show 'BT'.
2. Enable Bluetooth on your mobile device or computer.
3. Search for available devices and select "Zeb-Rainbow 400" to pair.
4. Once paired, you can play audio from your device through the speakers.

### 5. AUX Mode

Connect your audio source using the 3.5mm to RCA cable. Switch the speaker to AUX mode. Audio from your connected device will play automatically.

## 6. USB Mode

Insert a USB flash drive into the USB port. The speaker will automatically switch to USB mode and begin playing MP3 files from the drive. Use the Play/Pause, Next, and Previous buttons to control playback.

## 7. FM Radio Mode

1. Switch the speaker to FM mode.
2. Press and hold the 'SCAN' button (often combined with Play/Pause) to automatically scan and save available FM stations.
3. Use the Next/Previous buttons to navigate through the saved stations.

## 8. Remote Control

The included remote control provides full functionality for power, mode selection, volume, track control, and FM station tuning. Ensure the remote has working batteries and is pointed towards the subwoofer's sensor.



Image: The ZEBRONICS Zeb-Rainbow 400 subwoofer unit shown with its remote control, highlighting the main controls.

## 9. RGB Lights

The subwoofer features integrated RGB lights. These lights typically cycle through various colors and patterns

automatically. Refer to the remote control for any specific buttons to change light modes, if available.

## Maintenance

### 1. Cleaning

Wipe the speaker surfaces with a soft, dry cloth. Do not use abrasive cleaners, waxes, or solvents as they may damage the finish. Avoid spraying liquids directly onto the speakers.

### 2. Storage

If storing the speakers for an extended period, unplug them from the power outlet and store them in a cool, dry place, away from direct sunlight and extreme temperatures.

## Troubleshooting

Problem	Possible Cause	Solution
No power	Power cable not connected; Power outlet faulty; Unit switched off	Ensure power cable is securely connected. Check power outlet with another device. Press the Power button.
No sound	Volume too low; Incorrect input mode; Audio cable loose/faulty; Device volume low	Increase volume. Select correct input mode. Check audio cable connections. Increase volume on connected device.
Bluetooth not connecting	Speaker not in BT mode; Device not in pairing mode; Interference	Switch speaker to BT mode. Ensure device Bluetooth is on and searching. Move devices closer. Restart both devices.
Remote control not working	Batteries depleted; Obstruction; Remote not pointed at sensor	Replace batteries. Remove any obstructions. Point remote directly at the subwoofer's IR sensor.
Poor FM reception	Weak signal; Antenna position	Adjust the position of the FM antenna. Rescan for stations.

## Specifications

Feature	Specification
Brand	ZEBRONICS
Model Number	Zeb Rainbow 400
Product Dimensions (LxWxH)	21 x 39 x 32 Centimeters
Item Weight	9 kg 350 g
Connectivity Technology	Auxiliary, Bluetooth, USB, Wireless
Power Source	AC
Compatible Devices	Smartphone, Tablet

Feature	Specification
Subwoofer Drive Size	16.51 cm



Image: A visual highlighting the 16.51 cm subwoofer drive of the ZEBRONICS Zeb-Rainbow 400.



 **16.51 cm  
SUBWOOFER DRIVE**

Image: Side view of the ZEBRONICS Zeb-Rainbow 400 subwoofer, showing the USB port and overall dimensions.

## **Warranty and Support**

This product comes with a minimum six-month seller warranty. For any issues or support, please contact your seller or refer to the official ZEBRONICS support channels. Keep your purchase receipt for warranty claims.