

[manuals.plus](#) /

› [Zing](#) /

› [Magnifique 7 Quart Slow Cooker Oval Manual Pot Food Warmer with 3 Cooking Settings, Black Stainless Steel 7 Quarts BK-BK-Manual Instruction Manual](#)

**Zing WB-SCO70M-BK-1P**

# **Magnifique 7 Quart Slow Cooker Instruction Manual**

**MODEL: WB-SCO70M-BK-1P**

## **INTRODUCTION**

Thank you for choosing the Magnifique 7 Quart Oval Manual Slow Cooker. This appliance is designed to simplify your cooking process, allowing you to prepare delicious meals with minimal effort. Its generous capacity and versatile settings make it ideal for family meals and entertaining. Please read this manual thoroughly before first use to ensure safe and optimal operation.



*The Magnifique 7 Quart Oval Manual Slow Cooker, featuring a sleek black stainless steel finish and a simple control dial.*

## **IMPORTANT SAFEGUARDS**

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before operating the slow cooker.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse the base unit, cord, or plug in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "OFF", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Avoid sudden temperature changes, such as adding refrigerated foods into a heated pot.
- The stoneware pot is designed for use in this appliance only. It must not be used on a gas or electric stovetop or in a microwave.
- Do not use the stoneware pot if it is cracked or chipped.

## **PARTS AND FEATURES**

Familiarize yourself with the components of your Magnifique Slow Cooker:



### Dishwasher Safe Tempered Glass Lid Removeable ceramic pot insert Stainless Steel Finish

*An exploded view illustrating the main components: Lid Handle, Removable Secure Fit Lid, Stoneware pot, Gasket, Handles, Housing, and Control Panel.*

- **Lid Handle:** For safe lifting of the lid.
- **Removable Secure Fit Lid:** Tempered glass lid with a rubber gasket for a tight seal, retaining heat and moisture.
- **Stoneware Pot:** The removable ceramic cooking insert, dishwasher-safe for easy cleaning.
- **Gasket:** Rubber seal around the lid to prevent spills and maintain temperature.
- **Handles:** Cool-touch handles on the base unit for safe transport.
- **Housing:** The outer black stainless steel body of the slow cooker.
- **Control Panel:** Features a manual dial for selecting cooking settings.

## SETUP

Before first use, follow these steps:

- Unpack:** Remove all packaging materials, labels, and tags from the slow cooker.
- Clean:** Wash the stoneware pot and glass lid in warm, soapy water. Rinse thoroughly and dry completely. The stoneware pot and glass lid are dishwasher safe.
- Wipe Base:** Wipe the exterior of the base unit with a damp cloth. Do not immerse the base unit in water.
- Assemble:** Place the clean stoneware pot into the heating base. Position the lid securely on top of the stoneware pot.
- Placement:** Place the slow cooker on a flat, stable, heat-resistant surface, away from walls and curtains, ensuring adequate ventilation.

## OPERATING INSTRUCTIONS

The Magnifique Slow Cooker features a simple manual control dial for easy operation.



*The manual control dial allows selection of Off, Low, High, and Warm settings.*

1. **Prepare Food:** Place your ingredients into the stoneware pot.
2. **Secure Lid:** Place the glass lid onto the stoneware pot.
3. **Plug In:** Plug the power cord into a standard 120V AC electrical outlet.
4. **Select Setting:** Turn the control dial to your desired cooking setting:
  - **LOW:** Ideal for slow, gentle cooking over an extended period (typically 6-8 hours).
  - **HIGH:** For faster cooking (typically 3-4 hours).
  - **WARM:** Maintains food at a serving temperature after cooking is complete. Do not use the WARM setting for cooking.
5. **Cooking:** Allow the food to cook for the recommended time. Avoid lifting the lid frequently, as this releases heat and extends cooking time.
6. **Serve:** Once cooking is complete, turn the dial to the “OFF” position and unplug the slow cooker. Carefully remove the lid using the handle.

For transport, the lid can be secured with the included rubber ring to prevent spills. Simply stretch the rubber ring over the lid and handles to create a tight seal.

## COOKING TIPS

Maximize your slow cooking experience with these helpful tips:

- For best results, fill the stoneware pot between half and three-quarters full.
- Root vegetables (carrots, potatoes) cook slower than meat. Place them at the bottom of the pot.
- Dairy products (milk, sour cream, cheese) should be added during the last 30 minutes of cooking to prevent curdling.
- Pasta should be added during the last 30-60 minutes of cooking to prevent it from becoming mushy.
- The oval shape is particularly suitable for larger cuts of meat, such as roasts or whole chickens, allowing for more even cooking.

# MAGNIFIQUE

## MAKE STEWS, ROASTS, PASTA, & MORE



*The slow cooker is versatile for preparing a variety of dishes, including stews, roasts, and pasta.*

### CARE AND MAINTENANCE

Proper care ensures the longevity of your slow cooker.

- **Always unplug** the slow cooker and allow it to cool completely before cleaning.
- **Stoneware Pot and Lid:** The stoneware pot and glass lid are dishwasher safe. Alternatively, they can be washed by hand with warm, soapy water. Avoid abrasive cleaners or scouring pads that may scratch the surface.
- **Base Unit:** Wipe the exterior of the heating base with a soft, damp cloth. Do not immerse the base unit in water or any other liquid.
- **Stubborn Residue:** If food sticks to the stoneware pot, fill it with warm, soapy water and let it soak for a few hours before cleaning. A plastic or nylon scouring pad may be used if necessary.
- **Storage:** Store the slow cooker with the lid inverted on the stoneware pot to prevent odors and allow air circulation. Store in a dry place.



*The stoneware pot is dishwasher-safe, making cleanup convenient.*

## TROUBLESHOOTING

If you encounter issues with your slow cooker, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Slow cooker not heating.	Not plugged in; power outlet not working; dial set to 'OFF'.	Ensure unit is plugged in; check power outlet; turn dial to 'LOW' or 'HIGH'.
Food not cooking properly.	Lid lifted too often; insufficient cooking time; incorrect setting.	Avoid lifting lid; extend cooking time; ensure correct setting (LOW/HIGH) is selected.
Food is burning or sticking.	Too little liquid; cooking on 'HIGH' for too long; pot not properly cleaned.	Add more liquid; use 'LOW' setting for longer cooks; ensure pot is clean before use.
Lid does not fit securely.	Stoneware pot not seated correctly; gasket misalignment.	Ensure stoneware pot is fully seated in base; check rubber gasket on lid for proper alignment.

## SPECIFICATIONS

Key technical details for your Magnifique Slow Cooker:

Feature	Detail
Brand	Zing
Model Number	WB-SCO70M-BK-1P
Capacity	7 Quarts
Color	BK-BK-Manual (Black Stainless Steel)
Material	Stainless Steel (Housing), Ceramic (Stoneware Pot), Tempered Glass (Lid)
Product Dimensions (D x W x H)	11.42"D x 14.02"W x 9.45"H
Item Weight	9.8 Pounds
Wattage	270 watts
Voltage	120 Volts

Feature	Detail
Control Type	Manual Dial (Off, Low, High, Warm)
Dishwasher Safe Parts	Stoneware Pot, Glass Lid



*Approximate dimensions of the slow cooker.*

## WARRANTY AND SUPPORT

For information regarding warranty coverage, product registration, or customer support, please refer to the warranty card included with your purchase or visit the official Zing website. Keep your purchase receipt as proof of purchase for any warranty claims.