

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [OLEVS](#) /
- › [OLEVS Model 2888 Men's Chronograph Quartz Watch Instruction Manual](#)

OLEVS 2888

OLEVS Model 2888 Men's Chronograph Quartz Watch Instruction Manual

INTRODUCTION

This manual provides detailed instructions for the OLEVS Model 2888 Men's Chronograph Quartz Watch. Please read this manual thoroughly to understand the functions and proper operation of your watch. Retain this manual for future reference.



PRODUCT OVERVIEW

Key Features:

- **Chronograph Function:** Includes minute and second sub-dials for precise time measurement.
- **24-Hour Indicator:** A sub-dial displaying a sun and moon image to distinguish between day and night.
- **Date Display:** A window indicating the current date.
- **Quartz Movement:** Utilizes an imported quartz movement for accurate timekeeping.
- **Luminous Hands and Markers:** Provides visibility in low-light conditions.
- **Water Resistance:** Rated for 30 meters (3ATM), suitable for daily use and splashes, but not for swimming or diving.
- **Durable Construction:** Features a high hardness coated mirror and a genuine leather strap.

Components:

The OLEVS Model 2888 watch features a main crown for time and date adjustment, and two pushers for chronograph operation. The dial includes three sub-dials: a minute chronograph, a second chronograph, and a 24-hour indicator.

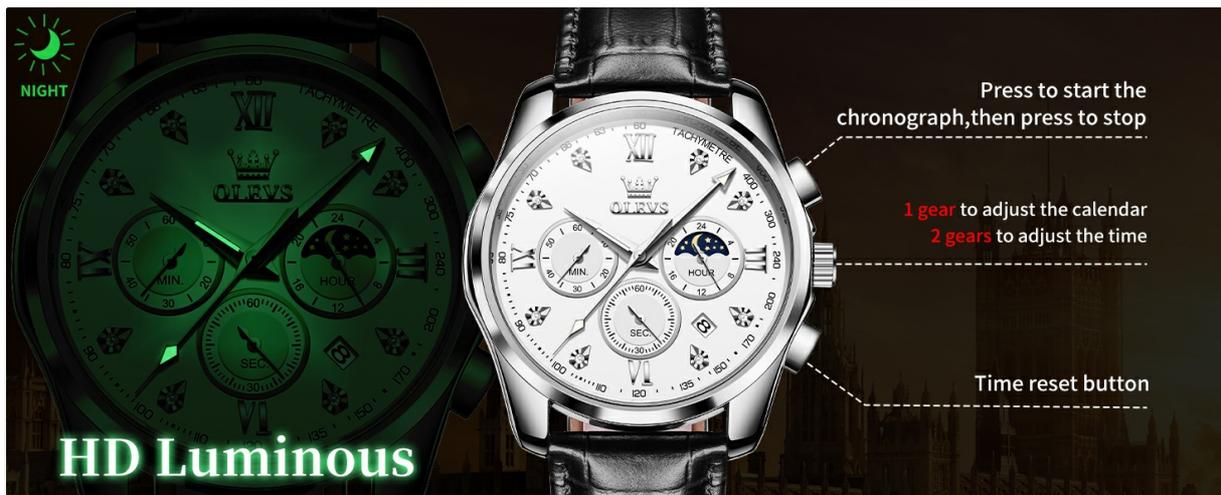


Image: Diagram illustrating crown positions for setting and chronograph pusher functions.

SETUP INSTRUCTIONS

1. Setting the Time:

1. Pull the crown out to the **second position** (farthest out).
2. Rotate the crown to set the hour and minute hands. Observe the 24-hour sub-dial to ensure the correct AM/PM (day/night) setting.
3. Once the desired time is set, push the crown back into the normal position.

2. Setting the Date:

1. Pull the crown out to the **first position** (one click out).
2. Rotate the crown to adjust the date. Avoid setting the date between 9:00 PM and 3:00 AM, as this may interfere with the automatic date change mechanism.

3. Once the desired date is set, push the crown back into the normal position.

3. Chronograph Reset:

If the chronograph hands are not aligned to the 12 o'clock position after resetting, refer to the troubleshooting section or consult a professional watch repair service.

OPERATING INSTRUCTIONS

Using the Chronograph:

The chronograph function allows for precise measurement of elapsed time.

1. **Start:** Press the top pusher to start the chronograph. The second chronograph hand will begin to move.
2. **Stop:** Press the top pusher again to stop the chronograph. The elapsed time can be read from the second and minute chronograph sub-dials.
3. **Reset:** After stopping the chronograph, press the bottom pusher to reset all chronograph hands to their zero positions.



Image: Detailed view of the minute, second, and 24-hour sub-dials.

Understanding the 24-Hour Indicator:

The sub-dial typically located at the 6 o'clock or 9 o'clock position displays a sun and moon image, indicating whether it is day or night. This sub-dial synchronizes with the main hour hand and cannot be set independently.

Luminous Function:

The hands and hour markers are coated with a luminous material. Exposure to light will charge this material, allowing the watch to glow in the dark for a period of time.

MAINTENANCE

Cleaning:

Wipe the watch case and strap regularly with a soft, dry cloth to remove dust and dirt. For the leather strap, avoid excessive moisture and harsh chemicals.

Water Resistance:

The watch is water-resistant to 30 meters (3ATM). This means it is suitable for everyday use and can withstand splashes or brief immersion in water. It is **not** recommended for swimming, showering, or diving. Ensure the crown is fully pushed in before any contact with water.



Image: Visual representation of 30m water resistance and other features.

Battery Replacement:

The watch is powered by a quartz battery. When the watch stops or the second hand begins to jump erratically, the battery may need replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and maintain water resistance.

Strap Care:

The genuine leather strap should be kept dry and away from direct sunlight or extreme temperatures to prevent damage and prolong its lifespan. Avoid contact with oils, perfumes, and solvents.

TROUBLESHOOTING

- **Watch Not Running:**

Check if the crown is fully pushed in. If the watch still does not run, the battery may need replacement.

- **Time/Date Not Changing:**

Ensure the crown is pulled out to the correct position for setting. If the date does not change automatically at midnight, check the AM/PM setting of the main time.

- **Chronograph Hands Not Resetting to Zero:**

This may indicate a need for calibration or service. Consult a professional watch repair service.

- **Water Inside the Watch:**

If condensation or water droplets appear inside the watch, immediately take it to a professional watch repair service to prevent further damage.

SPECIFICATIONS

Model Number	2888 (GJ-OS-G2888PH-BH)
Movement Type	Quartz
Water Resistance	30 meters (3ATM)
Case Material	Stainless Steel (implied)
Strap Material	Genuine Leather
Dial Features	Chronograph (minute, second), 24-hour indicator, Date display, Luminous hands/markers
Package Dimensions	5.71 x 2.52 x 0.94 inches
Item Weight	3.21 ounces

WARRANTY AND SUPPORT

OLEVS offers a 30-day no-reason return policy and a 12-month assurance for the watch. For any issues or inquiries regarding your OLEVS Model 2888 watch, please refer to your purchase documentation or contact the seller directly for support.