

Enyuly CS-HGF705SL

Enyuly 2200mAh Replacement Battery for CHI Escape GF7054 (Model: CS-HGF705SL) Instruction Manual

1. INTRODUCTION

This manual provides essential instructions for the safe and effective use of your Enyuly 2200mAh Replacement Battery, specifically designed for the CHI Escape GF7054 device. Please read this manual thoroughly before installation and use to ensure optimal performance and safety.

2. SAFETY INFORMATION

Your safety is paramount. Please adhere to the following warnings and precautions:

- **CAUTION: WARRANTY VOID IF LABEL IS REMOVED.**
- DO NOT attempt to disassemble, open, or service the battery pack.
- REPLACE ONLY with the battery pack designated for this product (CHI Escape GF7054).
- DO NOT crush, puncture, short external contacts, or dispose of in fire or water.
- DO NOT store above 60°C (140°F).
- Keep the battery away from children and pets.
- If the battery shows signs of damage, swelling, or leakage, discontinue use immediately and dispose of it properly.

3. PRODUCT OVERVIEW

The Enyuly CS-HGF705SL is a high-capacity Lithium-ion replacement battery designed to provide reliable power for your CHI Escape GF7054 device. It offers an extended capacity of 2200mAh for longer usage times.



Image 1: The Enyuly 2200mAh replacement battery, model CS-HGF705SL. The battery is blue with a black label detailing model number, part number, rating (7.4VDC, 2200mAh, 16.28Wh), and safety warnings. Wires extend from one end for connection.

4. SETUP AND INSTALLATION

This battery is intended as a direct replacement for the original battery in the CHI Escape GF7054. Installation should only be performed by individuals familiar with electronic device repair or by following the specific service instructions for your CHI Escape GF7054 device.

1. Ensure your CHI Escape GF7054 device is powered off and disconnected from any power source.
2. Locate the battery compartment or access panel on your device. Refer to your device's original manual for specific instructions on how to open it.
3. Carefully remove the old battery. Note the orientation and connection type.
4. Connect the Enyuly replacement battery (Model CS-HGF705SL) to the device's battery connector, ensuring proper polarity.
5. Place the new battery into the compartment. Ensure it fits securely without forcing.
6. Close the battery compartment or reattach the access panel.
7. Dispose of the old battery responsibly according to local regulations.

Compatibility Note: This battery is specifically designed for the CHI Escape GF7054 and replaces part number INR18650 2S1P. Verify your device's model and original battery part number before installation.

5. OPERATING INSTRUCTIONS

After successful installation, your device should power on normally. For optimal battery life, follow these general guidelines:

- **Initial Charge:** It is recommended to fully charge the battery before its first use.

- **Charging:** Use only the original or a certified compatible charger for your CHI Escape GF7054 device. Avoid using unapproved chargers.
- **Discharge:** Avoid completely draining the battery frequently, as this can reduce its overall lifespan.
- **Temperature:** Operate the device within its recommended temperature range. Extreme temperatures can affect battery performance and longevity.

6. MAINTENANCE

Proper maintenance can extend the life of your battery:

- **Storage:** If storing the battery for an extended period, ensure it is charged to approximately 50-70% and stored in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Cleaning:** Keep battery contacts clean and free from dust or debris. Use a dry, soft cloth for cleaning.
- **Disposal:** Lithium-ion batteries must be recycled or disposed of properly. Do not dispose of batteries in household waste or fire. Consult local regulations for proper disposal methods.

7. TROUBLESHOOTING

If you encounter issues with your replacement battery, consider the following:

- **Battery Not Charging:** Ensure the charger is properly connected and functional. Verify that the battery is correctly installed in the device.
- **Device Not Powering On:** Check if the battery is fully charged. Re-install the battery to ensure a secure connection.
- **Shortened Battery Life:** This can be normal over time. Ensure the device's power settings are optimized. Avoid running power-intensive applications unnecessarily.
- **Physical Damage:** If the battery appears swollen, damaged, or is leaking, discontinue use immediately and replace it.

If problems persist after following these steps, please refer to the Warranty and Support section.

8. SPECIFICATIONS

| Feature | Specification |
|-------------------|---|
| Model Number | CS-HGF705SL |
| Part Number | INR18650 2S1P |
| Battery Type | Lithium-ion |
| Voltage | 7.4VDC |
| Capacity | 2200mAh / 16.28Wh |
| Dimensions | 66.0 x 37.0 x 19.2mm (2.6 x 1.46 x 0.76 inches) |
| Weight | 121.0g (4.3 ounces) |
| Compatible Device | CHI Escape GF7054 |

| Feature | Specification |
|--------------|---|
| Manufacturer | Enyuly (Manufactured by ShenZhen HENZENS Technology Co., Limited) |

9. WARRANTY AND SUPPORT

Enyuly provides a **1-year after-sales service** for this replacement battery. If you experience any issues or have questions regarding your Enyuly battery, please contact the seller or Enyuly customer support through the platform where the purchase was made. Please have your purchase details and the battery model number (CS-HGF705SL) available when contacting support.