

[Manuals.plus](#) /

› [kensen](#) /

› kensen Body Hair Trimmer Instruction Manual

kensen kensen

kensen 3-in-1 Body Hair Trimmer

Model: kensen (Gray)

INTRODUCTION

This instruction manual provides detailed information on the safe and effective use, maintenance, and care of your kensen 3-in-1 Body Hair Trimmer. Please read this manual thoroughly before first use and keep it for future reference.

SAFETY INFORMATION

Important Safety Precautions:

- Do not disassemble or attempt to repair the device yourself. Refer to qualified service personnel.
- Keep the device away from children.
- Ensure the charging port is dry before connecting the charging cable.
- Do not use the device if the blades are damaged, as this may cause injury.
- Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition. (Note: This disclaimer is from the product's legal information and may not directly apply to the trimmer's safety but is included as per provided data.)

PRODUCT OVERVIEW

The kensen 3-in-1 Body Hair Trimmer is designed for versatile grooming, featuring interchangeable heads for different body areas. It offers a comfortable and efficient trimming experience.



Figure 1: kensen 3-in-1 Body Hair Trimmer with its various attachments and a protective carrying case.



Body Groomer



Beard Trimmer



Nose Ear Trimmer



Figure 2: The three distinct trimmer heads included: a Body Groomer, a Beard Trimmer, and a Nose/Ear Trimmer, designed for quick and easy interchangeability.

Easy To Store and Carry



Figure 3: Detailed view of the V-shaped trimmer head, highlighting its ergonomic design for effective trimming in sensitive and hard-to-reach body areas.



Figure 4: The adjustable trimming guards, allowing for precise hair length settings from 1mm to 9mm for customized grooming.

SETUP

Charging the Trimmer

Before first use, fully charge the trimmer. The device features an 800mAh battery and is USB rechargeable. A full charge takes approximately 90 minutes and provides up to 90 minutes of continuous shaving time.



Figure 5: The trimmer connected for USB charging, with its LED display indicating battery status and other functions.

Attaching and Changing Trimmer Heads

The kensen trimmer features magnetic replacement heads for quick and easy attachment. Simply pull to remove a head and push to attach another. Ensure the head is securely seated before use.

OPERATING INSTRUCTIONS

General Use

The trimmer is designed for both wet and dry use, allowing for comfortable grooming in or out of the shower. It is cordless for maximum flexibility.

100% waterproof

Can be used in the shower,
with or without foam



Figure 6: The trimmer's waterproof capability, making it suitable for use in wet conditions.

Using the Body Groomer Head

The V-shaped body groomer head is ideal for easily shaving narrow and hard-to-reach areas such as the back, bikini line, private areas, and buttocks. Its Skin Protective Blade Technology helps reduce irritation on delicate skin, providing a close shave without pain or nicks.

Using Adjustable Trimming Guards

For the body trimmer head, adjustable trimming guards are provided for different hair lengths (1-9mm). Select the desired length using the dial on the guard to ensure an even trim. This allows for trimming hair rather than complete shaving, maintaining a neat appearance.

1-9MM Adjustable Guide Comb

The body hair trimmer trims your hair instead of shaving it off completely, keeping it trimmed and neat.



Figure 7: The adjustable guide comb, demonstrating the range of hair lengths that can be achieved.

Using the Nose/Ear Trimmer



Attach the dedicated nose/ear trimmer head for precise and comfortable removal of unwanted hair in these sensitive areas.

Using the Beard Trimmer Head

The beard trimmer head is suitable for longer hair, sideburns, and beards. It is equipped with strong power to shave without getting stuck. Use the adjustable trimming guards for desired beard lengths.

Double Blade design

Fixed blade to protect the skin and moving blade to cut hairs for a safer shaving.

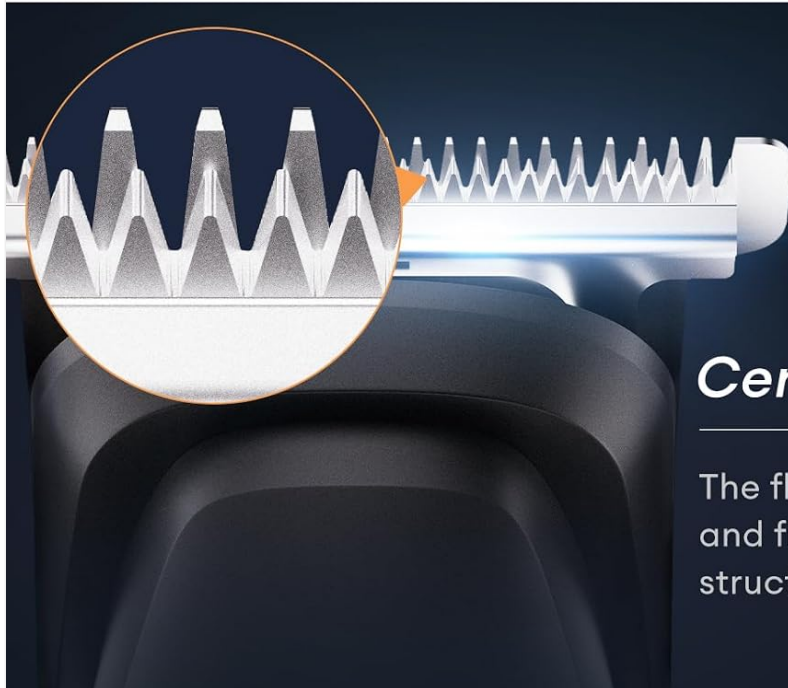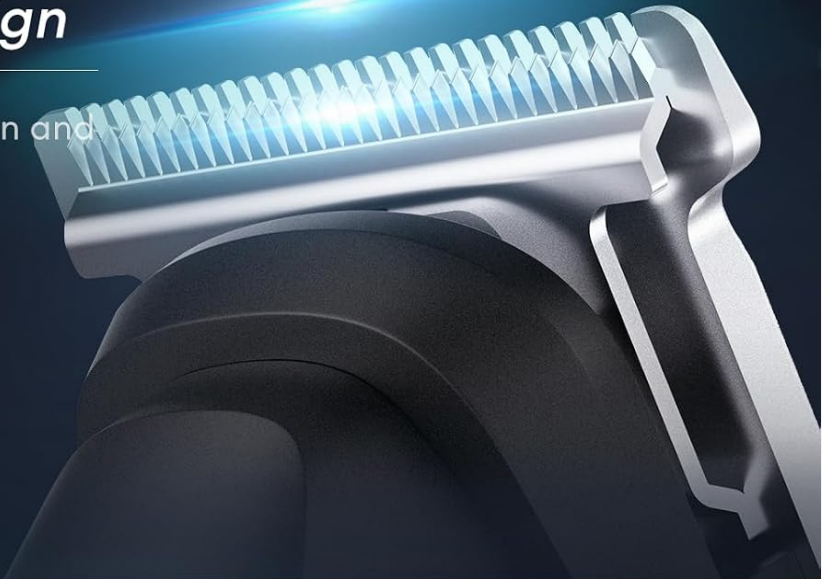

Ceramic blade

The flat ceramic blade can cut neatly and finely without damaging the hair structure, without pulling hair.

Figure 8: Illustration of the double blade design, featuring a fixed blade for skin protection and a moving blade for cutting, along with the ceramic blade for smooth trimming.

MAINTENANCE AND CLEANING

The kensen trimmer is IPX6 waterproof, allowing for easy cleaning. After each use, rinse the trimmer head under running water. Ensure the device is turned off before cleaning. For thorough cleaning, detach the trimmer head and rinse both the head and the main unit. Allow all parts to air dry completely before reassembling or storing.

TROUBLESHOOTING

If you encounter any issues with your kensen Body Hair Trimmer, please refer to the following common troubleshooting tips:

- **Trimmer not turning on:** Ensure the battery is charged. Check the LED display for battery level.
- **Poor trimming performance:** Clean the blades and trimmer head thoroughly. Ensure the correct trimming guard is attached and not clogged with hair.

- **Skin irritation:** Ensure the blades are clean and not damaged. Use the appropriate trimming guard for sensitive areas. Consider using the trimmer on wet skin with foam for a smoother experience.
- **Unusual noise:** Disassemble the trimmer head and clean any trapped hair or debris. Reassemble securely.

If the problem persists, please contact customer service for assistance.

SPECIFICATIONS

Feature	Detail
Brand	kensen
Model Number	kensen
Color	Gray
Power Source	Battery Powered
Waterproof Rating	IPX6
Battery Life	Up to 90 minutes (after 90 min charge)
Recommended Uses	Nose Hair, Body Hair

WARRANTY AND SUPPORT

kensen provides a worry-free 1-Year Guarantee for this 3-in-1 Electric Trimmer. For any questions or concerns, please contact our friendly customer service. Our after-sales service team is committed to resolving your confusion one-to-one within 12 hours until you are satisfied.

For further assistance, please visit the official kensen store:[kensen Store on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question