

[Manuals.plus](#) /

> [HERCHR](#) /

> HERCHR Wireless Hand Mixer User Manual

## HERCHR HERCHR9yvgo4ksie-11

# HERCHR Wireless Hand Mixer User Manual

Model: HERCHR9yvgo4ksie-11

## INTRODUCTION

---

This user manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your HERCHR Wireless Hand Mixer. Please read this manual thoroughly before first use and keep it for future reference. The HERCHR Wireless Hand Mixer is a portable, rechargeable electric mixer designed for various kitchen tasks. It features four speed settings, two detachable whisks, and a cordless design for convenience.

## SAFETY INSTRUCTIONS

---

- Always ensure the mixer is turned off before attaching or detaching whisks, or before cleaning.
- Do not immerse the main body of the mixer in water or other liquids. Only the detachable whisks are washable.
- Keep hands, hair, clothing, and utensils away from the moving parts during operation.
- This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Use only the charging cable provided or a compatible USB charger.
- Do not operate the mixer if it has been damaged in any way, or if the charging cable is damaged.
- Avoid overfilling mixing bowls to prevent splashing.

## PRODUCT COMPONENTS

---

Your HERCHR Wireless Hand Mixer package includes the following components:

- 1 x Wireless Hand Mixer Main Unit (Green)
- 1 x Balloon Whisk (for whipping cream, egg whites)
- 1 x Dough Hook / Flat Beater (for heavier batters, mashing)

- 1 x USB Charging Cable (Type-C)



Image: The main unit of the HERCHR Wireless Hand Mixer in green, shown with its two detachable whisks (a balloon whisk and a flat beater/dough hook) and the USB Type-C charging cable.

## SETUP

---

### 1. Initial Charging

Before first use, fully charge the mixer. Connect the USB charging cable to the Type-C port on the mixer and the other end to a compatible USB power source (e.g., wall adapter, computer USB port). The indicator light will show charging status and turn off when fully charged.

# 4 Speed Modes

The portable electric mixer has four speed settings to meet your different needs

**TYPE-C charging port**

**Gear indicator light**

**Switch+speed control**

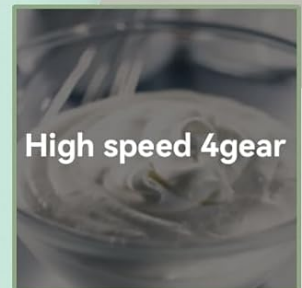 


Image: A detailed view of the mixer's top, highlighting the Type-C charging port, the gear indicator lights, and the power/speed control switch.

## 2. Attaching Whisks

Select the appropriate whisk for your task. Align the whisk shaft with the opening on the mixer's main unit and push firmly until it clicks into place. Ensure it is securely fastened before operation.

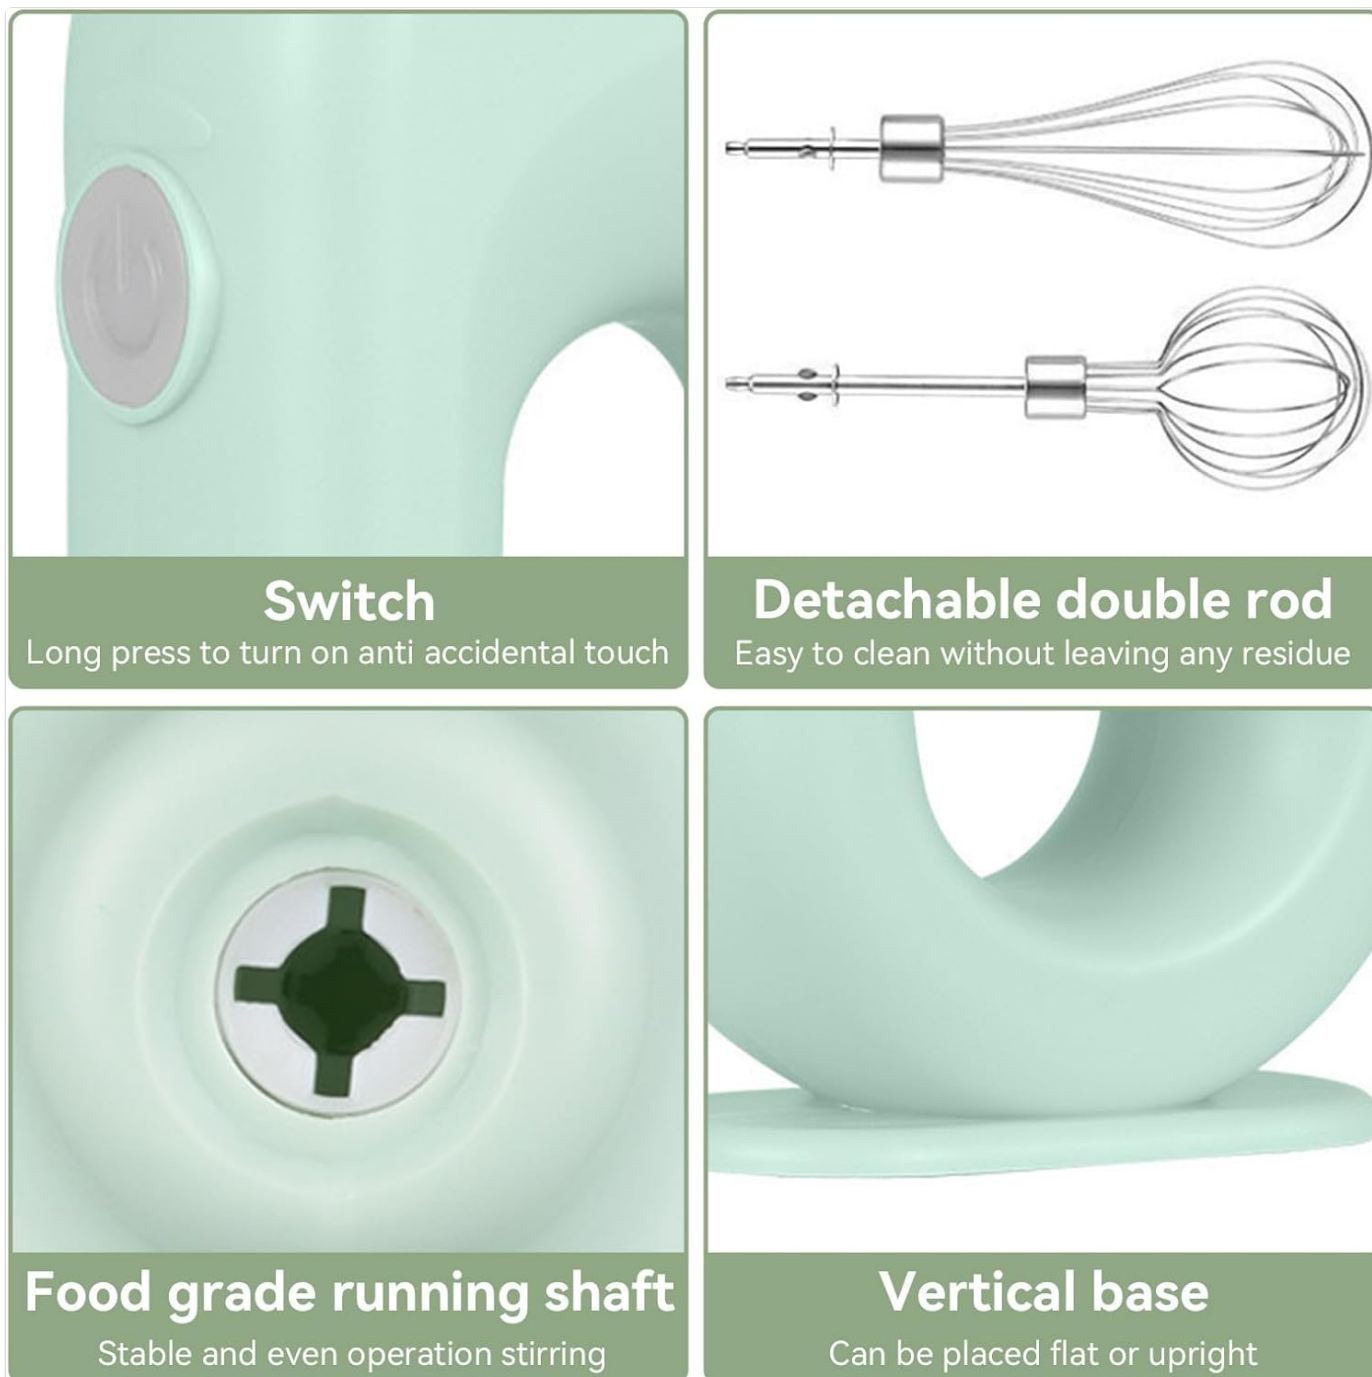 


Image: A visual guide demonstrating how the detachable whisks connect to the mixer's food-grade running shaft, emphasizing the secure attachment mechanism.

## OPERATING INSTRUCTIONS

---

### 1. Power On/Off

To turn on the mixer, long press the power button (switch) to prevent accidental activation. The mixer will start at the lowest speed setting. To turn off, long press the power button again.

### 2. Speed Control

The mixer features 4 speed modes. Short press the power button to cycle through the speeds: Speed 1 (Slow), Speed 2 (Low), Speed 3 (Medium), Speed 4 (High). The gear indicator lights will illuminate to show the current speed setting.

# 4 Speed Modes

The portable electric mixer has four speed settings to meet your different needs

TYPE-C charging port

Gear indicator light

Switch+speed control

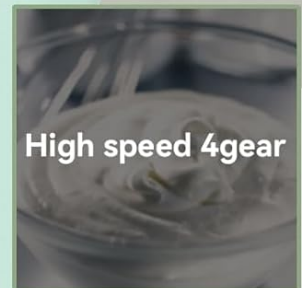 


Image: A visual representation of the four speed settings, showing examples of ingredients suitable for each speed, from slow for initial mixing to high for whipping.

## 3. Usage Guidelines

Choose the appropriate whisk and speed for your ingredients. For best results, start at a lower speed and gradually increase as needed. The mixer is suitable for:

- **Whipping Cream:** Use the balloon whisk at medium to high speed.
- **Beating Egg Whites:** Use the balloon whisk at high speed for stiff peaks.
- **Mixing Batters:** Use the flat beater/dough hook at low to medium speed.
- **Mashing Potatoes:** Use the flat beater/dough hook at low to medium speed.
- **Beating Butter:** Use the flat beater/dough hook at low to medium speed until creamy.

# Mini Kitchen Mixer

Electric manual mixer beautiful and lightweight appearance elegant and comfortable grip



Wireless design



Compact and portable



Four speed regulation



Image: A person demonstrating the use of the HERCHR Wireless Hand Mixer to whip cream in a clear glass bowl, with eggs and other ingredients nearby.



### Beat butter

 300g

 2min



### Make milk foam

 300g

 1min



### Beat egg whites

 150g

 1min

Image: A graphic illustrating typical mixing tasks with recommended quantities and approximate mixing times, such as beating butter, making milk foam, and beating egg whites.

## MAINTENANCE AND CLEANING

### 1. Detaching Whisks

After use, ensure the mixer is turned off. Gently pull the whisks out from the main unit. They are designed for easy removal.

### 2. Cleaning

- **Whisky:** The detachable whisks are made of stainless steel and can be washed with warm soapy water or placed in a dishwasher. Rinse thoroughly and dry completely before storage.
- **Main Unit:** Wipe the main unit with a damp cloth. Do not immerse it in water. For stubborn stains, use a mild detergent on the cloth. Ensure the unit is completely dry before storing or recharging.

### 3. Storage

Store the mixer and its accessories in a clean, dry place, away from direct sunlight and extreme temperatures. The mixer's vertical base allows it to stand upright for convenient storage.

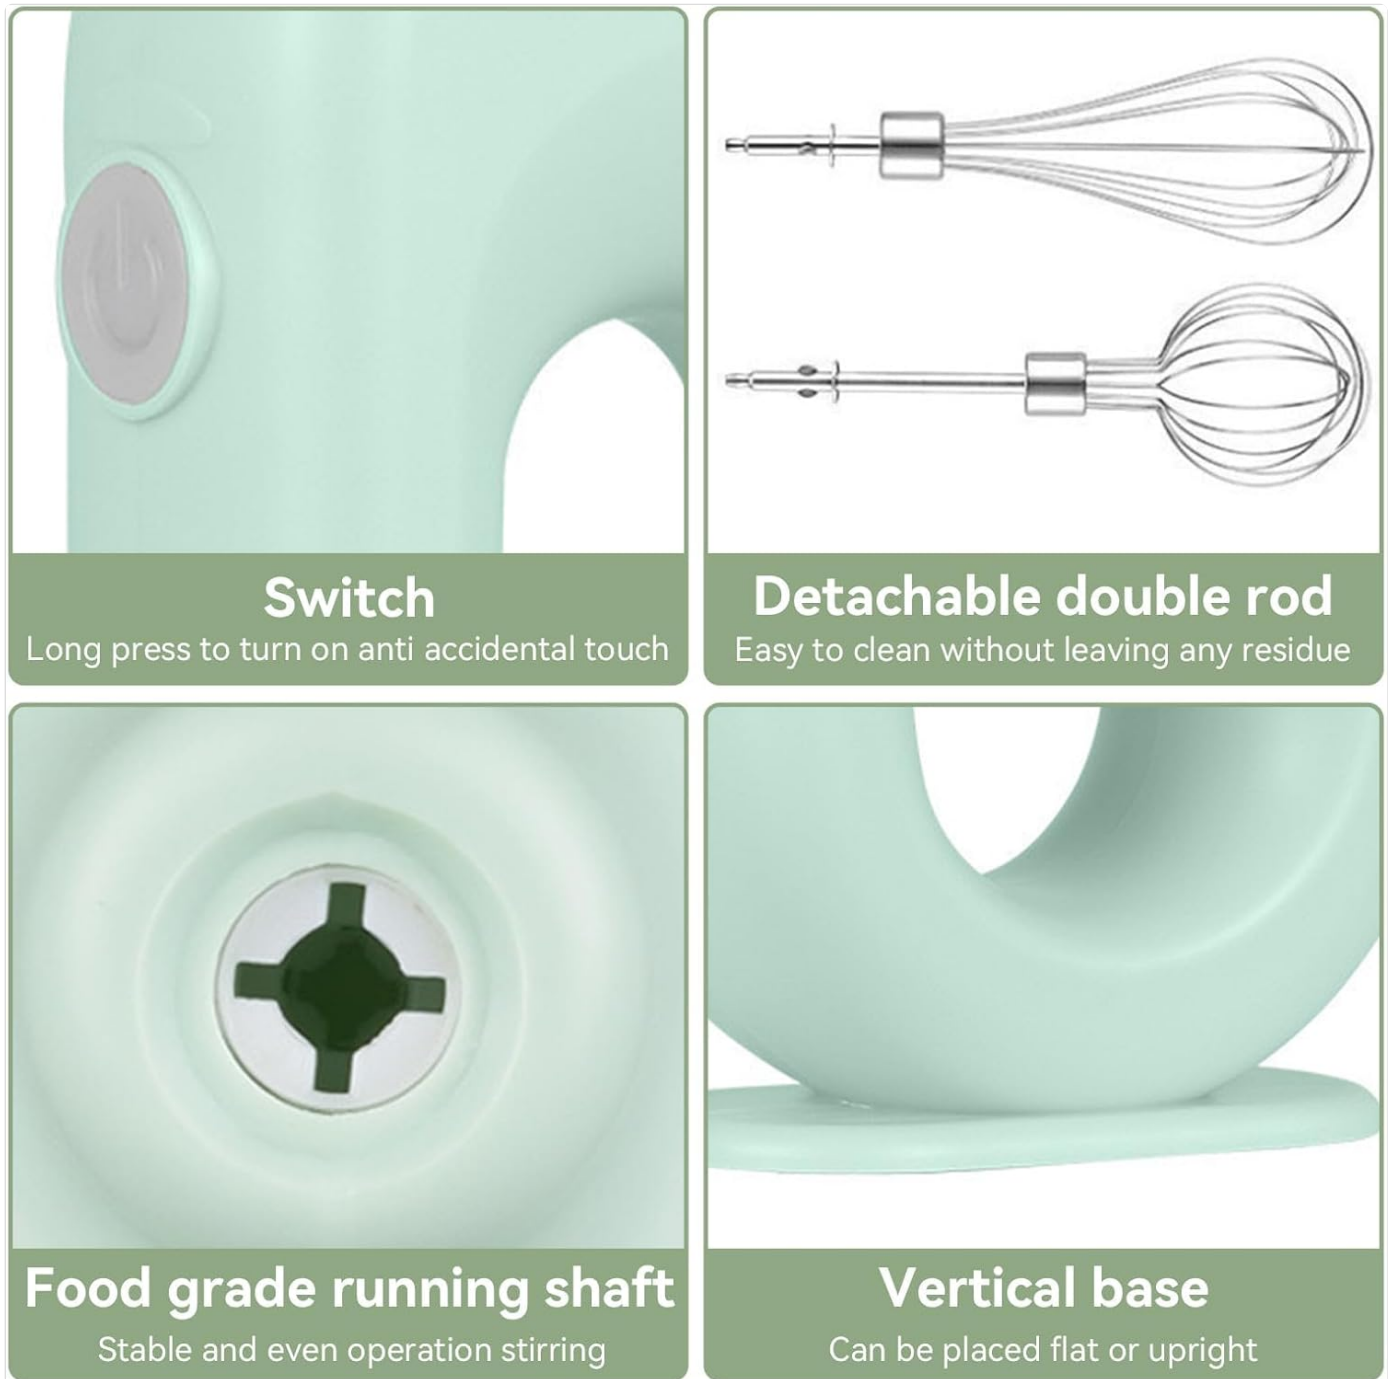 


Image: A detailed view showing the detachable whisks and the stable vertical base of the mixer, which allows for upright storage.


### TROUBLESHOOTING

 Problem	Possible Cause	Solution
Mixer does not turn on.	Battery is depleted.	Charge the mixer fully using the provided USB cable.
Mixer stops during operation.	Battery is low or overload protection activated.	Recharge the battery. Reduce the load if mixing very thick ingredients.

Problem	Possible Cause	Solution
Whisks are difficult to attach/detach.	Misalignment or residue.	Ensure whisks are aligned correctly. Clean any food residue from the shaft and whisk connection points.
Mixer is not mixing effectively.	Incorrect speed setting or whisk type for ingredients.	Adjust speed or change whisk type according to the operating instructions. Ensure ingredients are suitable for a hand mixer.

## SPECIFICATIONS

Feature	Detail
Product Name	Wireless Electric Egg Beater
Brand	HERCHR
Model Number	HERCHR9yvgo4ksie-11
Color	Green (also available in Rose, White)
Material	ABS Plastic
Number of Speeds	4
Battery Type	Lithium Battery
Battery Capacity	1500 mAh
Rated Power	20W
Charging Method	USB Interface (Type-C)
Item Weight	350 g
Features	Lightweight, Portable, Rechargeable, Cordless

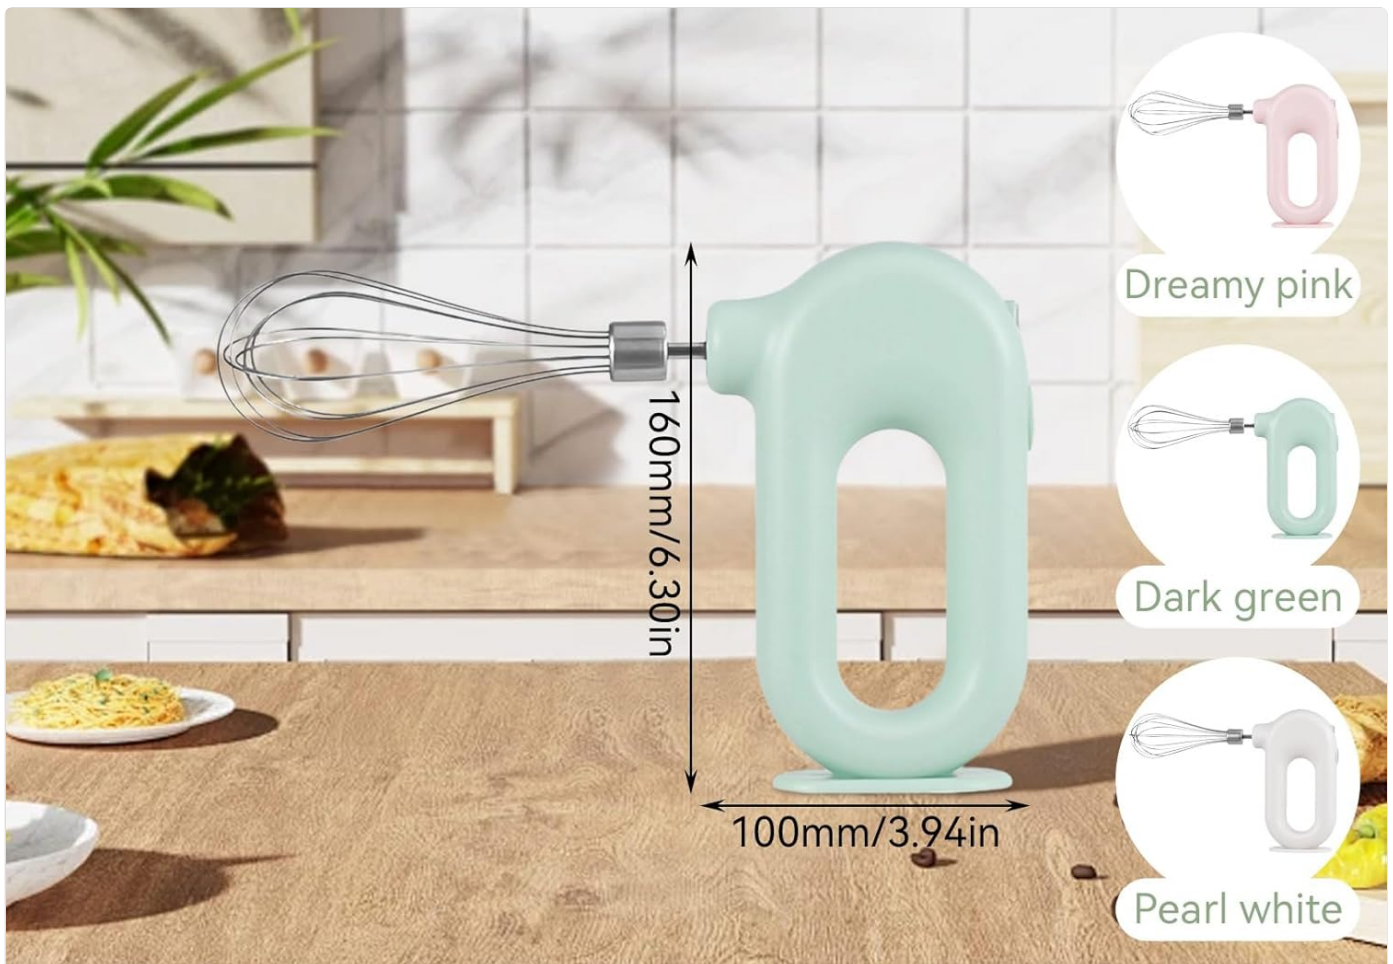

## WIRELESS ELECTRIC EGG BEATER

<b>Product Name:</b>	Wireless Electric Egg Beater		
<b>Product Color:</b>	Light green, light pink, rice white		
<b>Battery Type:</b>	Lithium Battery	<b>Battery Capacity:</b>	1500mAh
<b>Charging Method:</b>	USB Interface	<b>Rated Power:</b>	20W
<b>Gear Position:</b>	4th gear	<b>Product Material:</b>	ABS material

Image: A detailed table outlining the key specifications of the Wireless Electric Egg Beater, such as product name, color, battery details, power, and material.

## WARRANTY AND SUPPORT

Information regarding product warranty and customer support is not available in this manual. Please refer to the product packaging or the retailer's website for details on warranty coverage and how to contact customer service for support.