

Dirt Devil UD76300V

Dirt Devil Multi-Surface Extended Reach+ Upright Bagless Vacuum Cleaner

Model: UD76300V

Brand: Dirt Devil

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

- Read all instructions before using this appliance.
- Always unplug from outlet when not in use and before cleaning or servicing.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not use without dust cup and/or filters in place.

PRODUCT OVERVIEW

The Dirt Devil Multi-Surface Extended Reach+ Upright Bagless Vacuum Cleaner is designed for efficient cleaning across various floor types, from carpets to hard floors. Its lightweight design and versatile attachments make it easy to clean both low and high areas in your home.



Image: The Dirt Devil Multi-Surface Extended Reach+ Upright Bagless Vacuum Cleaner shown with its included accessories: an extension wand, a 2-in-1 crevice and dusting tool, and an upholstery tool.

Key Components:

- **Main Vacuum Unit:** Lightweight upright design with PowerPass Technology for effective cleaning.
- **Dirt Cup:** Large, easy-release, bagless dirt cup for convenient emptying.
- **Hose:** Extended reach hose for versatile cleaning.
- **Extension Wand:** 15-inch extension for reaching high areas.

- **2-in-1 Crevice/Dusting Brush:** 11-inch tool for tight spaces and delicate surfaces.
- **Upholstery Tool:** Designed for cleaning furniture and other upholstered surfaces.
- **4-Level Height Adjustment:** Allows transition between different floor types.

SETUP AND ASSEMBLY

The Dirt Devil Multi-Surface Extended Reach+ vacuum cleaner is designed for quick and easy assembly, allowing you to begin cleaning almost immediately after unboxing.

1. **Unpack Components:** Carefully remove all parts from the packaging. Ensure all listed components are present.
2. **Attach Handle:** Insert the handle into the main vacuum body until it clicks securely into place.
3. **Connect Hose:** Securely attach the flexible hose to the designated port on the vacuum. Ensure it is firmly connected to maintain suction.
4. **Store Accessories:** Place the extension wand, 2-in-1 crevice/dusting brush, and upholstery tool onto the onboard storage clips for easy access during cleaning.



MULTI-SURFACE EXTENDED REACH+ UPRIGHT VACUUM

WHAT'S IN THE BOX



2-IN-1 CREVICE
& DUSTING TOOL



EXTENSION WAND



UPHOLSTERY TOOL

Image: A visual representation of the Dirt Devil Multi-Surface Extended Reach+ Upright Vacuum and its included accessories: the 2-in-1 crevice and dusting tool, extension wand, and upholstery tool.

OPERATING INSTRUCTIONS

Powering On/Off

- Plug the power cord into a suitable electrical outlet.
- To turn the vacuum on, step on the power pedal located at the base of the unit. To turn off, step on the pedal again.

Adjusting for Floor Types

The vacuum features a 4-level height adjustment to optimize cleaning performance on various surfaces.

POWERFUL MULTI-FLOOR CLEANING



Image: The vacuum head transitioning from a carpeted area to a hard floor, demonstrating its multi-surface cleaning capability.

- Locate the height adjustment dial on the front of the cleaner head.
- Rotate the dial to select the appropriate setting:
 - **Bare Floor:** For hard surfaces like wood, tile, or laminate. This setting prevents scattering of debris.
 - **Low Pile Carpet:** For short-pile carpets and rugs.
 - **Medium Pile Carpet:** For medium-pile carpets.
 - **High Pile Carpet:** For thick carpets and shag rugs.



Image: The vacuum head on a hard floor, illustrating its PowerPass Technology designed to prevent dirt from scattering.

Using Attachments for Extended Reach

The extended reach hose and Click Lock tool kit allow for versatile cleaning beyond floors.

EXTENDED CLEANING REACH



Image: A woman using the Dirt Devil vacuum's extension wand to clean high areas, demonstrating its extended cleaning reach.

1. **Detach Hose:** Press the hose release button and pull the hose away from the main unit.
2. **Attach Tool:** Select the desired tool (extension wand, 2-in-1 crevice/dusting brush, or upholstery tool) and firmly push it onto the end of the hose until it clicks.
3. **Clean:** Use the attached tool to clean upholstery, stairs, corners, or high-up areas like ceiling fans and curtains.
4. **Reattach Hose:** Once finished, remove the tool and reattach the hose to the vacuum unit, ensuring it clicks securely.



HASSLE-FREE UPHOLSTERY TOOL

Image: A hand holding the upholstery tool, cleaning crumbs from a blue velvet couch, highlighting its hassle-free use.

MAINTENANCE

Emptying the Dirt Cup

For optimal performance, empty the dirt cup regularly, especially when debris reaches the MAX fill line.



Image: A man demonstrating the easy-empty feature of the large dirt cup, releasing collected debris into a trash can with a one-touch button.

1. **Remove Dirt Cup:** Press the release button on the dirt cup and pull it away from the vacuum.
2. **Empty Contents:** Position the dirt cup over a trash can. Press the one-touch button to open the bottom flap and release the debris.
3. **Reattach Dirt Cup:** Close the bottom flap securely and reattach the dirt cup to the vacuum until it clicks into place.

Cleaning Filters

The vacuum features replaceable, rinseable, and washable filters. Regular cleaning ensures consistent suction power.

1. **Access Filters:** Refer to your product diagram for exact filter locations, typically within or near the dirt cup.
2. **Rinse Filters:** Rinse the filters under running water until the water runs clear. Do not use detergent.
3. **Air Dry:** Allow filters to air dry completely for at least 24 hours before reinserting them into the vacuum. Do not use a dryer or other heating device.
4. **Replace Filters:** Replace filters as needed, or if they show signs of wear or damage.

Brush Roll Maintenance

Periodically check the brush roll for tangled hair or debris that may reduce cleaning effectiveness.

- Unplug the vacuum cleaner.
- Turn the vacuum over to access the brush roll.
- Carefully cut away any tangled hair or threads using scissors.
- Ensure the brush roll spins freely before resuming operation.

TROUBLESHOOTING

If you encounter issues with your Dirt Devil vacuum, refer to the common problems and solutions below.

Problem	Possible Cause	Solution
Vacuum will not turn on	Not plugged in; Blown fuse/tripped breaker; Thermal protector activated.	Ensure plug is firmly in outlet; Check/replace fuse or reset breaker; Allow vacuum to cool for 30 minutes.
Loss of suction	Dirt cup full; Filters clogged; Hose or nozzle clogged; Brush roll tangled.	Empty dirt cup; Clean/replace filters; Clear any blockages in hose/nozzle; Clean brush roll.
Brush roll not spinning	Brush roll tangled; Belt broken or stretched; Height adjustment incorrect.	Clean brush roll; Inspect/replace belt (contact support if needed); Adjust height setting for floor type.
Vacuum emits unusual noise	Blockage in hose/nozzle; Motor issue.	Check and clear any blockages; If noise persists, discontinue use and contact customer support.

For issues not listed here, or if solutions do not resolve the problem, please contact Dirt Devil Customer Support.

SPECIFICATIONS

Brand	Dirt Devil
Model Name	Multi-Surface Extended Reach+
Item Model Number	UD76300V
UPC	046034904211
Product Dimensions	13.13"L x 11.25"W x 31.5"H
Item Weight	12.84 pounds
Color	Red
Form Factor	Upright

Capacity	1.5 Liters
Hose Length	15 Inches
Filter Type	Replaceable, Rinseable, Washable
Special Features	4-LEVEL HEIGHT ADJUSTMENT, LIGHTWEIGHT DESIGN, POWERPASS™ TECHNOLOGY, EXTENDED LIFE™ FILTRATION
Included Components	Extension Wand, 2-in-1 Crevice/Dusting Brush, Upholstery Tool
Is Cordless?	No
Noise Level	80 dB
Amperage	8 Amps
Control Method	Push Button, Touch
Recommended Uses	Home, Carpet, Hard Floor, Rug

WARRANTY AND SUPPORT

For detailed warranty information, please refer to the warranty card included with your product packaging. This document outlines the terms and conditions of your product's warranty.

Should you require technical assistance, replacement parts, or have any questions regarding your Dirt Devil Multi-Surface Extended Reach+ Upright Bagless Vacuum Cleaner, please contact Dirt Devil Customer Support. Contact information can typically be found on the product packaging, the official Dirt Devil website, or within the included warranty documentation.

Please have your model number (UD76300V) and purchase date available when contacting support.