

Manuals.plus /

- › Nokia /
- › Nokia 2660 Flip User Manual

Nokia 1GF011FPJ1A05

Nokia 2660 Flip User Manual

Model: 1GF011FPJ1A05

INTRODUCTION

This manual provides essential information for the safe and efficient use of your Nokia 2660 Flip phone. The Nokia 2660 Flip is designed for straightforward communication, offering core functionalities like calls, SMS, and basic photography, along with a flashlight and FM radio. It emphasizes ease of use with large buttons and a clear display, and features a long-lasting battery.





Figure 1: Nokia 2660 Flip phone in both open and closed positions, highlighting its dual-screen design.

SETUP

Before using your Nokia 2660 Flip, please follow these steps to set up your device.

1. Battery Installation

Your phone comes with a Lithium-Ion battery. To install:

1. Remove the back cover of the phone.
2. Align the battery contacts with the phone's terminals.
3. Gently press the battery into place until it clicks.
4. Replace the back cover.

2. SIM Card Installation

The Nokia 2660 Flip supports Dual SIM cards (GSM Only). To install SIM cards:

1. Ensure the phone is powered off and the battery is removed.
2. Locate the SIM card slots.
3. Insert your SIM card(s) into the designated slot(s) with the gold contacts facing down.
4. Reinstall the battery and back cover.

3. Initial Charging

It is recommended to fully charge the battery before first use. Use the provided USB cable to connect your phone to a power source. A full charge typically takes approximately 3 hours.



Figure 2: Side view of the Nokia 2660 Flip, illustrating the location of the charging port.

OPERATING INSTRUCTIONS

Learn how to use the key features of your Nokia 2660 Flip phone.

Making and Receiving Calls

- **To make a call:** Enter the phone number using the large keypad buttons and press the green call button.
- **To answer a call:** Simply open the flip to answer an incoming call.
- **To end a call:** Close the flip or press the red end call button.







Figure 3: The Nokia 2660 Flip in its open state, displaying the large, easy-to-use keypad and main screen.

Sending SMS Messages

Navigate to the Messaging menu, select "New message," type your message using the keypad, and send it to the desired contact.

Using the Camera

The phone features a camera for basic photo capture. Access the camera from the main menu. Point and shoot to capture moments.

Flashlight and FM Radio

- **Flashlight:** Activate the built-in flashlight from the shortcuts or main menu.
- **FM Radio:** Tune into your favorite radio stations. The FM radio can be used with or without headphones.

Emergency Button

The dedicated emergency button allows you to quickly contact up to 5 pre-selected individuals in an emergency situation. Configure emergency contacts in the phone settings.

MAINTENANCE

Proper care ensures the longevity of your Nokia 2660 Flip.

Cleaning Your Device

Use a soft, lint-free cloth to clean the phone's screen and body. Avoid using harsh chemicals or abrasive materials.

Battery Care

- Avoid exposing the battery to extreme temperatures.
- Do not puncture or damage the battery.
- If the battery is swollen or damaged, discontinue use and replace it with an authorized Nokia battery.

TROUBLESHOOTING

Refer to this section for solutions to common issues.

Phone Not Powering On

- Ensure the battery is correctly installed and charged.
- Connect the charger and wait a few minutes before attempting to power on.

Poor Call Quality or No Network

- Check that your SIM card is properly inserted.

- Ensure you are in an area with GSM network coverage.
- Restart the phone.

Battery Draining Quickly

- Ensure background applications are closed if applicable.
- Reduce screen brightness.
- Limit usage of features like FM radio or flashlight when not needed.

SPECIFICATIONS

Key technical specifications for the Nokia 2660 Flip.

Feature	Specification
Model Name	Nokia 2660 Flip
Item Model Number	1GF011FPJ1A05
Dimensions	4.25 x 2.17 x 0.75 inches
Item Weight	3.39 ounces (96 Grams)
Display Size	2.8 Inches
Resolution	240 x 320
RAM	48 MB (0.05 GB)
Battery Capacity	1450 mAh
Phone Talk Time	6.3 Hours
Charging Time	3 Hours
Connectivity	2G (GSM)
Operating System	Android (as per product data)
Special Features	Dual SIM, Large Buttons, Large Screen, FM Radio, Emergency Button

WARRANTY AND SUPPORT

Your Nokia 2660 Flip is manufactured by HMD Global Oy. For warranty information and technical support, please refer to the warranty card included in your product packaging or visit the official Nokia mobile support website.

For further assistance, you may also contact Nokia customer service. Please have your product model number (1GF011FPJ1A05) and purchase details ready.