



Manuals.plus /

› JUSTPRO /

› JUSTPRO JP-Gre Clip-On Guitar Tuner Instruction Manual

JUSTPRO JP-Gre

JUSTPRO JP-Gre Clip-On Tuner Instruction Manual

Model: JP-Gre

PRODUCT OVERVIEW

The JUSTPRO JP-Gre Clip-On Tuner is a versatile and accurate tuning device designed for a wide range of stringed instruments. Its compact size, clear display, and multiple tuning modes make it an essential tool for musicians.

Multiple Tuning Models



Image: The JUSTPRO JP-Gre Clip-On Tuner, a compact device with a digital display, is shown clipped onto the headstock of an acoustic guitar. The tuner's screen is visible, indicating its readiness for use.

SETUP

Battery Installation

The tuner requires one CR2032 battery (included). To install or replace the battery:

1. Locate the battery compartment cover on the back of the tuner.
2. Use a coin or a small tool to twist the cover counter-clockwise to open.
3. Insert the CR2032 battery with the positive (+) side facing up.
4. Replace the cover and twist clockwise to secure it.

Compact and Portable

Super small size-enough to fit in your pocket



Image: A detailed view of the JUSTPRO JP-Gre tuner, highlighting the single control button on the side and the circular battery compartment on the back. Text overlays indicate 'Power on/off: Long press (1-2 sec.)' and 'Switch Functions: Light press', demonstrating the tuner's simple operation.

Attaching the Tuner

Clip the tuner onto the headstock of your instrument. The clip features a small orange rubber pad to protect your instrument's finish. The tuner's display can be rotated 360 degrees for optimal viewing angle.



Image: A diagram illustrating the 360-degree rotation capability of the JUSTPRO JP-Gre tuner's screen, allowing users to adjust the viewing angle for convenience. The clip mechanism is also visible.

OPERATING INSTRUCTIONS

Power On/Off


To power on the tuner, press and hold the single control button for 1-2 seconds. To power off, press and hold the button again for 1-2 seconds.

Selecting Tuning Mode

The tuner offers multiple tuning modes for various instruments. Lightly press the control button to cycle through the available modes:

- **Chromatic (Chro):** For all instruments.
- **Guitar (G):** Standard guitar tuning.
- **Bass (B):** Standard bass guitar tuning.
- **Ukulele (U):** Standard ukulele tuning.
- **Violin (V):** Standard violin tuning.

Easy to Use One Button Control

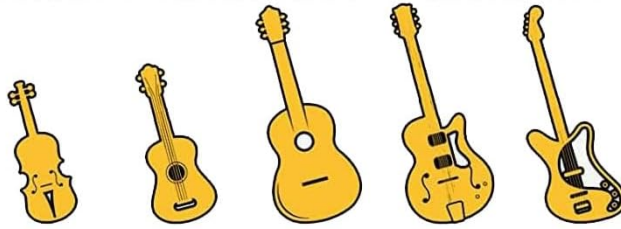

1. Power on/off: Long press(1-2 sec.)

2. Switch Functions: Light press



Image: The JUSTPRO JP-Gre tuner's display shows different instrument modes, including guitar, ukulele, bass, violin, and banjo, demonstrating its multi-instrument compatibility.

Tuning Your Instrument

Once the desired tuning mode is selected, pluck a single string on your instrument. The tuner will detect the note and display it on the screen. The needle will indicate if the note is flat, sharp, or in tune:

- **Needle to the left (blue screen):** The note is flat. Tighten the string.
- **Needle in the center (green screen):** The note is in tune.
- **Needle to the right (blue screen):** The note is sharp. Loosen the string.



Image: The tuner's display illustrates the tuning process, showing the needle position for 'Low pitch' (flat), 'Intonation' (in tune, green screen), and 'Pitch' (sharp). This visual guide helps users adjust their strings accurately.

Your browser does not support the video tag.

Video: An official product video demonstrating the JUSTPRO JP-Gre tuner in action, showing how it accurately detects notes and guides the user to achieve perfect tuning for their instrument.

MAINTENANCE

Cleaning

Wipe the tuner with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.

Storage

Store the tuner in a cool, dry place away from direct sunlight and extreme temperatures. Remove the battery if the tuner will not be used for an extended period to prevent leakage.

TROUBLESHOOTING

- **Tuner not turning on:** Check if the battery is correctly installed and has sufficient charge. Replace the CR2032 battery if necessary.

- **Inaccurate readings:** Ensure the tuner is securely clipped to the instrument's headstock. Pluck strings clearly and individually. Check for excessive background noise that might interfere with vibration detection.
- **Display issues:** If the display is dim or flickering, replace the battery.

SPECIFICATIONS

Feature	Detail
Item Weight	1.13 ounces
Product Dimensions	1.57 x 1.57 x 1.02 inches
Item Model Number	JP-Gre
Batteries	1 CR2032 battery required (included)
Color	Black
Material Type	Rubber, Lithium
Tuning Modes	Chromatic, Guitar, Bass, Ukulele, Violin, Banjo

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your product packaging or visit the official JUSTPRO website. Keep your purchase receipt for warranty claims.