

[Manuals.plus](#) /

› [Corberó](#) /

› Corberó CLSH85VIN Front-Load Washer Dryer Instruction Manual

Corberó CLSH85VIN

Corberó CLSH85VIN Front-Load Washer Dryer Instruction Manual

Model: CLSH85VIN

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Corberó CLSH85VIN front-load washer dryer. Please read these instructions carefully before using the appliance and retain them for future reference.

Key Features:

- **Optimized Capacity:** 8 kg washing capacity and 5 kg drying capacity, suitable for various laundry loads.
- **Inverter Technology:** Intelligent motor adjusts speed based on load, reducing energy consumption, noise, and extending appliance lifespan.
- **15 Programs & Special Functions:** Includes Jet Wash and Steam functions for diverse fabric care, from delicate items to heavily soiled garments.
- **Delayed Start:** Program the cycle start time to suit your schedule and take advantage of lower electricity tariffs.
- **ECologic & XXL Door:** Features ECologic function for energy efficiency and an extra-large door for easy loading and unloading.
- **High Spin Speed:** Up to 1400 RPM for effective water extraction.



Image 1.1: Front view of the Corberó CLSH85VIN washer dryer, highlighting its capacity and spin speed.

2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury to persons.

- Read all instructions before use.
- Ensure the appliance is properly grounded.
- Do not allow children to play on or in the appliance.
- Unplug the appliance before cleaning or performing any maintenance.
- Do not operate the appliance if it is damaged or malfunctioning.
- Keep flammable materials away from the appliance.

3. INSTALLATION AND FIRST USE

3.1 Unpacking and Positioning

- Remove all packaging materials, including the transport bolts at the rear of the machine. Failure to remove these bolts can cause severe vibration and damage during operation.
- Place the washer dryer on a firm, level floor.
- Adjust the leveling feet to ensure the appliance is stable and balanced.

3.2 Water and Electrical Connections

- Connect the water inlet hose to a cold water tap. Ensure connections are tight to prevent leaks.
- Position the drain hose into a standpipe or sink, ensuring it is securely fixed to prevent displacement during draining.
- Plug the power cord into a grounded electrical outlet. The appliance requires a 220-240V, 50Hz power supply.

3.3 First Use

- Before washing clothes for the first time, run a short cycle without laundry to clean the drum. Use a small amount of detergent.

4. OPERATING INSTRUCTIONS

4.1 Control Panel Overview

Corbero

- Motor Inverter
- Lavado Jet
- Opción nivel de secado



Image 4.1: Detailed view of the control panel, showing the program dial, display, and function buttons.

The control panel features a central program dial, an LED display, and various function buttons for temperature, spin speed, drying level, and delayed start.

4.2 Loading Laundry



Image 4.2: Demonstrates loading clothes into the washer dryer's XXL door for convenience.

- Open the XXL door and load laundry, ensuring not to overload the drum. For optimal washing, leave enough space for clothes to tumble freely.
- For drying, do not exceed the 5 kg capacity to ensure efficient drying.

4.3 Detergent Dispenser

Corberó

- Lavado Jet
- Opción nivel de secado
- Lavado rápido 15 min.



Image 4.3: View of the detergent dispenser drawer, showing compartments for pre-wash, main wash, and fabric softener.

- Add detergent to the main wash compartment (II).
- If using pre-wash, add detergent to compartment (I).
- Add fabric softener to the designated compartment (flower symbol).

4.4 Program Selection



Image 4.4: Close-up of the program selection dial, indicating various wash and dry cycles.

Turn the program dial to select one of the 15 available programs:

- **Drying Programs:** Cotton Dry, Synthetic Dry, Wash + Dry
- **Refresh (Steam):** For light refreshing of clothes.
- **Anti-Allergy (Steam):** For enhanced hygiene.
- **20°C:** Low-temperature wash.
- **Drum Clean:** For appliance maintenance.
- **Spin:** For water extraction.
- **Rinse + Spin:** For additional rinsing and spinning.
- **Rapid 15':** Quick wash program.
- **Wool:** For delicate woolsens.
- **Mix:** For mixed fabrics.
- **Synthetic:** For synthetic items.
- **Cotton:** For cotton items.
- **ECO 40-60:** Energy-efficient program for normally soiled cotton, linen, or mixed fiber items washable at 40°C or 60°C.

4.5 Special Functions

- **Jet Wash:** Provides a powerful wash for effective cleaning.

- **Steam Function:** Helps reduce wrinkles and refresh clothes.
- **Delayed Start:** Press the "Inicio Diferido" button to set a delay before the cycle begins.
- **Drying Level Option:** Select the desired drying level (e.g., cupboard dry, iron dry).

5. MAINTENANCE AND CLEANING

Regular maintenance ensures optimal performance and extends the lifespan of your appliance.

5.1 Cleaning the Detergent Drawer

- Pull out the detergent drawer completely.
- Remove any residue and rinse under running water.
- Clean the drawer housing with a brush.
- Reinsert the drawer.

5.2 Cleaning the Drum

- Use the "Drum Clean" program periodically to remove detergent residue and prevent odors.

5.3 Cleaning the Pump Filter

- Locate the pump filter cover at the bottom front of the appliance.
- Place a shallow container underneath to catch any residual water.
- Carefully open the cover and unscrew the filter.
- Remove any lint, coins, or foreign objects.
- Clean the filter under running water and reinsert it securely.

5.4 Exterior Cleaning

- Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.

6. TROUBLESHOOTING

Before contacting customer service, refer to the following table for common issues and solutions.

Problem	Possible Cause	Solution
Appliance does not start.	Power cord not plugged in; door not closed properly; delayed start activated.	Check power connection; ensure door is latched; check delayed start setting.
Water not filling.	Water tap closed; inlet hose kinked; water pressure too low.	Open water tap; straighten hose; check household water pressure.
Water not draining.	Drain hose kinked or blocked; pump filter clogged.	Straighten or clear drain hose; clean pump filter (see Section 5.3).
Excessive vibration/noise.	Transport bolts not removed; appliance not level; uneven load.	Remove transport bolts; adjust leveling feet; redistribute laundry.

Problem	Possible Cause	Solution
Poor drying performance.	Overloaded drum; incorrect drying program; lint filter clogged.	Reduce load size; select appropriate drying program; clean lint filter (if applicable, though not explicitly mentioned for this model, it's a common dryer maintenance item).

7. TECHNICAL SPECIFICATIONS

Feature	Detail
Model Number	CLSH85VIN
Washing Capacity	8 kg
Drying Capacity	5 kg
Maximum Spin Speed	1400 RPM
Dimensions (H x W x D)	84.5 cm x 59.5 cm x 54 cm
Weight	60 kg
Energy Efficiency Class (Wash)	A
Energy Efficiency Class (Wash & Dry)	D
Noise Level (Spin)	74 dB
Control Type	Push button, Rotary dial
Color	White
Material	Steel

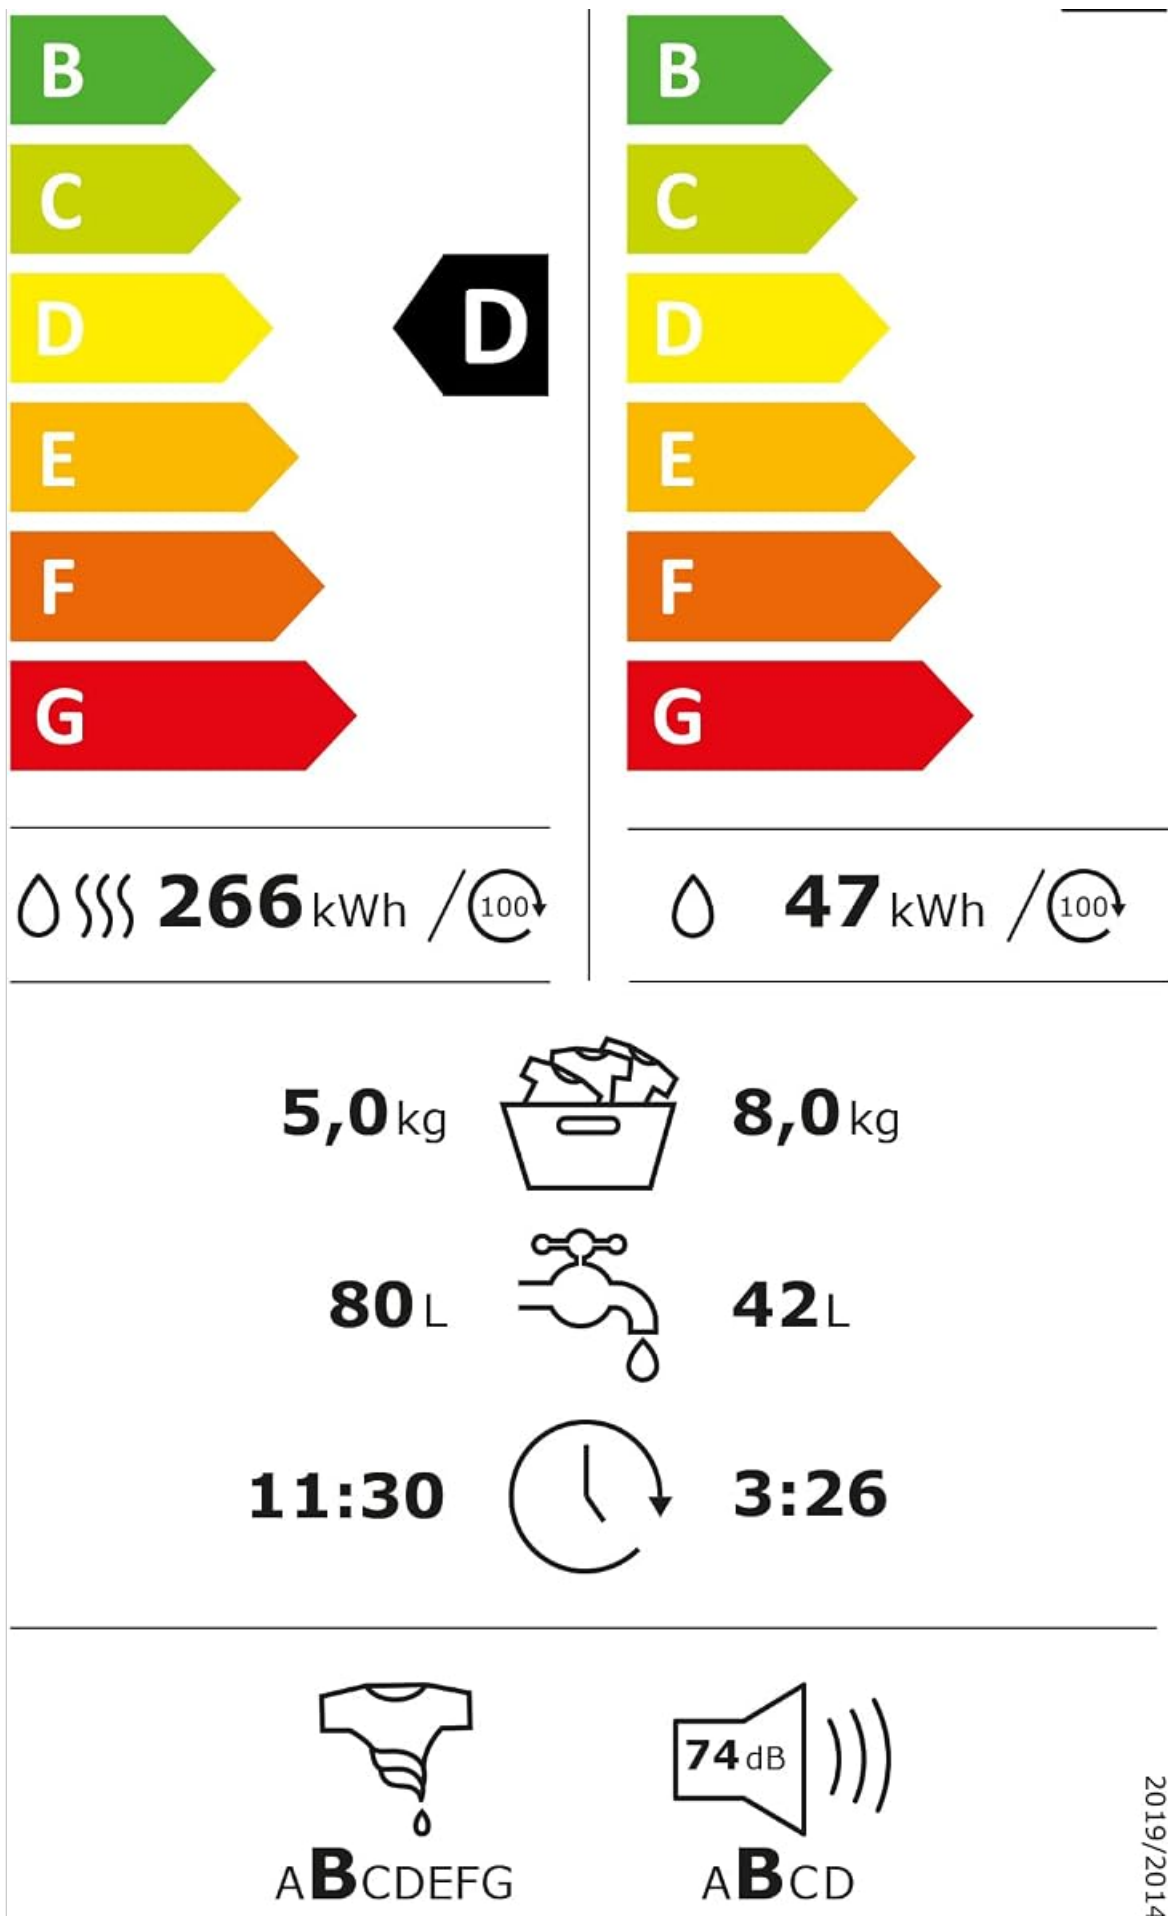


Image 7.2: Energy efficiency label for the Corberó CLSH85VIN, indicating energy consumption and other metrics. For more details, visit the [EPREL database](#).

8. WARRANTY AND SUPPORT

8.1 Warranty Information

Your Corberó CLSH85VIN washer dryer comes with a **3-year warranty** from the date of purchase. Please retain your proof of purchase for warranty claims. The warranty covers manufacturing defects and malfunctions under normal use conditions.



Image 8.1: Visual representation of the 3-year warranty provided by Corberó.

8.2 Customer Support

For technical assistance, spare parts, or warranty claims, please contact Corberó customer service. Refer to the official Corberó website or your purchase documentation for contact details specific to your region.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0C7VMPPKV>

More documents and user manuals: <https://manuals.plus/>