

[manuals.plus](#) /

› [Smoby](#) /

› [Smoby Rowenta X Force Flex Children's Vacuum Cleaner Instruction Manual](#)

Smoby 330220

Smoby Rowenta X Force Flex Children's Vacuum Cleaner

Model: 330220

Official Instruction Manual

1. INTRODUCTION

The Smoby Rowenta X Force Flex Children's Vacuum Cleaner is a realistic and interactive toy designed to allow children aged 3 and up to engage in imaginative play, mimicking household chores. This manual provides essential information for the safe and proper use, assembly, and maintenance of your new toy vacuum cleaner.





Image 1.1: The Smoby Rowenta X Force Flex Children's Vacuum Cleaner in its full stick configuration.

2. SAFETY INFORMATION

Please read all safety information before allowing a child to use this product. Keep these instructions for future reference.

- **Recommended Age:** This toy is suitable for children aged 3 years and up.
- **Battery Safety:** Batteries should be installed and replaced by an adult. Do not mix old and new batteries, or different types of batteries. Remove batteries if the toy will not be used for an extended period. Dispose of batteries responsibly.

- **Choking Hazard:** Contains small parts before assembly. Keep away from children under 3 years.
- **Supervision:** Adult supervision is recommended during play.
- **Intended Use:** This product is a toy and is not intended for actual vacuuming or cleaning.

3. WHAT'S IN THE Box

Carefully unpack all components and ensure all items are present before assembly. The package includes:

- Smoby Rowenta X Force Flex Children's Vacuum Cleaner (main unit, handle, floor nozzle)
- Additional Crevice Nozzle
- 3 x LR44/AG13 Batteries (pre-installed or included separately)



Image 3.1: The product packaging, showing the toy vacuum and its features.



Image 3.2: The additional crevice nozzle accessory.

4. SETUP AND ASSEMBLY

The Smoby Rowenta X Force Flex is designed for easy assembly. Follow these steps:

1. **Unpack Components:** Remove all parts from the packaging.
2. **Attach Handle:** Insert the long handle into the main vacuum unit until it clicks securely into place.
3. **Attach Floor Nozzle:** Connect the floor nozzle to the bottom of the handle.
4. **Battery Installation (if not pre-installed):** Locate the battery compartment, usually on the main unit. Use a small screwdriver to open the compartment. Insert 3 x LR44/AG13 batteries, ensuring correct polarity (+/-). Close the compartment securely.

The toy vacuum can be easily converted between a stick vacuum and a handheld vacuum by detaching the long handle.

Rowenta®



Image 4.1: The toy vacuum demonstrating its versatility between stick and handheld configurations.

5. OPERATING INSTRUCTIONS

Using the Smoby Rowenta X Force Flex is simple and intuitive for children.

5.1 Powering On and Sound Effect

- To activate the realistic vacuum sound, locate the power button on the main unit (often slightly hidden on the underside or side).
- Press the button to start the typical vacuum sound. Press again to turn it off.

5.2 Using as a Stick Vacuum

- With the long handle and floor nozzle attached, the toy functions as a stick vacuum.
- Children can push and pull the vacuum across surfaces, mimicking real cleaning.



Image 5.1: A child engaging in play with the toy vacuum in its stick configuration.

5.3 Using as a Handheld Vacuum

- To convert to handheld mode, gently pull the long handle away from the main unit.
- The main unit can then be used independently for smaller, more focused play.
- The additional crevice nozzle can be attached to the main unit for detailed play.



Image 5.2: A child playing with the toy vacuum in its handheld configuration.

6. MAINTENANCE

Proper maintenance will ensure the longevity and enjoyment of your toy vacuum cleaner.

- **Cleaning:** Wipe the toy with a damp cloth to remove dust and dirt. Do not immerse in water. Do not use harsh chemicals or abrasive cleaners.
- **Dust Compartment:** The toy features a dust compartment that can be opened and emptied for realistic play. Regularly open and empty this compartment as part of the play experience.
- **Storage:** Store the toy in a clean, dry place away from direct sunlight and extreme temperatures.

7. TROUBLESHOOTING

If you encounter any issues with your Smoby Rowenta X Force Flex, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No sound when button is pressed.	Batteries are dead or incorrectly installed.	Check battery polarity. Replace with new LR44/AG13 batteries.
Parts do not stay connected.	Parts not fully clicked into place.	Ensure all connections are firm and click securely.
Toy appears damaged.	Physical impact or improper handling.	Discontinue use if parts are broken or sharp edges are exposed. Contact customer support if purchased recently.

8. SPECIFICATIONS

Feature	Detail
Model Number	330220
Product Dimensions (L x W x H)	7.4 x 6.46 x 31.02 inches (18.8 x 16.4 x 78.8 cm)
Item Weight	1.36 pounds
Manufacturer Recommended Age	3 years and up
Batteries Required	3 x LR44/AG13 (included)
Sound Effect	Yes
Convertible Design	Stick and Handheld modes
Country of Manufacture	France

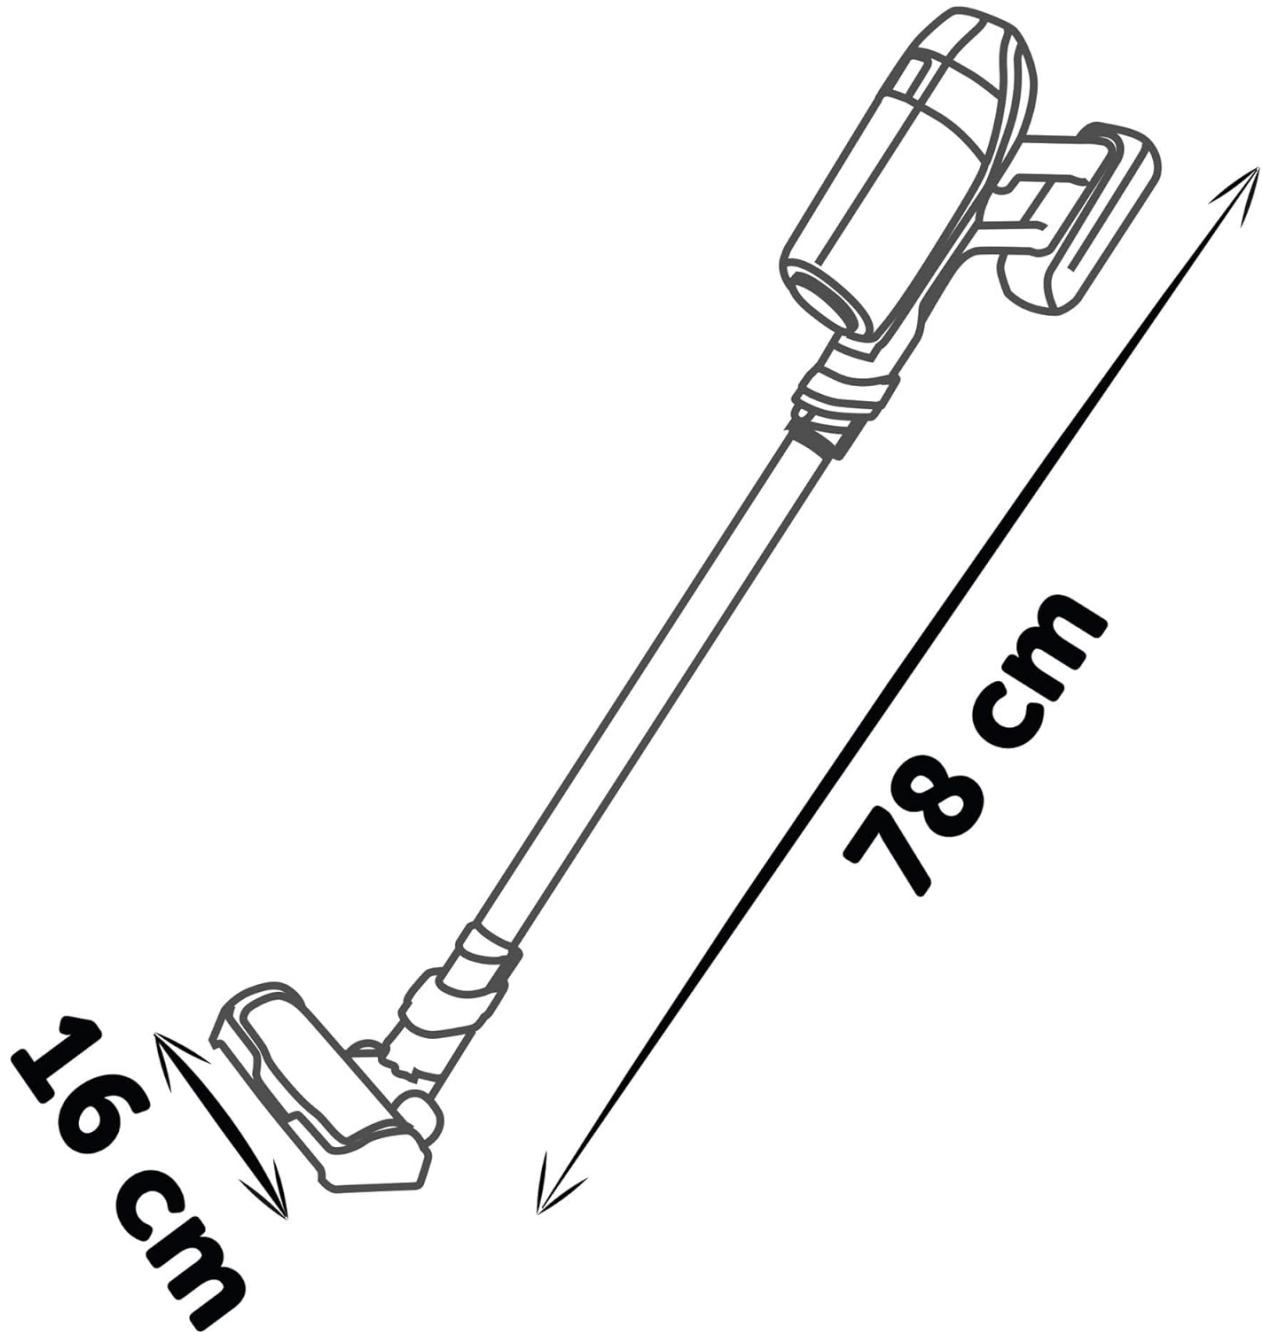
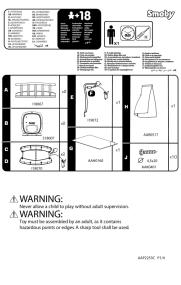
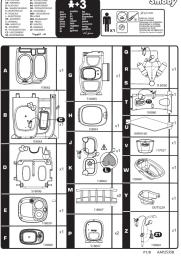
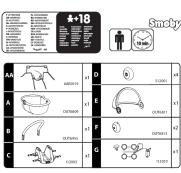


Image 8.1: Dimensional diagram of the Smoby Rowenta X Force Flex toy vacuum cleaner.

9. WARRANTY AND SUPPORT

For any questions, concerns, or issues not covered in this manual, please contact the retailer or manufacturer directly. Please retain your proof of purchase for warranty claims, if applicable.
Smoby is committed to providing quality toys. For more information, visit the official Smoby website or contact their customer service department.

 <p>Smoby Bercelonne Assembly Instructions and Safety Guide</p> <p>Detailed assembly instructions and safety information for the Smoby Bercelonne toy. Includes part identification, step-by-step assembly guides, and important warnings for safe use.</p>	
 <p>Smoby Pushchair + Pram Assembly Instructions</p> <p>Step-by-step guide for assembling the Smoby Pushchair + Pram (Model 03291X0/15). Includes important safety information, part identification, and assembly procedures.</p>	
 <p>Smoby Baby Nurse Toilet Assembly Instructions and Safety Guide</p> <p>Comprehensive assembly instructions and safety warnings for the Smoby Baby Nurse Toilet toy. Learn how to assemble the play toilet with clear steps and component identification.</p>	
 <p>Smoby Baby Nurse Large Doll's Play Centre Assembly Instructions</p> <p>Detailed step-by-step assembly guide for the Smoby Baby Nurse Large Doll's Play Centre, including part identification and safety warnings. This manual helps users assemble the toy safely and correctly.</p>	
 <p>Smoby Landau Calin Baby Doll Stroller Assembly Instructions</p> <p>This document provides comprehensive assembly instructions for the Smoby Landau Calin baby doll stroller. It details the parts included, offers step-by-step guidance for assembly, and highlights crucial safety warnings for safe usage.</p>	
 <p>Smoby Baby Nurse Electronic Doll Bath - Assembly Instructions and Safety Guide</p> <p>Comprehensive guide for assembling and safely using the Smoby Baby Nurse Electronic Doll Bath (Model AAP2330C), including parts list, step-by-step instructions, and important safety warnings for children.</p>	