

[Manuals.plus](#) /

› [Sojag](#) /

› Sojag Eco II 2-Seater Garden Swing User Manual

Sojag 113-9161700

Sojag Eco II 2-Seater Garden Swing User Manual

Brand: Sojag | **Model:** 113-9161700

1. INTRODUCTION

The Sojag Eco II 2-Seater Garden Swing is designed to enhance your outdoor living space, providing a comfortable and versatile seating option. It is suitable for various outdoor activities, from quiet reading to observing garden activities, and offers sun protection. Proper care and maintenance will ensure years of enjoyment.



Figure 1: The Sojag Eco II 2-Seater Garden Swing, featuring two seats, a central table, and a protective canopy.

Key Features:

- **Protective Coating:** Features AkzoNobel's Interpon Powder coating for maximum scratch and corrosion resistance.
- **Premium Materials:** Seats and roof canopy are constructed from PVC-coated polyester.
- **Convenient Design:** Includes a 5 mm water wave tempered glass top table and a footrest for added comfort.
- **Movement:** Seats are designed to glide back and forth smoothly.
- **Rustproof Frame:** The aluminum frame is rustproof, ensuring durability and low maintenance.

2. SAFETY INFORMATION

Please read and understand all safety instructions before assembling or using the garden swing. Failure to follow these instructions may result in injury or damage to the product.

- Ensure all components are securely fastened before use.
- Do not exceed the maximum weight capacity of the swing (designed for 2 persons).
- Keep children under supervision when near or using the swing.
- Avoid standing on the seats or frame.
- Place the swing on a level, stable surface to prevent tipping.

- In strong winds, remove the canopy and secure the swing to prevent damage or movement.

3. SETUP AND ASSEMBLY

Assembly of the Sojag Eco II 2-Seater Garden Swing is required. It is recommended to have at least two adults for assembly. Please refer to the detailed assembly instructions provided in the separate assembly guide included with your product for step-by-step procedures, parts list, and hardware identification.

General Assembly Tips:

- Unpack all components and verify against the parts list.
- Lay out all parts on a soft, clean surface to prevent scratches.
- Do not fully tighten all bolts until the entire unit is assembled and aligned.
- Ensure all connections are secure before use.

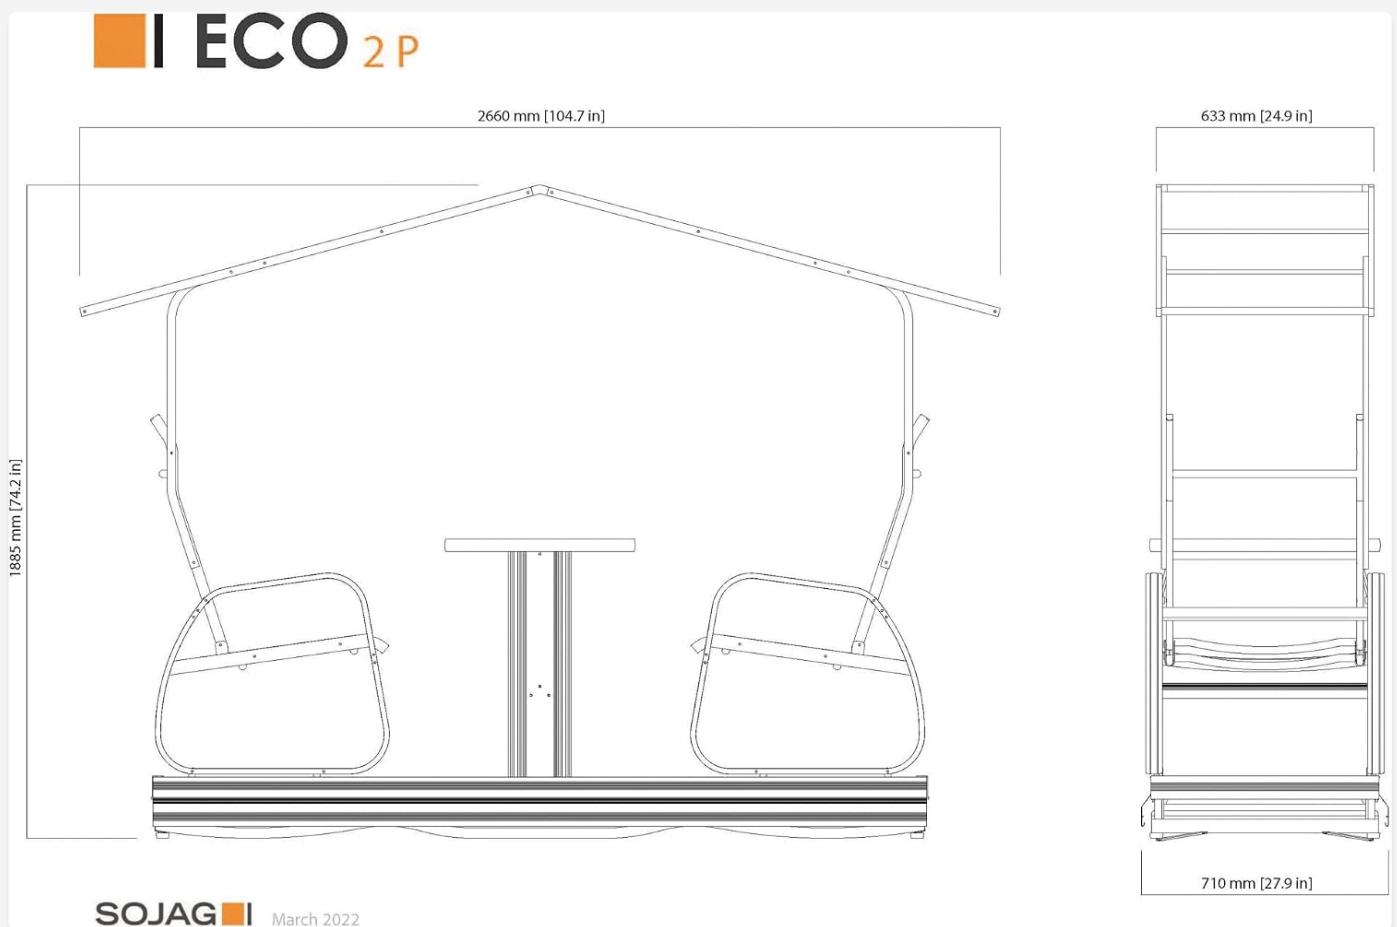


Figure 2: Technical drawing illustrating the dimensions of the Sojag Eco II 2-Seater Garden Swing.

4. OPERATING INSTRUCTIONS

The Sojag Eco II Garden Swing is designed for simple and comfortable use.

- **Seating:** The swing accommodates two individuals comfortably. Sit gently on the seats.
- **Gliding Motion:** The seats are designed to glide back and forth. To initiate motion, gently push off the ground with your feet. The smooth mechanism allows for a relaxing swinging experience.
- **Central Table:** Utilize the central table for beverages, books, or small personal items. The 5 mm water wave tempered glass top provides a stable surface.

- **Footrest:** The integrated footrest enhances comfort during use.



Figure 3: The garden swing positioned in an outdoor setting, demonstrating its intended use for relaxation.

5. MAINTENANCE

Regular maintenance will extend the life and appearance of your Sojag Eco II Garden Swing.

- **Cleaning:** Clean the frame and seats with mild soap and water. Rinse thoroughly and dry with a soft cloth. Avoid abrasive cleaners or harsh chemicals.
- **Frame Care:** The aluminum frame is rustproof and features AkzoNobel's Interpon Powder coating for enhanced durability. Inspect the frame periodically for any signs of wear or damage.
- **Canopy Care:** The PVC-coated polyester roof canopy can be wiped clean. For winter storage, it is recommended to remove the roof canopy to protect it from harsh weather conditions and extend its lifespan.
- **Hardware:** Periodically check all bolts and nuts to ensure they remain tight. Retighten as necessary.



Figure 4: Detail of the swing's base and footrest, highlighting the robust construction.

 




Figure 5: Close-up view of the central table with its 5 mm water wave tempered glass surface.



Figure 6: Detail of the swing seat, showing the PVC-coated polyester material and aluminum armrest.

6. TROUBLESHOOTING

This section provides general guidance for common issues. For more complex problems, please contact customer support.

- **Squeaking Noise:** If the swing produces squeaking noises, check all bolted connections and tighten if loose. A small amount of silicone-based lubricant can be applied to moving parts if necessary.
- **Instability:** Ensure the swing is placed on a completely level surface. Verify that all assembly bolts are securely tightened.
- **Canopy Damage:** If the canopy shows signs of wear or minor tears, consider repair kits or replacement parts. Always remove the canopy during high winds or heavy snowfall.

7. SPECIFICATIONS

Attribute	Detail
Brand	Sojag
Model Number	113-9161700
Product Dimensions (L x W x H)	265.99 x 63.3 x 188.49 cm (104.7 x 24.9 x 74.2 inches)

Product Weight	68.8 kg
Colour	Charcoal
Frame Material	Aluminum Frame, PVC-coated
Seat and Roof Material	PVC-coated polyester
Finish Type	Powder Coated (AkzoNobel Interpon)
Seating Capacity	2 persons
Assembly Required	Yes
UPC	772830161700
Manufacturer	ShelterLogic

8. WARRANTY AND SUPPORT

Limited Warranty:



Figure 7: The 1 Year Limited Warranty emblem.

The Sojag Eco II 2-Seater Garden Swing comes with a **1 Year Limited Warranty**. This warranty covers manufacturing defects in materials and workmanship under normal use and service. Please retain your proof of purchase for warranty claims.

For detailed warranty terms, conditions, and to register your product, please visit the manufacturer's official website or contact their customer service department.

Customer Support:

For assistance with assembly, parts, or any other inquiries, please contact the manufacturer, ShelterLogic. Contact information can typically be found on the packaging or the manufacturer's website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0C7WGR889>

More documents and user manuals: <https://manuals.plus/>