

[Manuals.plus](#) /

› [Sojag](#) /

› Sojag Eco 4-Seater Garden Swing Instruction Manual

Sojag 113-9160390

Sojag Eco 4-Seater Garden Swing

Model: 113-9160390

Brand: Sojag

1. INTRODUCTION

The Sojag Eco 4-Seater Garden Swing is designed to provide a comfortable and versatile outdoor seating solution. This manual contains essential information for the safe and correct assembly, operation, and maintenance of your garden swing. Please read all instructions carefully before beginning assembly or use.



Figure 1.1: The Sojag Eco 4-Seater Garden Swing. This image shows the complete swing set with its canopy, two seating areas, and a central table, designed for outdoor use.

2. SAFETY INFORMATION

Always observe the following safety precautions to prevent injury or damage to the product:

- Ensure all bolts and fasteners are securely tightened before and during use.
- Do not exceed the maximum weight capacity of the swing. This swing is designed for up to 4 individuals.
- Keep children under supervision when they are near or using the swing.
- Do not stand on the seats or frame.
- In strong winds or severe weather, remove the roof canopy to prevent damage.
- Place the swing on a level, stable surface.

3. PACKAGE CONTENTS

Before assembly, verify that all parts listed below are present and undamaged. If any parts are missing or damaged, contact customer support immediately.

- Main Frame Components (Aluminum beams, supports)
- Seating Units (2 units, including frames and PVC-coated polyester fabric)
- Central Table (with 5 mm water wave tempered glass top)
- Roof Canopy (PVC-coated polyester fabric)
- Assembly Hardware (Bolts, nuts, washers, tools if provided)

4. SETUP AND ASSEMBLY

Assembly requires at least two adults. Follow these general steps. Refer to the included assembly diagram for specific part identification and connection points.

1. **Unpack and Identify Parts:** Carefully remove all components from the packaging. Lay them out and compare with the parts list to ensure everything is present.
2. **Assemble the Base Frame:** Connect the main base frame components using the provided hardware. Ensure all connections are finger-tight at this stage.
3. **Attach Upright Supports:** Secure the vertical supports for the canopy and seating mechanisms to the base frame.
4. **Install Seating Units:** Attach the two seating units to their respective gliding mechanisms on the base frame. Ensure they move freely.
5. **Mount the Central Table:** Secure the central table between the two seating areas.
6. **Assemble and Attach Canopy Frame:** Construct the canopy frame and attach it to the top of the upright supports.
7. **Install Roof Canopy:** Drape and secure the PVC-coated polyester roof canopy onto the canopy frame.
8. **Final Tightening:** Once all components are in place, systematically tighten all bolts and fasteners using appropriate tools. Do not overtighten.

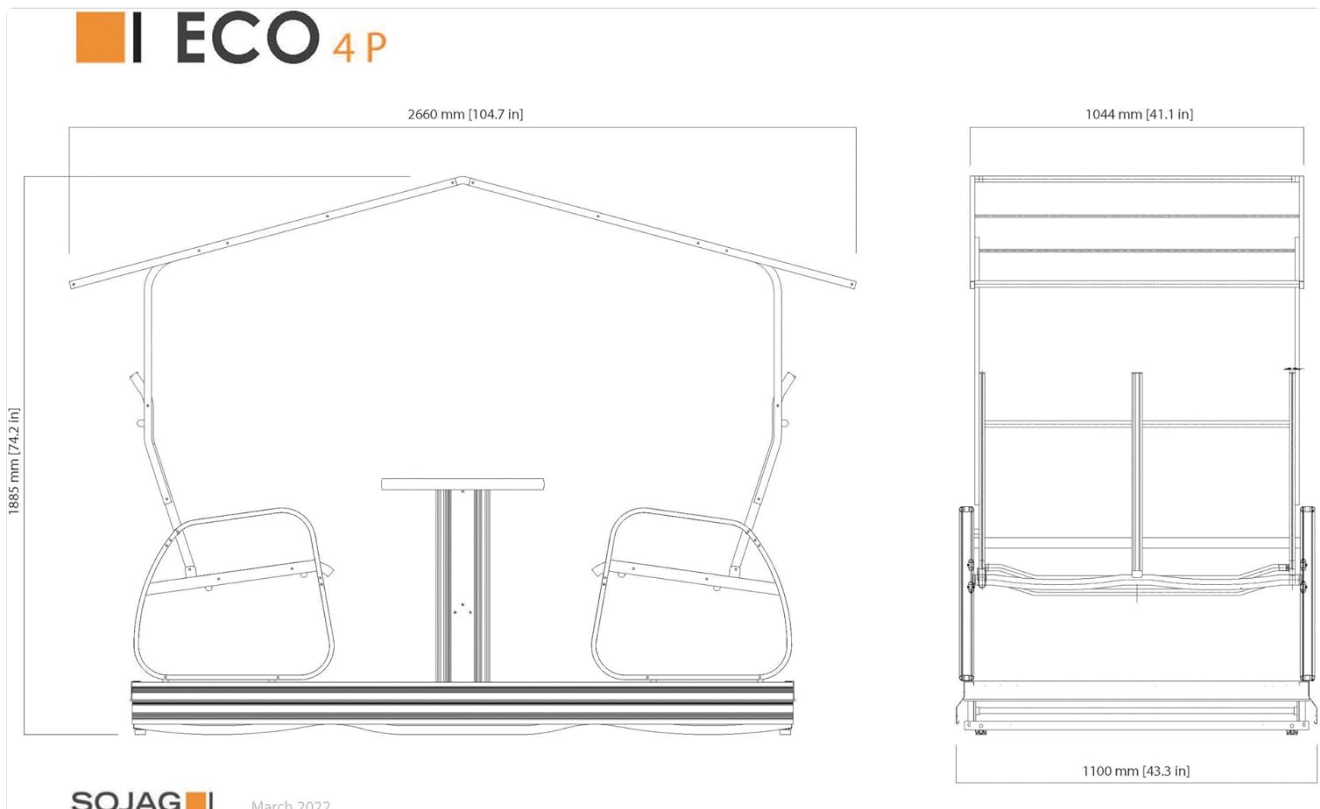


Figure 4.1: Technical drawing showing the dimensions of the Sojag Eco 4-Seater Garden Swing. This provides a clear overview of the product's height, width, and depth for planning placement.



Figure 4.2: The assembled Sojag Eco 4-Seater Garden Swing placed in a garden. This image illustrates the product's appearance in an outdoor environment, highlighting its integration with natural surroundings.

5. OPERATING INSTRUCTIONS

The Sojag Eco 4-Seater Garden Swing is designed for simple and comfortable use.

- **Seating:** Gently sit on the PVC-coated polyester seats. The seats are designed to glide back and forth smoothly.
- **Central Table:** Utilize the central table with its tempered glass top for placing drinks, books, or other small items.
- **Sun Protection:** The roof canopy provides shade and protection from direct sunlight.



Figure 5.1: Close-up view of the 5 mm water wave tempered glass top table. This image highlights the texture and material of the central table, suitable for holding beverages or small items.



Figure 5.2: Detailed view of the swing seat and armrest. This image shows the texture of the PVC-coated polyester seat fabric and the sturdy aluminum frame of the seating unit.



Figure 5.3: Close-up of the gliding mechanism at the base of the swing. This image illustrates the wheel and axle system that allows the seats to move smoothly back and forth.

6. MAINTENANCE AND CARE

Proper maintenance will extend the life and appearance of your garden swing.

- **Cleaning:** Clean the aluminum frame and PVC-coated polyester fabric with mild soap and water. Rinse thoroughly and allow to air dry. Avoid harsh chemicals or abrasive cleaners.
- **Frame Inspection:** Periodically inspect the aluminum frame for any signs of damage or loose connections. Tighten any loose bolts. The AkzoNobel's Interpon Powder coating provides maximum scratch and corrosion resistance, but regular checks are recommended.
- **Canopy Care:** For winter storage or during periods of strong winds, **take the roof canopy off** to prevent damage and prolong its lifespan. Store it in a dry, protected area.
- **Glass Table:** Clean the tempered glass table with a glass cleaner and a soft cloth.



Figure 6.1: Close-up of the roof canopy fabric. This image shows the texture and weave of the PVC-coated polyester material used for the canopy, designed for sun protection.



Figure 6.2: Detailed view of the canopy attachment point to the frame. This image illustrates how the canopy is secured, which is important for removal during winter storage.

7. TROUBLESHOOTING

If you encounter issues with your Sojag Eco 4-Seater Garden Swing, refer to the following common problems and solutions:

- **Squeaking Noise:** Apply a silicone-based lubricant to the gliding mechanisms if they produce squeaking noises during operation.
- **Unstable or Wobbly:** Ensure the swing is placed on a completely level surface. Check and tighten all assembly bolts and fasteners.
- **Canopy Sagging:** Verify that the canopy frame is correctly assembled and that the fabric is tautly secured to the frame.
- **Difficulty Gliding:** Inspect the gliding mechanism for any obstructions or debris. Clean the tracks if necessary.

8. SPECIFICATIONS

Feature	Detail
Brand	Sojag
Model Number	113-9160390
Product Dimensions	264.92 x 104.39 x 189.48 cm (104.3 x 41.1 x 74.6 inches)
Weight	91 kg (200.6 lbs)
Material	Aluminum (Frame), Polyvinyl Chloride (Seats, Roof Canopy)

Frame Material	Aluminum
Finish Type	Powder Coated (AkzoNobel's Interpon)
Color	Charcoal
Seating Capacity	4
Table Top	5 mm Water Wave Tempered Glass
Assembly Required	Yes
UPC	772830160390

9. WARRANTY AND SUPPORT

For warranty information, product support, or to order replacement parts, please contact Sojag customer service. Keep your purchase receipt and model number handy for faster service.

Manufacturer: ShelterLogic

Contact Information: Refer to the contact details provided on the product packaging or the official Sojag website.
