

[Manuals.plus](#) /

> [Smoby](#) /

> Smoby Supermarket Playset with Shopping Trolley - Model 7600350239 Instruction Manual

## Smoby 7600350239

# Smoby Supermarket Playset with Shopping Trolley - Instruction Manual

Model: 7600350239 | Brand: Smoby

## IMPORTANT SAFETY INFORMATION

---

**WARNING:** Not suitable for children under 3 years of age due to small parts that may present a choking hazard. Adult supervision is required during assembly and play.

Recommended age: 36 months - 6 years.

## PACKAGE CONTENTS

---

Verify that all components are present before beginning assembly.

- 1 Smoby Supermarket Playset structure
- 1 Shopping Trolley
- 4 Food Boxes (cardboard, for assembly)
- 6 Plastic Fruits and Vegetables
- 1 Plastic Tart
- 2 Plastic Macarons
- 2 Plastic Cans
- 1 Electronic Barcode Scanner (requires 2 AAA batteries, not included)
- 1 Credit Card
- 4 Receipts
- 9 Play Coins
- 12 Play Bills
- Additional small accessories as pictured



Figure 1: Included accessories. Please check against this image to ensure all parts are present.

## SETUP AND ASSEMBLY

The Smoby Supermarket playset requires adult assembly. Follow the included graphical instructions carefully.

1. Unpack all components and verify against the package contents list.
2. Assemble the main supermarket structure according to the step-by-step diagrams. Ensure all connections are secure.
3. Assemble the shopping trolley.
4. For the electronic barcode scanner:
  - Locate the battery compartment on the scanner.
  - Using a screwdriver, open the battery compartment cover.
  - Insert 2 AAA batteries (not included), ensuring correct polarity (+/-).
  - Close the battery compartment cover and secure with the screw.
5. Fold and assemble the cardboard food boxes.
6. Place the various accessories (fruits, vegetables, macarons, cans, money) into their designated areas on the supermarket shelves and cash register.



Figure 2: Fully assembled Smoby Supermarket playset.

## OPERATING INSTRUCTIONS

The Smoby Supermarket playset offers various interactive features for an engaging play experience.

### Electronic Barcode Scanner

- Press the button on the scanner to activate light and sound effects, simulating a real barcode scan.
- Use the scanner to "scan" the various play food items.

### Mechanical Scale

- Place play fruits and vegetables onto the scale to observe the mechanical needle movement. This feature is for imaginative play and does not provide accurate weight measurements.

### Cash Register

- The cash register includes a money drawer that can be opened and closed.
- Utilize the play coins and bills for transactions.

- The credit card reader allows for pretend card payments.
- The microphone is for imaginative announcements.

### Adjustable Clock and Open/Close Sign

- The clock hands can be manually adjusted for time-telling practice.
- Flip the sign to indicate whether the supermarket is "Open" or "Closed".



Figure 3: Child engaging with the cash register area.

To ensure the longevity of your Smoby Supermarket playset, follow these simple maintenance guidelines:

- **Cleaning:** Wipe all plastic surfaces with a damp cloth and mild soap. Avoid abrasive cleaners or solvents.
- **Storage:** Store the playset indoors in a dry environment when not in use to prevent damage.
- **Battery Care:** Remove batteries from the electronic barcode scanner if the toy will not be used for an extended period to prevent leakage.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Electronic scanner not working (no light/sound)	Batteries are dead or incorrectly inserted. Battery compartment cover is not securely closed.	Replace with fresh AAA batteries, ensuring correct polarity. Ensure the battery compartment cover is fully closed and screwed tight.
Playset unstable after assembly	Components not fully clicked into place. Missing a connection point.	Review assembly instructions and ensure all parts are securely connected.

## SPECIFICATIONS

Model Number	7600350239
Brand	Smoby
Product Dimensions (L x W x H)	23.62 x 23.62 x 35.28 inches (60 x 60 x 89 cm)
Item Weight	9.9 pounds (4.5 kg)
Manufacturer Recommended Age	36 months - 6 years
Batteries Required	2 x AAA (for electronic scanner, not included)
Material	Durable Plastic

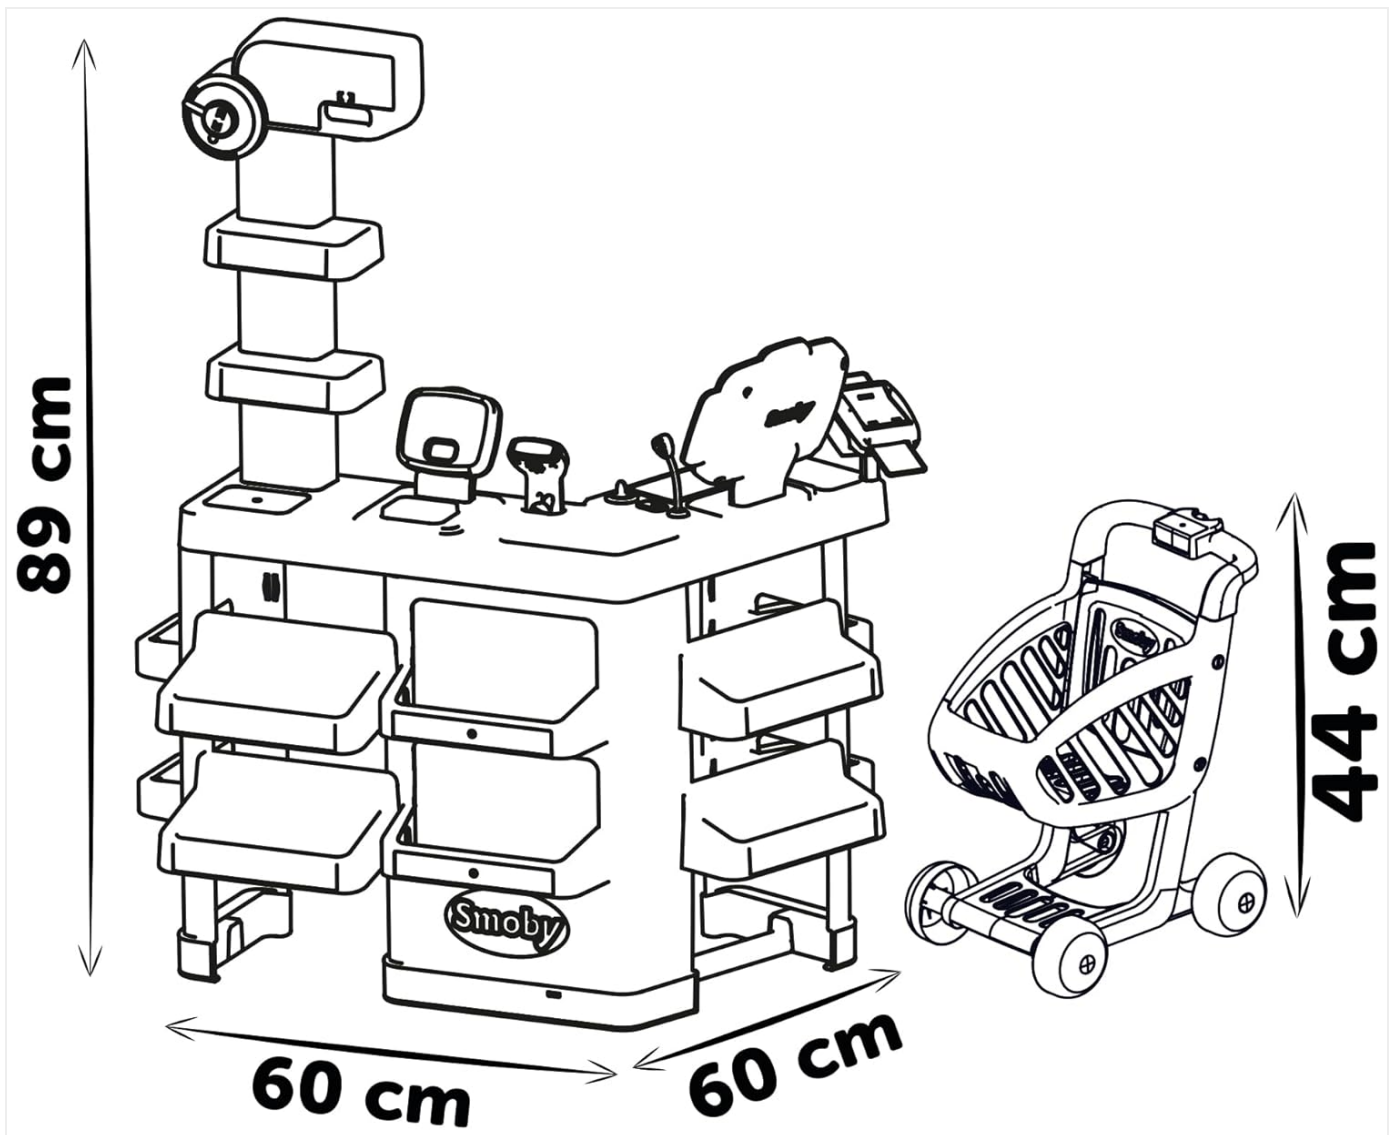


Figure 4: Product dimensions for the supermarket playset and trolley.

## WARRANTY AND SUPPORT

For information regarding warranty coverage or technical support, please refer to the manufacturer's official website or contact their customer service department. Contact details are typically provided on the product packaging or on the manufacturer's website.

**Manufacturer:** SMOBY

