

Sojag 113-9161755

Sojag Eco 4-Seater Garden Swing

User Manual

INTRODUCTION

The Sojag Eco 4-Seater Garden Swing is designed to provide a comfortable and enjoyable outdoor seating experience. This manual provides essential information for the assembly, operation, maintenance, and care of your garden swing to ensure years of enjoyment.

Key features include:

- Protective AkzoNobel's Interpon Powder coating for maximum scratch and corrosion resistance.
- Seats and roof made of durable PVC-coated polyester.
- Equipped with a 5 mm water wave tempered glass top table and a convenient footrest.
- Gliding seats for smooth back and forth movement.
- Rustproof aluminum frame for durability and low maintenance.



Figure 1: The Sojag Eco 4-Seater Garden Swing, showcasing its design and seating capacity in an outdoor environment.

Safety Information

Please read and understand all safety instructions before assembly and use of the garden swing. Failure to follow these instructions may result in injury or damage to the product.

- Ensure all bolts and fasteners are securely tightened before initial use and periodically check for tightness.
- Do not exceed the maximum weight capacity of the swing. This swing is designed for up to 4 individuals.
- Keep children supervised when using the swing.
- Do not stand on the swing or use it for purposes other than intended seating.
- Place the swing on a level, stable surface to prevent tipping.
- In strong winds or severe weather, remove the canopy and secure the swing to prevent damage or injury.
- Avoid placing the swing near open flames or heat sources.

Package Contents

Before beginning assembly, ensure all parts listed below are present. If any parts are missing or damaged, contact customer support.

Item	Description	Quantity
------	-------------	----------

Item	Description	Quantity
A	Main Frame Components	1 set
B	Seating Units (4-seater)	2
C	Canopy Fabric and Frame	1 set
D	Tempered Glass Tabletop	1
E	Hardware Kit (bolts, nuts, washers, tools)	1 set

SETUP AND ASSEMBLY

Assembly of the Sojag Eco 4-Seater Garden Swing requires two adults and approximately 2-3 hours. Follow these general steps. Refer to the detailed assembly diagram (Figure 6) for specific part identification and connection points.

- 1. Unpack and Organize:** Carefully unpack all components and lay them out on a clean, soft surface to prevent scratches. Verify all parts against the package contents list.
- 2. Assemble the Base Frame:** Connect the main base frame components using the provided bolts and nuts. Ensure all connections are snug but do not fully tighten until the entire frame is assembled.



Figure 2: Detail of the swing's robust base structure and floor panels, indicating assembly points.

- 3. Attach Upright Supports:** Secure the vertical support beams to the assembled base frame.
- 4. Install Seating Units:** Attach the two seating units to the main frame. Ensure the gliding mechanism (Figure 3) is correctly aligned and functional.



Figure 3: The wheel mechanism that enables the smooth gliding motion of the seats.

5. **Mount the Tabletop:** Secure the tempered glass tabletop in the center of the swing.



Figure 4: Detail of the 5mm water wave tempered glass tabletop.

6. **Assemble and Attach Canopy:** Assemble the canopy frame and then attach the PVC-coated polyester canopy

fabric. Secure the canopy to the top of the main frame (Figure 5).



Figure 5: The method of attaching the canopy fabric to the swing's frame.

7. **Final Tightening:** Once all components are in place, go back and fully tighten all bolts and fasteners. Do not overtighten.
8. **Placement:** Position the assembled swing on a flat, stable surface in your desired outdoor location.

 **ECO 4 P**

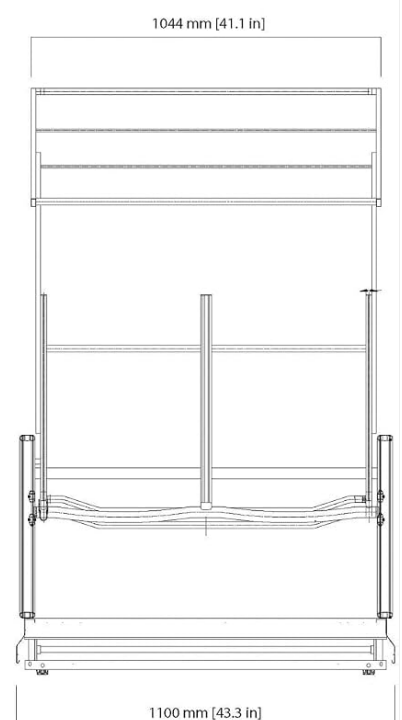
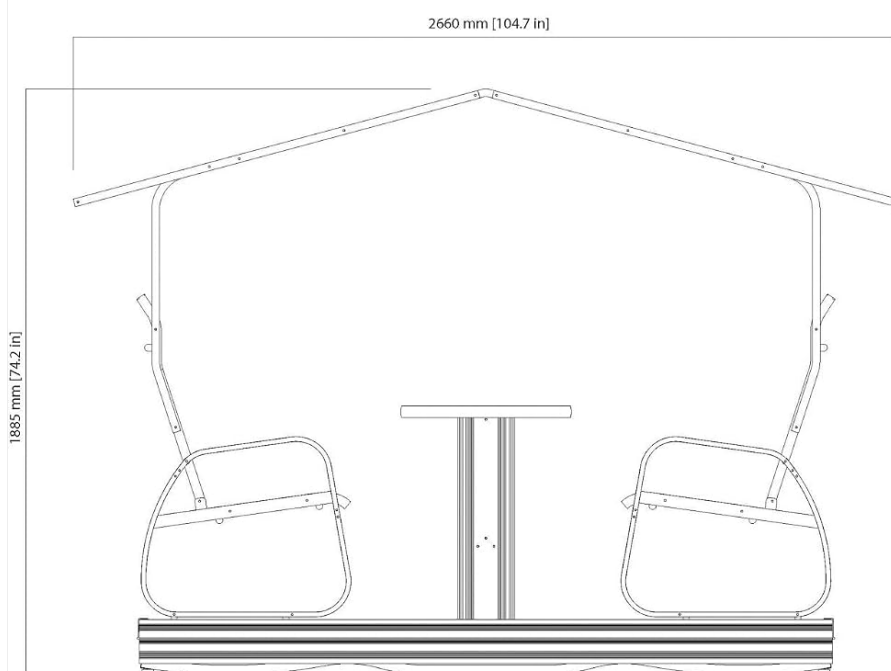


Figure 6: Technical drawing with overall dimensions of the Sojag Eco 4-Seater Garden Swing.

OPERATING INSTRUCTIONS

The Sojag Eco 4-Seater Garden Swing is designed for simple and comfortable use.

- **Seating:** The swing accommodates up to four individuals. Ensure weight is distributed evenly.
- **Gliding Motion:** The seats are designed to glide smoothly back and forth. Gently push off with your feet to initiate the swinging motion. Avoid excessive force or sudden movements.
- **Table and Footrest:** Utilize the central tempered glass table for beverages or small items. The integrated footrest provides additional comfort.

MAINTENANCE

Regular maintenance will extend the life and appearance of your garden swing.

- **Cleaning:** Clean the aluminum frame and PVC-coated polyester fabric with mild soap and water. Rinse thoroughly with clean water and allow to air dry. Avoid harsh chemicals or abrasive cleaners.
- **Frame Care:** The aluminum frame is rustproof and features an AkzoNobel's Interpon Powder coating for enhanced durability. Periodically inspect the frame for any signs of wear or damage.
- **Fastener Check:** Regularly check all bolts and fasteners to ensure they remain tight. Retighten as necessary to maintain stability and safety.
- **Winter Storage:** For winter storage, it is recommended to remove the roof canopy to protect it from heavy snow and ice accumulation. Store the canopy in a dry, protected area. If possible, store the entire swing indoors or cover it with a weather-resistant cover during the off-season.

TROUBLESHOOTING

This section addresses common issues you might encounter with your garden swing.

- **Squeaking Noise:** If the gliding mechanism or frame joints produce squeaking noises, apply a silicone-based lubricant to the moving parts and connection points.
- **Instability/Wobbling:** Ensure the swing is placed on a completely level surface. Check all assembly bolts and fasteners to confirm they are securely tightened.
- **Canopy Sagging:** Verify that the canopy frame is correctly assembled and attached. Ensure the fabric is taut and properly secured to the frame.

SPECIFICATIONS

Attribute	Detail
Brand	Sojag
Model Number	113-9161755
UPC	772830161755
Product Dimensions (L x W x H)	264.92 x 104.39 x 189.48 cm (104.3 x 41.1 x 74.6 inches)
Item Weight	91 kg (200.6 lbs)

Attribute	Detail
Material	Aluminum (frame), Polyester (seats/roof), Polyvinyl Chloride (seats/roof coating)
Frame Material	Aluminum
Finish Type	Powder Coated (AkzoNobel's Interpon)
Maximum Number of Compatible Seats	4
Assembly Required	Yes

WARRANTY AND SUPPORT

Sojag products are manufactured to high-quality standards. Specific warranty details are typically provided with your purchase documentation. Please retain your proof of purchase for warranty claims.

For technical support, missing parts, or warranty inquiries, please contact Sojag customer service. Contact information can usually be found on the product packaging or the official Sojag website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

