

[Manuals.plus](#) /

› [Smoby](#) /

› Smoby 48 Magnetic Letters Instruction Manual

Smoby 430107

Smoby 48 Magnetic Letters Instruction Manual

Model: 430107

INTRODUCTION

The Smoby 48 Magnetic Letters set is an educational toy designed to help children aged 3 and up learn the alphabet and form words. This set includes 48 uppercase plastic letters in red and green colors, along with magnets for attachment. The letters are compatible with any magnetic surface, providing a versatile tool for early learning.


SAFETY INFORMATION

- **Recommended Age:** This product is suitable for children aged 3 years and older.
- **Small Parts Warning:** The set contains small magnets. Adult supervision is recommended, especially during the initial setup phase where magnets are attached to the letters. Keep magnets away from very young children to prevent choking hazards.
- **Material Safety:** The letters are made from plastic. Ensure children do not put the letters or magnets in their mouths.

PACKAGE CONTENTS

The Smoby 48 Magnetic Letters set includes the following components:

- 24 uppercase magnetic letters (red)
- 24 uppercase magnetic letters (green)
- 50 individual magnets for assembly

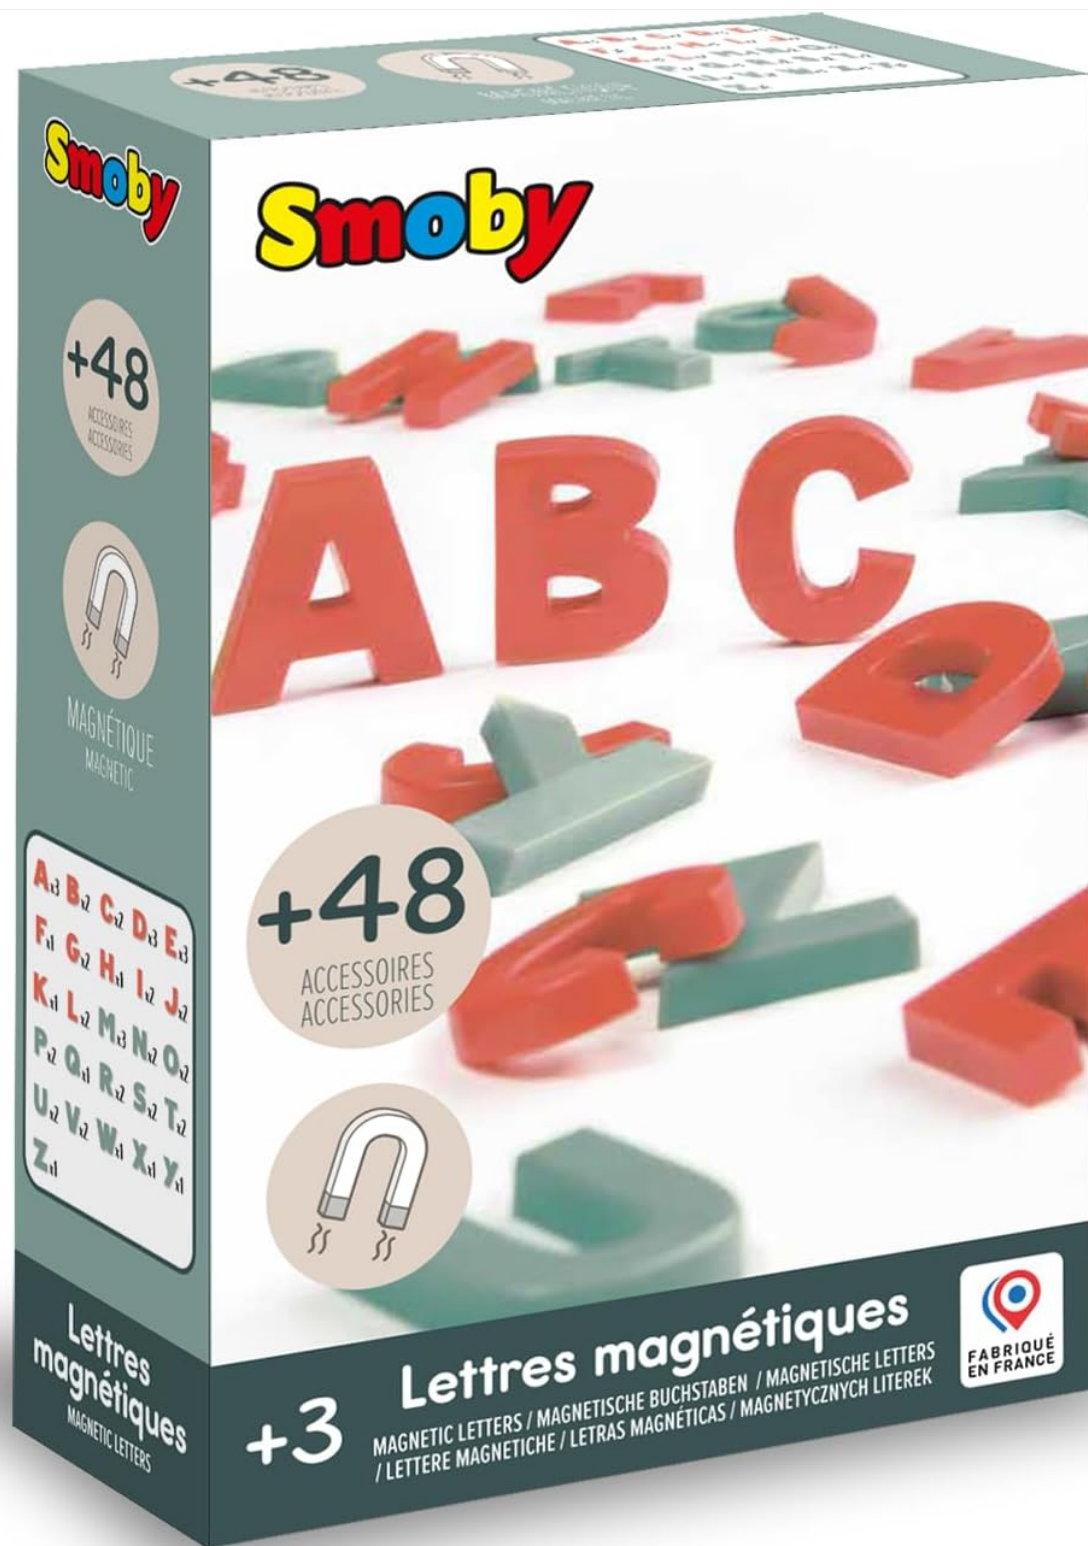

The product packaging for the Smoby 48 Magnetic Letters set, showing the letters and accessories included.



An illustration detailing the quantity of each letter of the alphabet included in the set, for example, 'A x3', 'B x2', etc.

SETUP

Before first use, the magnets must be attached to the letters. Follow these steps for proper assembly:


1. Carefully remove all 48 plastic letters and 50 individual magnets from their packaging.
2. Identify the designated area on the back of each letter where a magnet should be placed. These areas are typically recessed or marked.
3. Peel the protective backing from one side of an individual magnet to expose the adhesive.
4. Firmly press the adhesive side of the magnet onto the designated area on the back of a letter. Ensure the magnet is centered and securely attached.

5. Repeat this process for all 48 letters. You will have a few spare magnets.
6. Allow the adhesive to set for a few minutes before use to ensure maximum adhesion.

OPERATING INSTRUCTIONS

Once the magnets are attached, the letters are ready for use on any magnetic surface, such as a whiteboard, refrigerator, or magnetic easel.

- **Alphabet Recognition:** Encourage children to identify individual letters by name and sound.
- **Word Formation:** Guide children in arranging letters to form simple words. Start with two or three-letter words and gradually progress to longer words.
- **Spelling Practice:** Use the letters to practice spelling words. Call out a word and have the child spell it out using the magnetic letters.
- **Creative Play:** Allow children to freely explore and create their own words, sentences, or patterns on the magnetic surface.

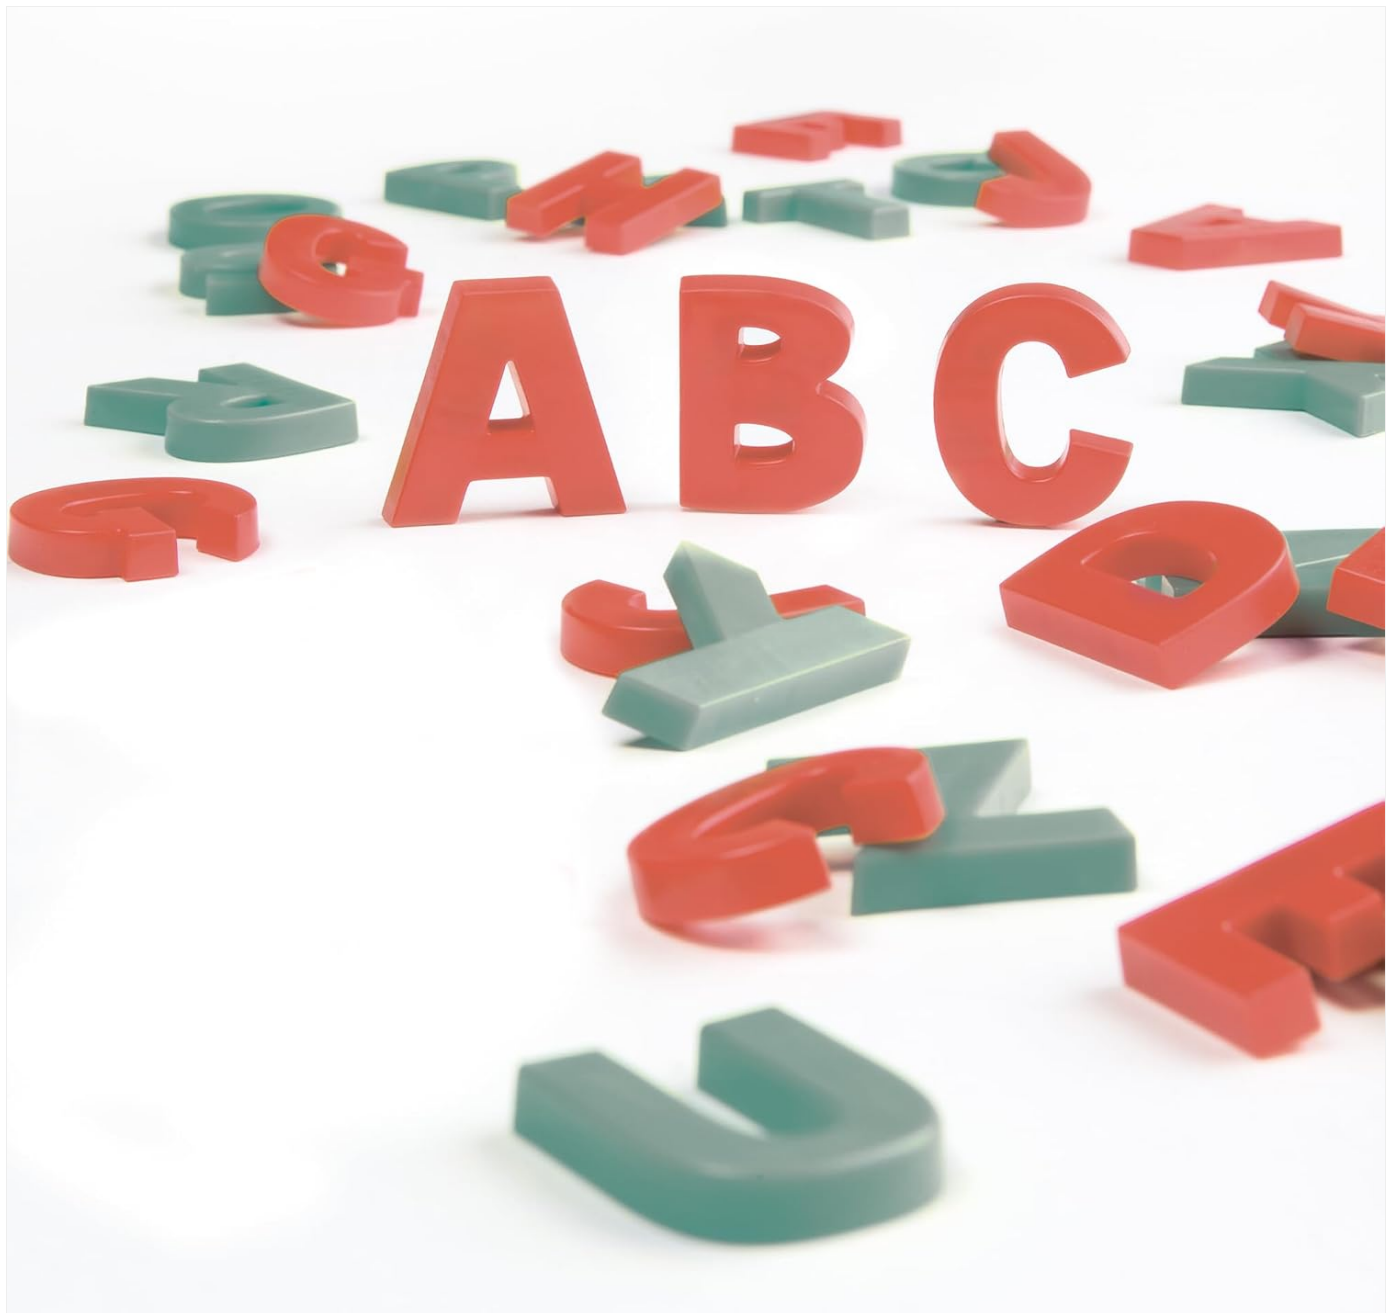

A close-up view of several red and green magnetic letters, including 'A', 'B', and 'C', arranged on a white background.



A young girl placing magnetic letters on a white magnetic board, demonstrating the product in use.

MAINTENANCE


- **Cleaning:** Wipe the letters with a damp cloth and mild soap if necessary. Avoid harsh chemicals or abrasive cleaners. Ensure letters are completely dry before storing.
- **Storage:** Store the letters in a dry place, away from direct sunlight and extreme temperatures. Keeping them in their original packaging or a designated container will help prevent loss and damage.
- **Magnet Care:** Avoid bending or forcefully removing the magnets from surfaces, as this can weaken their adhesion or damage the letters.

TROUBLESHOOTING

- **Letters not adhering well to magnetic surfaces:**
 - Ensure the magnets were securely attached to the letters during setup. Re-press any loose magnets.
 - Verify that the surface you are using is genuinely magnetic. Some surfaces may appear metallic but lack magnetic properties.
 - Check if there is any dirt or debris on the magnet or the magnetic surface that might be hindering adhesion. Clean both surfaces if necessary.
- **Magnets detaching from letters:**
 - If a magnet detaches, reattach it using a strong, non-toxic adhesive suitable for plastic and magnets. Allow sufficient drying time.

SPECIFICATIONS

Brand	Smoby
Model Number	430107
Material	Plastic
Color	Multicolor (Red, Green)
Number of Pieces	98 (48 letters + 50 magnets)
Item Weight	126 Grams
Country of Origin	France

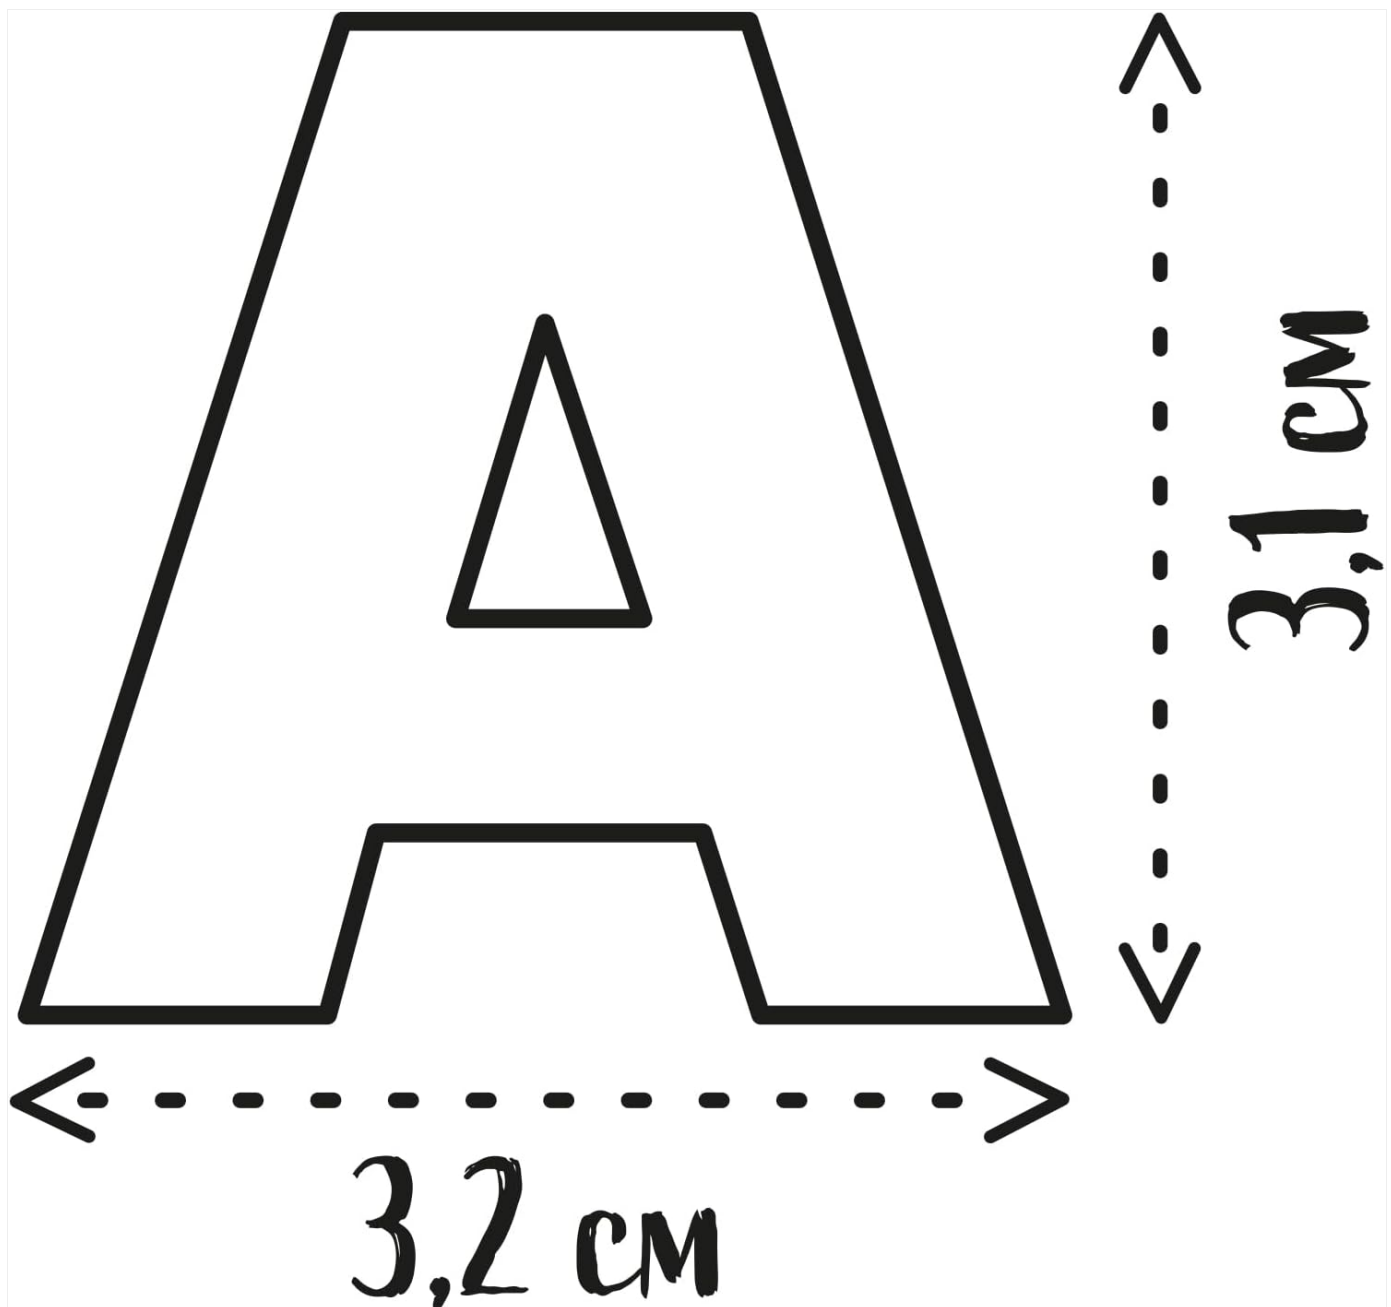

A diagram showing the approximate dimensions of a single magnetic letter, indicating a height of 3.1 cm and a width of 3.2 cm.

WARRANTY

Specific warranty information for the Smoby 48 Magnetic Letters is not provided in the product details. Please refer to the retailer's return policy or contact Smoby customer service for details regarding potential warranties or guarantees.

SUPPORT

For further assistance or inquiries regarding your Smoby 48 Magnetic Letters, please visit the official Smoby website or contact their customer support. You can often find contact information on the product packaging or the brand's official online presence. Smoby Official Website: [Visit Smoby Store on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0C7WJYS4R>

More documents and user manuals: **<https://manuals.plus/>**