

KidKraft P280192E

KidKraft Barbie Seaside Playhouse Instruction Manual

Model: P280192E

Brand: KidKraft

INTRODUCTION

This instruction manual provides essential information for the safe assembly, operation, and maintenance of your KidKraft Barbie Seaside Playhouse. Please read all instructions carefully before beginning assembly and retain this manual for future reference.

SAFETY INFORMATION

WARNING:

- Not suitable for children under 3 years.
- Adult supervision is required at all times during play.
- Ensure the playhouse is assembled on a level surface.
- Regularly inspect the playhouse for loose parts, damage, or wear.
- Keep children away from the assembly area until construction is complete.

SETUP AND ASSEMBLY

Assembly is required for the KidKraft Barbie Seaside Playhouse. The product features EZ Kraft Assembly for a quicker setup process. Follow the detailed assembly instructions provided in the separate assembly guide included with your product packaging.

Recommended Tools: A Phillips head screwdriver and a hammer are typically required for assembly (not included). Ensure all components are present before starting assembly. Refer to the parts list in your assembly guide to verify.



Image: Overall dimensions of the Barbie Seaside Playhouse. The playhouse measures approximately 157.5 cm (5 ft 2.04 in) in width, 116.8 cm (3 ft 9.96 in) in depth, and 134.6 cm (4 ft 5.04 in) in height.

OPERATING INSTRUCTIONS (PLAY FEATURES)

The Barbie Seaside Playhouse offers multiple play areas designed for imaginative outdoor play for up to 6 children aged 3 to 10 years.

Play Kitchen Area

The integrated play kitchen includes a sink, faucet, and a burner with flame-inspired graphics. It comes with a pot, pan, and a pink spatula for cooking role-play. A service counter with a striped fabric awning allows for serving imaginary meals.



©2022 Mattel

Image: Detail of the play kitchen featuring a sink, faucet, and stove burner with realistic flame graphics.



Image: A child demonstrating how to hang the included pot, pan, and spatula on the hooks above the play kitchen counter.

Seaside Play Area

The playhouse features colorful walls with palm tree and beach scenes, enhancing the seaside theme. A double-sided island backdrop allows for imaginative beach scenarios from sunrise to sunset. A versatile open-framed floor area can be used as a sandbox (sand not included), a garden, or a patio. Two doll-sized lounge chairs are included for doll play.



Image: Children engaging in imaginative play with dolls in the designated sandbox area of the playhouse, with an adult present.

Dining and Access

A movable, doll-sized picnic table can be attached to the sides of the playhouse, providing an additional dining area for dolls. The half-door is designed with a magnetic latch for secure closure and easy access, featuring the classic Barbie silhouette.



Image: A child interacting with a Barbie doll at the attachable doll-sized picnic table, demonstrating its use.

MAINTENANCE

To ensure the longevity and safety of your KidKraft Barbie Seaside Playhouse, regular maintenance is recommended:

- **Cleaning:** Wipe down surfaces with a damp cloth and mild soap as needed. Avoid harsh chemicals.
- **Inspection:** Periodically check all screws, bolts, and connections to ensure they are tight. Tighten any loose fasteners.
- **Wood Care:** As this is a wooden product designed for outdoor use, consider applying a non-toxic, child-safe wood sealant annually to protect against weathering and prolong its life.
- **Winter Storage:** If possible, store the playhouse indoors or cover it during harsh winter months to prevent damage.

TROUBLESHOOTING

If you encounter any issues with your playhouse, refer to the following common solutions:

- **Loose Parts:** If any parts feel loose, re-tighten screws or bolts according to the assembly instructions.
- **Warping Wood:** Minor warping can occur with natural wood products due to weather changes. Ensure proper sealing and maintenance as described above. If warping affects structural integrity, contact customer support.
- **Missing Components:** If you find any components missing during assembly, contact KidKraft customer support immediately.

SPECIFICATIONS

Feature	Detail
Model Number	P280192E
Brand	KidKraft
Theme	Barbie
Material	Wood
Product Dimensions (D x W x H)	116.8 cm x 157.5 cm x 134.6 cm (46 in x 62 in x 53 in)
Item Weight	36 Kilograms (79.37 lbs)
Recommended Age	3+ years (Manufacturer recommended minimum age: 36 months, maximum age: 120 months)
Number of Windows	2
Assembly Required	Yes
Country of Origin	China
UPC	870279000502

WHAT'S IN THE BOX

The KidKraft Barbie Seaside Playhouse package includes:

- Wooden outdoor playhouse components
- Attachable doll-sized table
- Doll-sized chairs (2)
- Play kitchen accessories (pot, pan, spatula)
- Assembly hardware and instructions

WARRANTY AND SUPPORT

Manufacturer's Warranty: This product comes with a limited 90-day manufacturer's warranty. For warranty claims, missing parts, or any other support inquiries, please contact KidKraft customer service. Contact information can typically be found on the KidKraft official website or on the product packaging.

Online Support: Visit the official KidKraft website for FAQs, assembly videos, and additional support resources.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question