

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Braun](#) /
- › [Braun Series 7 BT7441 Professional Beard Trimmer User Manual](#)

## Braun BT7441

# Braun Series 7 BT7441 Professional Beard Trimmer User Manual

Model: BT7441

## 1. INTRODUCTION

---

Thank you for choosing the Braun Series 7 BT7441 Professional Beard Trimmer. This manual provides essential information for the safe and effective use of your new grooming device. Please read these instructions carefully before first use and keep them for future reference.

### Package Contents:

- 1 x Braun Series 7 BT7441 Beard Trimmer with Pro Trimmer Head
- 1 x Detail Trimmer Head
- 1 x Precision Comb (0.5–10 mm)
- 1 x Precision Comb (10.5–20 mm)
- 1 x Beard Comb for Fading
- 1 x Gillette ProGlide Razor
- 1 x Gillette ProGlide Replacement Blade
- 1 x Charging Stand
- 1 x Beard Stencil
- 1 x Cleaning Brush
- 1 x Travel Case



Image 1.1: Braun Series 7 BT7441 Professional Beard Trimmer with all included accessories, neatly arranged next to its FSC-certified packaging.

## 2. IMPORTANT SAFETY INFORMATION

To reduce the risk of electric shock, injury, or damage to the appliance, please observe the following safety precautions:

- **Water Warning:** Do not use this appliance near bathtubs, showers, basins, or other vessels containing water.
- **Cleaning:** Always clean the appliance with the provided cleaning brush. Do not immerse the charging stand in water.
- **Children:** This appliance is not intended for use by children or persons with reduced physical, sensory, or mental capabilities, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- **Damage:** Do not use the appliance if it is damaged. Check the appliance, cord, and plug for any damage before each use.
- **Power Supply:** Only use the power supply provided with the appliance.

- **Modifications:** Do not attempt to modify or repair the appliance yourself. Contact authorized service personnel for repairs.

Further safety instructions can be found in the full user manual (if applicable, refer to the manufacturer's website).

### 3. SETUP AND INITIAL CHARGING

1. **Unpack:** Carefully remove all components from the packaging.
2. **Initial Charge:** Before the first use, fully charge the trimmer. Connect the charging stand to a power outlet and place the trimmer on the stand. The charging indicator light will show the charging status. A full charge provides approximately 100 minutes of cordless trimming.
3. **Attachment Selection:** Choose the appropriate trimmer head (Pro Trimmer or Detail Trimmer) and comb attachment based on your desired style and length. Ensure attachments are securely clicked into place.



Image 3.1: The environmentally friendly, FSC-certified cardboard packaging of the Braun Series 7 BT7441.

## 4. OPERATING INSTRUCTIONS

---

The Braun Series 7 BT7441 is designed for precise beard trimming and styling. Follow these steps for optimal results:

1. **Prepare Your Beard:** Ensure your beard is clean and dry or slightly damp, depending on your preference.
2. **Select Length Setting:** Use the precision wheel (ProWheel) to select one of the 40 length settings in 0.5 mm increments. The dial is located on the trimmer body.
3. **Power On:** Press the power button to turn on the trimmer.
4. **Trimming:**
  - For even trimming, move the trimmer against the direction of hair growth.
  - Maintain consistent pressure and speed for uniform results.
  - The AutoSense technology adapts to your beard density for an even trim.
5. **Detailing and Fading:**
  - Use the detail trimmer head for precise lines and edges.
  - Attach the beard comb for transitions to create smooth fades.
  - The included Gillette ProGlide razor can be used for a clean shave on areas not being trimmed.
6. **Power Off:** Press the power button again to turn off the trimmer after use.



Image 4.1: A user demonstrating the Braun Series 7 BT7441 in action, achieving a precise beard trim.



Image 4.2: Illustrates the trimmer's ability to create both precise lines and smooth fades for a professional look.



# Contrôle total



Image 4.3: Detailed view of the precision wheel, allowing selection of 40 length settings in 0.5 mm increments for total control.

# Lame en métal affûtée durablement.



Image 4.4: A close-up of the durable, sharp ProBlade, designed for efficient and precise cutting of all beard types.

## 5. CLEANING AND MAINTENANCE

---

Regular cleaning ensures optimal performance and extends the life of your trimmer.

1. **Rinse Under Water:** The trimmer is 100% waterproof. After each use, detach the trimmer head and rinse it, along with the comb attachments, under running tap water.
2. **Brush Cleaning:** Use the provided cleaning brush to remove any stubborn hair clippings from the trimmer head and body.
3. **Drying:** Allow all parts to air dry completely before reassembling or storing.
4. **Storage:** Store the appliance and its accessories in the travel case when not in use to protect them from damage.

## 6. TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is depleted.	Charge the trimmer fully.
Poor trimming performance.	Blades are dull or clogged with hair.	Clean the trimmer head and blades thoroughly. Consider replacing the blade if dullness persists (check manufacturer for replacement parts).
Trimmer makes unusual noise.	Hair caught in the mechanism or damaged part.	Clean the trimmer thoroughly. If the noise persists, discontinue use and contact customer service.

If you encounter issues not listed here, please refer to the full user manual or contact Braun customer support.

## 7. TECHNICAL SPECIFICATIONS

**Model:** BT7441

**Brand:** Braun

**Power Source:** Battery-powered

**Battery Type:** Lithium-ion (1 AA battery included)

**Battery Life:** Approximately 100 minutes (fully charged)

**Blade Material:** Stainless Steel

**Length Settings:** 40 precision settings (0.5 mm increments)

**Waterproof:** 100% waterproof

**Dimensions (L x W x H):** 18.5 x 26 x 8.2 cm (packaging dimensions)

**Item Weight:** 493.2 Grams

**Country of Origin:** China

**Manufacturer:** Procter & Gamble

## 8. WARRANTY AND SUPPORT

Braun products are manufactured to meet high quality standards. In the unlikely event that you experience a problem with your appliance, please refer to the warranty information provided in the original packaging or visit the official Braun website for details on warranty coverage and customer support.

For service, replacement parts, or additional information, please contact Braun Customer Service or an authorized Braun service center. Do not attempt to repair the appliance yourself.

**Online Resources:** For the most up-to-date information, FAQs, and product registration, please visit the official [Braun website](#).

## 9. PRODUCT VIDEOS

No official product videos were provided in the product data for embedding in this manual.

