

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [BLACK+DECKER](#) /
- › [BLACK+DECKER™ Natural Convection 4-Slice Toaster Oven Instruction Manual](#)

## BLACK+DECKER TO1475SSD

# BLACK+DECKER™ Natural Convection 4-Slice Toaster Oven

### INSTRUCTION MANUAL

## Product Overview

The BLACK+DECKER™ Natural Convection 4-Slice Toaster Oven is designed for efficient and even heating, utilizing thermodynamic principles to circulate airflow. This compact countertop appliance offers versatile cooking functions for everyday use.



Front view of the BLACK+DECKER Natural Convection 4-Slice Toaster Oven, showcasing its stainless steel finish and control knobs.

## Key Features:

- **Natural Convection:** Engineered for more even cooking by precisely managing airflow.
- **Four Cooking Functions:** Offers Bake, Broil, Toast, and Keep Warm settings for diverse culinary needs.
- **Large Interior:** Accommodates up to a 9-inch pizza or four slices of bread.
- **30-Minute Timer:** Features a precise timer with a convenient stay-on function for extended cooking.
- **Included Accessories:** Comes with a broil rack and bake pan designed to fit perfectly within the oven.

## Setup

1. **Unpack:** Carefully remove all packaging materials, including any internal packing or protective films.
2. **Clean:** Before first use, wipe down the interior and exterior of the toaster oven with a damp cloth. Wash the included broil rack and bake pan with warm, soapy water. Ensure all parts are completely dry before use.
3. **Placement:** Place the toaster oven on a stable, heat-resistant, and level surface. Ensure there is adequate clearance (at least 6 inches) on all sides and above the appliance for proper ventilation. Do not place it near flammable materials.
4. **Power Connection:** Plug the power cord into a standard 120V AC electrical outlet.



**Includes**

Broil rack, bake pan and crumb tray

The included broil rack and bake pan, essential accessories for various cooking functions.

## Operating Instructions

The BLACK+DECKER™ Toaster Oven features three control knobs for temperature, function, and timer/toast shade.



Detailed view of the control knobs for temperature, function, and timer/toast settings.

1. **Temperature Control:** Rotate the top knob to select the desired temperature, ranging from Warm to 450°F.
2. **Function Selection:** Use the middle knob to choose one of the four cooking functions:
  - **Toast:** Ideal for bread, bagels, and frozen waffles.
  - **Bake:** For baking items like cookies, casseroles, or reheating leftovers.
  - **Broil:** Perfect for browning, melting cheese, or cooking thin cuts of meat.
  - **Keep Warm:** Maintains food at a serving temperature without further cooking.
3. **Timer/Toast Shade:** The bottom knob controls the cooking time or toast shade.
  - For timed cooking (Bake, Broil, Keep Warm), rotate the knob clockwise to set the desired time up to 30 minutes. The oven will turn off automatically when the timer expires.
  - For Toast function, rotate the knob past the 10-minute mark, then back to the desired toast shade setting.
  - The 'Stay On' setting allows for continuous operation, ideal for longer baking tasks.
4. **Preheating:** For best results, especially when baking, preheat the oven for 5-10 minutes at the desired temperature before placing food inside.

5. **Food Placement:** Use the included bake pan or broil rack as appropriate for your food. The oven's spacious interior can fit a 9-inch pizza or four slices of bread.



**Natural Convection**

For more even cooking\*

\*vs prior BLACK + DECKER toaster ovens without natural convection

The toaster oven can comfortably toast four slices of bread simultaneously.

## Maintenance and Cleaning

Regular cleaning ensures optimal performance and extends the life of your toaster oven. Always unplug the appliance and allow it to cool completely before cleaning.

- **Crumb Tray:** The removable crumb tray (located at the bottom front) should be emptied frequently to prevent crumb buildup. Pull it out, discard crumbs, and wash with warm, soapy water. Rinse and dry thoroughly before reinserting.
- **Bake Pan and Broil Rack:** Wash these accessories with warm, soapy water after each use. For stubborn food residue, soak them before cleaning.

- **Interior:** Wipe the interior walls with a damp cloth and mild detergent. Avoid abrasive cleaners or scouring pads that could damage the non-stick coating (if applicable).
- **Exterior:** Clean the exterior with a soft, damp cloth. For stainless steel surfaces, use a stainless steel cleaner for best results.
- **Heating Elements:** Do not attempt to clean the heating elements. Any food residue on them will burn off during operation.



The removable crumb tray simplifies cleanup, making maintenance quick and easy.

## Troubleshooting

If you encounter issues with your toaster oven, please refer to the following common troubleshooting steps:

- **Appliance Not Turning On:** Ensure the power cord is securely plugged into a working electrical outlet. Check your household circuit breaker.

- **Food Not Cooking Evenly:** Ensure the oven is preheated properly. Distribute food evenly on the rack/pan. Natural convection helps, but overcrowding can affect results.
- **Timer Not Working:** For timed functions, ensure the timer knob is rotated past the 10-minute mark before setting the desired time. For toast, ensure it's set to a specific shade.
- **Excessive Smoke:** This may be due to food residue or grease buildup. Refer to the Maintenance section for cleaning instructions. If smoke persists, unplug the unit immediately.

For issues not resolved by these steps, please contact customer support.

## Specifications

Attribute	Detail
Brand	BLACK+DECKER
Model Name	Toaster Oven
Item Model Number	TO1475SSD
ASIN	B0C7WM2LQL
Color	Stainless Steel
Product Dimensions	9.7"D x 15.5"W x 8.25"H
Item Weight	7.81 pounds
Special Feature	Timer
Control Type	Knob
Door Style	Dropdown Door
Included Components	Broil Rack, Bake Pan
Door Material Type	Stainless Steel
Power Source	electric
Temperature Range	450 Degrees Fahrenheit
Size	4-Slice
UPC	050875002418
Manufacturer	BLACK+DECKER
Date First Available	December 16, 2023

## Warranty and Support

For product support, warranty information, or to purchase protection plans, please refer to the manufacturer's official resources.

- **Manufacturer:** BLACK+DECKER
- **Protection Plans:** Available for purchase to extend coverage beyond the standard warranty. Options include 3-Year and 4-Year plans, as well as a monthly Complete Protect plan.
- **Return Policy:** This product typically has a 30-day refund/replacement return policy from the point of purchase.
- **Online Support:** Visit the official BLACK+DECKER website for FAQs, troubleshooting guides, and contact information.