

## Desky Desky Single Sit Stand Desk

# Desky Single Sit Stand Desk Instruction Manual

Model: 7964320923970

## 1. INTRODUCTION AND OVERVIEW

This manual provides comprehensive instructions for the assembly, operation, and maintenance of your Desky Single Sit Stand Desk. Designed for ergonomic well-being, this electric standing desk allows for seamless height adjustments to promote healthy work habits.

Key features include a smooth and quiet motor, three programmable height presets, and a robust frame capable of supporting significant weight.



*Image 1: The Desk Single Sit Stand Desk, showcasing its adjustable height design with a monitor and laptop setup.*

## 2. IMPORTANT SAFETY INFORMATION

---

- **Weight Limit:** Exceeding the maximum weight recommendation of 176.4 lbs (80 kg) may compromise the stability and longevity of the desk.
- Ensure all connections are secure before operation.
- Keep children and pets away from the desk during height adjustments.
- Avoid placing liquids directly on the control panel or motor components.

## 3. PACKAGE CONTENTS

---

Before beginning assembly, ensure all components listed below are present and undamaged:

- Desk Top
- Desk Frame (includes crossbars and side brackets)
- Motorized Electric Desk Legs (2)
- Desk Hand Controller
- Power Box
- GPO Wall Plug

- Connecting Cords
- Sync Rod
- Hardware (screws, hex key)
- Sticky Cable Ties


## 4. SETUP AND ASSEMBLY

The Desky Single Sit Stand Desk is designed for easy, tool-free installation. For a visual guide, please refer to the official assembly video below. It is recommended to assemble the desk in the location where it will be used to avoid unnecessary movement.

*Video 1: Official Desky Single Sit Stand Desk Assembly Guide. This video demonstrates the step-by-step process of putting together your desk, from unboxing to final power-up.*

### 4.1. Prepare Your Workspace

Clear an open, clean, and dry area for assembly. It is advisable to keep the desktop box unopened until the frame is assembled to protect the surface.

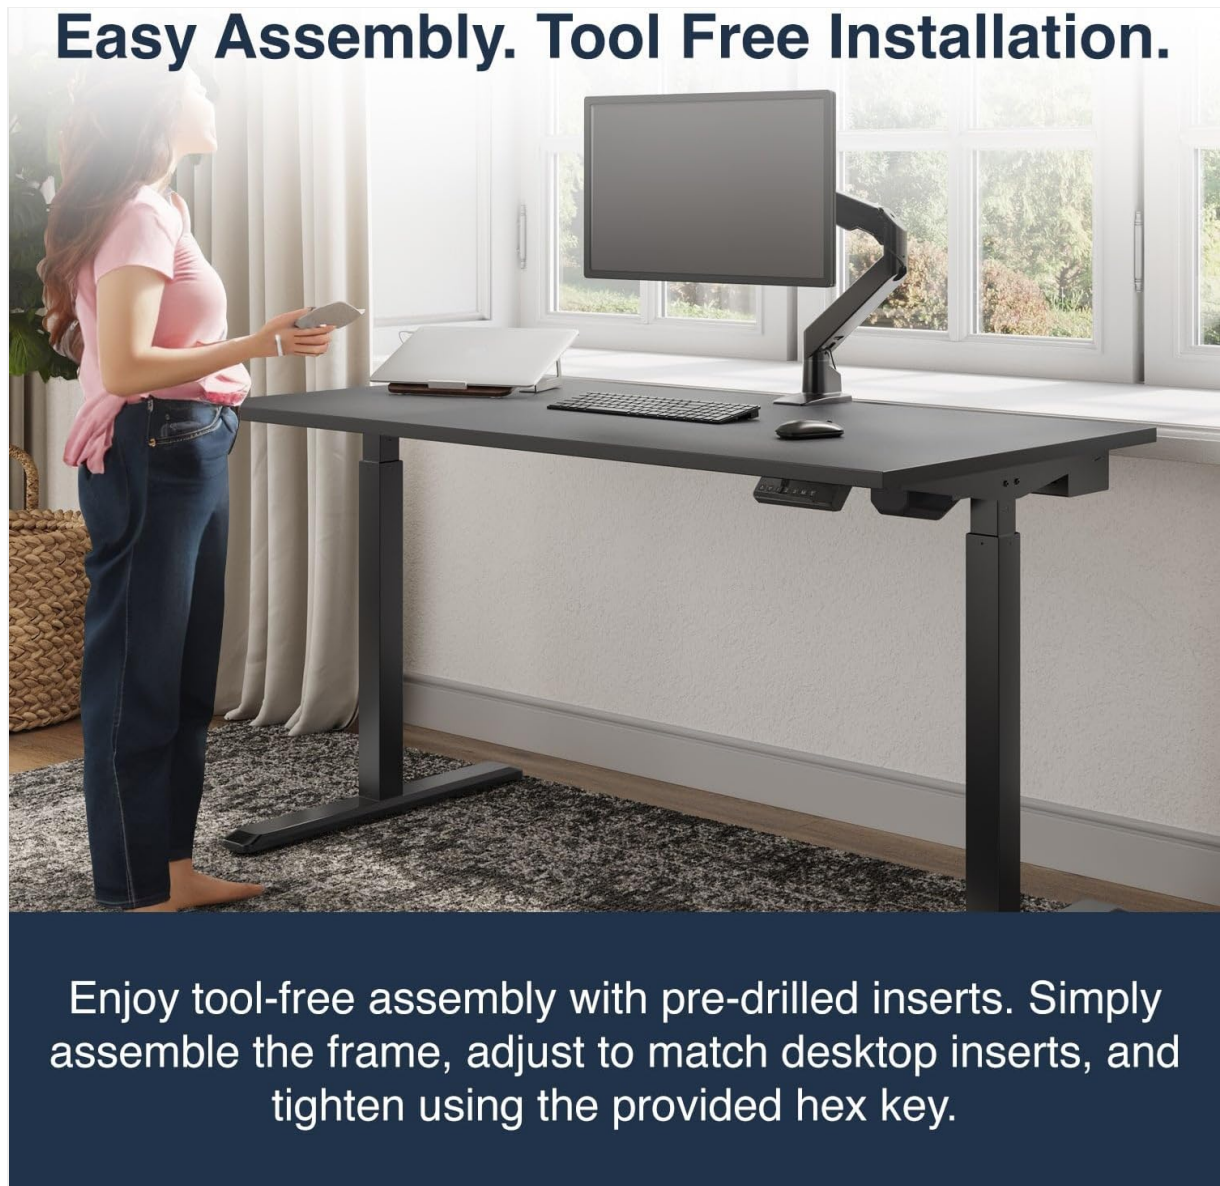

*Image 2: The desk frame assembled, highlighting the ease of setup with pre-drilled inserts.*

## 4.2. Assemble the Frame

1. **Crossbar Adjustment:** Loosen the grub screws on the crossbar ends using the provided hex key. Slide the crossbar ends apart to the desired width, then retighten the grub screws to secure them.
2. **Attach Legs:**
  - Position the leg with the lifting motor facing inward and the cord away from the frame. Match the two widely spaced holes on the crossbar with the bumps on the leg.
  - Press the leg firmly against the crossbar until flush. Insert and tighten two screws through the crossbar into the leg using the hex key.
  - Repeat for the opposite leg, ensuring the single hole for the sync rod faces inward. Match the four bumps on the leg with the holes on the crossbar, press firmly, and secure with two screws.
3. **Attach Side Brackets:** Attach the side brackets to the back of each leg. Ensure the cable management channel hole faces the opposite side to the motor. Position the bracket flush against the leg, aligning holes and bumps. Insert and tighten two screws to secure. Repeat for the other side.
4. **Position Desktop:** Carefully place the desktop with its bottom side facing up. Position the assembled frame onto the desktop, ensuring the gearbox faces the front. The front of the desktop is identified by small pre-drilled holes on either side of the edge.
5. **Adjust Frame Width:** Slightly loosen the grub screws on the crossbar ends. Adjust the frame width to align the six pre-drilled holes on the desktop with those on the side brackets and center crossbar. Retighten the grub screws.
6. **Attach Feet:** With the pads facing up, position each foot on top of its respective leg, aligning all four holes. Insert and slightly hand-tighten four screws into the leg. Then, tighten them firmly in a criss-cross pattern to ensure the feet are level. Repeat for the other foot.
7. **Install Cable Management Tray (Optional):** Align the mounting holes on the hangers with the screw holes on the inside of the cable management tray. Hold the hanger in place, flip the tray over, and insert two screws through the bottom of the tray to attach the hanger securely. Repeat for the opposite hanger.
8. **Attach Cable Management Tray to Frame:** From the back of the desk, with the tray facing upside down and hangers pointing away, gently lift the frame and slide the cable management tray into place. Position it either in the middle or close to the motor end, ensuring it faces away from the motor side. Tighten the screws on the tray hangers to secure it to the frame.
9. **Secure Frame to Desktop:** Ensure all holes on the frame align with the holes on the desktop. Insert and tighten all six screws (two in the middle of the frame, two on each side bracket) into the pre-drilled holes to firmly fix the desktop and frame together.
10. **Insert Sync Rod:** Insert the sync rod into the leg without the motor. Unscrew the nut to loosen the rod and extend it to meet the opposite leg. Match the hex-shaped rod with the hex-shaped opening in the leg (you may need to rotate it to fit). Press it in to secure. Undo the nut on the opposite end of the sync rod to extend it and position it onto the gearbox shaft. Tighten the middle nut on the sync rod to secure its length, then return to tighten the nut at the end of the rod inside the motor.
11. **Attach Control Panel:** Line up the pre-drilled holes on the desktop with those of the controller. Use two screws to secure the controller in place. It is recommended to leave them slightly loose until the desk is upright for final alignment.
12. **Flip the Desk:** Carefully flip the desk over. This can be done by one person in stages, ensuring not to lean on the edge with the control panel. Alternatively, seek assistance for this step.
13. **Connect Power:** Connect the cables from the control panel to the control box, ensuring a tight connection. Then connect the motor to the control panel. Connect the control box to the power lead and plug it into a wall outlet.

## 5. OPERATING INSTRUCTIONS

Your Desky Single Sit Stand Desk features an intuitive control panel for easy height adjustment and memory presets.

### 5.1. Basic Height Adjustment

- Use the **Up Arrow (▲)** button to raise the desk.
- Use the **Down Arrow (▼)** button to lower the desk.
- The desk moves at approximately 1.5 inches per second and operates with a whisper-quiet motor (45db).



*Image 3: The control panel, featuring buttons for height adjustment and memory presets.*

### 5.2. Memory Presets

The desk features three programmable height memory presets:

1. Adjust the desk to your desired height using the Up/Down arrows.
2. Press the **'M'** button. The display will show **'S-'**.
3. Press one of the number buttons (**'1'**, **'2'**, or **'3'**) to save the current height to that preset.
4. To recall a saved height, simply press the corresponding number button.

### 5.3. Anti-Collision System



The desk is equipped with an anti-collision system that automatically stops movement if an obstruction is detected during adjustment, preventing damage to the desk or objects.

#### 5.4. Cable Management

Utilize the integrated cable management system and sticky cable ties to keep your workspace organized and clutter-free.



*Image 4: Integrated cable management system, designed to keep cables tidy and out of sight.*

#### 6. MAINTENANCE

- **Cleaning:** Wipe the desktop and frame with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals.
- **Regular Checks:** Periodically check all screws and connections to ensure they remain tight and secure.
- **Cable Management:** Ensure cables are neatly managed and not interfering with the desk's movement.

#### 7. TROUBLESHOOTING

### 7.1. Resetting the Desk

If the desk is not functioning correctly or displaying an error code, a reset may resolve the issue:

1. Turn off the power to the desk at the wall outlet.
2. Wait for approximately 10 seconds for the system to completely power down.
3. Turn the power back on at the wall outlet.
4. Press and hold the **Down Arrow (▼)** button until the desk reaches its lowest height.
5. Continue holding the **Down Arrow (▼)** button until the display shows 'RST' or 'reset'. The desk will briefly move up and down, then display its lowest height (e.g., 73.0).
6. The desk is now reset and ready for use.

For other issues, please refer to the support section or contact customer service.

### 8. SPECIFICATIONS

Feature	Detail
Brand	Desky
Model Number	7964320923970
Product Dimensions	29.53"D x 55"W x 37"H (Note: This appears to be a general dimension, actual desktop size is 70.9 x 29.5 in)
Desktop Size (Current Variant)	70.9 x 29.5 inches
Color	Black / Grey
Minimum Height	28.7 inches
Maximum Height	48.4 inches
Maximum Weight Recommendation	176.4 lbs (80 kg)
Base Material	Alloy Steel
Finish Type	Laminate Decorative Surface
Motor Type	Single Motor (Top-mounted for smooth power)
Noise Level	45db (Whisper Quiet Operation)
Special Features	3-Stage Frame Design, 4 Height Memory Presets, Adjustable Height, Anti-Collision System, BIFMA Compliant, Dual Motor Lifting System (Note: Product title indicates 'Single Sit Stand Desk', but features mention 'Dual Motor Lifting System'. Please refer to product packaging for definitive motor configuration.), Ergonomically Suited for 95% of Users, Leading Stability and Strength, Tool Free Installation, Whisper Quiet Operation.
Assembly Required	Yes

# Say Hello To A More Productive Day.

Adjust your height between 28.7" - 48.4"



Image 5: Visual representation of the desk's adjustable height range, from 28.7" to 48.4".





*Image 6: Demonstration of the desk's robust lifting capacity, supporting up to 176 lbs and tested for durability.*

## 9. WARRANTY AND SUPPORT

### 9.1. Warranty Information

Your Desky Single Sit Stand Desk comes with a **3-year supplier warranty**, covering manufacturing defects and malfunctions under normal use conditions.

### 9.2. Customer Support

For any questions, technical assistance, or warranty claims, please contact Desky customer support through their official website or the retailer where the product was purchased.

Visit [desky.com.au](https://desky.com.au) for more information and additional resources.